

7-TROUBLE SHOOTING

Symptoms	Possible Problem	Solution
No Function Light and/or No Sound	1.Electrical cord is not connected	Insert the plug into electric outlet
	2.Speaker power button is not turned on	Turn on the power switch
	3.Volume is not loud	Long press CH+ to increase the volume
Function Light on but No Sound	1.Media cables are not connected correctly	Turn off the power, check the input cables to ensure proper audio cables are connected to relevant input plugs
	2.Audio signal is not transmitted to Speaker	Check all audio input signals to the speaker

If the problem still exists, please refer to the appointed service agent or professional technician to fix it.
Do not attempt to open the speaker cover as this will void the Speaker Warranty.

WARNING



The exclamation mark inside an equilateral triangle is intended to alert user of the presence of the important operating and maintenance (servicing) instructions in the literature accompanying the product.
The lightning flash with arrowhead symbol inside an equilateral triangle is intended to alert User of the presence of un-insulated "hazardous voltage" within the product's enclosure, which may be of sufficient magnitude to induce a risk of electric shock to persons.
NOTES:
Please do not attempt to open the back cover or power adapter as opening or removing the covers may expose you to dangerous voltage or other hazards, and it will also cause the restricted servicing to be disabled: There are no user servicing components inside.

Package Contents:


- 1 Speaker
- 1 Remote control
- 1 Wired mic
- 1 Power cable
- 1 Aux cable
- 1 User Manual

* Product may differ slightly from picture shown
* Specifications are subject to change without notice.
* All Trademarks and trade names belong to their respective owners.



USER MANUAL

RECHARGEABLE PORTABLE SPEAKER

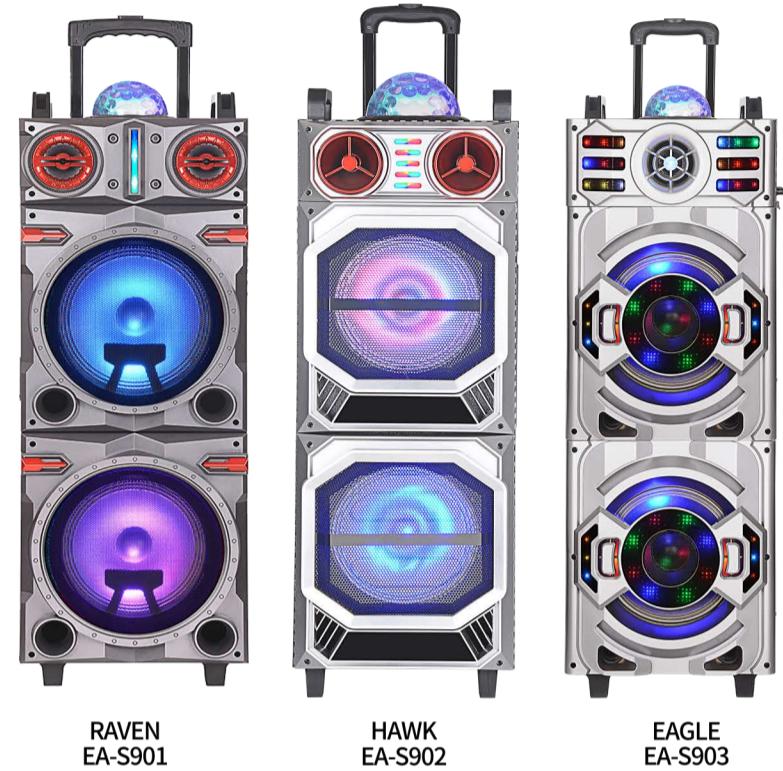

RAVEN
EA-S901

HAWK
EA-S902

EAGLE
EA-S903

PLEASE READ THIS USER MANUAL COMPLETELY BEFORE OPERATION THIS UNIT AND RETAIN THIS BOOKLET FOR FUTURE REFERENCE
AC110-220V 50/60Hz
MADE IN CHINA


1-IMPORTANT SAFETY MEASURES

Before using this machine, please read all the safety and operating instruction, meanwhile, please observe all the indications about safe operating, these safety and operating instructions should be kept in condition of construction.




1. Protection of electric power supply line: Be aware that the electric power supply line is not tramped, pressed by heavy objects. Pay special attention to the plug of power supply line and outlet on the machine. DO NOT lengthen the electric shock, DO NOT pull or drag or the power supply line.
2. Ventilation: This set must be put in ventilated place. DO NOT put disk on it or cloth to cover it. The distance away from the wall should not be less than 10 centimeters. DO NOT put this set on the bed, sofa, carpet or other objects with similar surface in case of good ventilation.
3. Casing Dismantling: DO NOT dismantle the casing. If one touches the inner components, he will probably get serious electric shock. Attention: This set applies to AC 100V~240V/50Hz~60Hz power supply. Use standard power supply. Pls be sure for the correct power supply before use it.

2-CONTROL PANEL FUNCTIONS

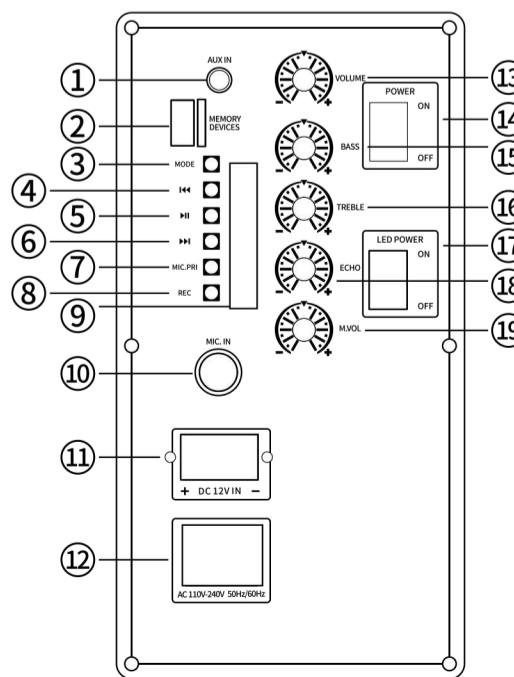

1. AUX IN;
2. MEMORY DEVICES;
3. MODE;
4. PREV;
5. PAUSE/PLAY;
6. NEXT;
7. MIC.PRI;
8. REC;
9. LED DISPLAY;
10. MIC.IN;
11. DC 12V IN;
12. AC 110V-240V 50Hz/60Hz;
13. VOLUME;
14. POWER;
15. BASS;
16. TREBLE;
17. LED POWER;
18. ECHO;
19. M.WOL;

3-REMOTE CONTROL FUNCTIONS

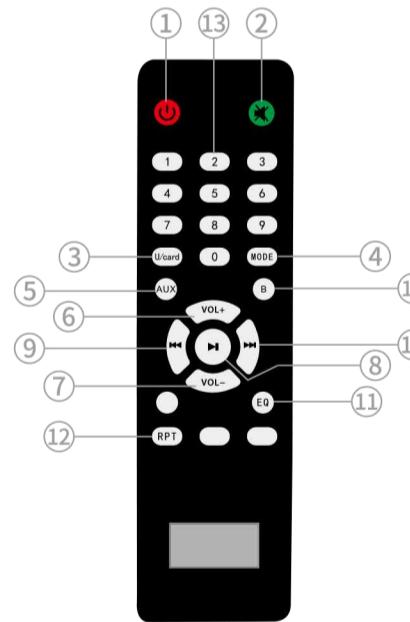

1. Power ON/OFF
2. Mute
3. Memory card music play mode input
4. Mode transfer
5. Press for Aux input mode
6. Control the music increase volume
7. Control the music reduce volume
8. Press for Play/Pause, in FM mode
9. Press for previous music
10. Press for next music, in FM mode
11. Press for band Equalizer mode selection.
12. Press for setup replay song
13. Numbers
14. Press for wireless connect selection

4-WIRED MICROPHONE INSTRUCTIONS

- 1-Plug in the wired microphone (included).
- 2-Adjust the microphone volume knob MIC VOL for proper volume.
- 3-Adjust the echo depth to the proper position.
- 4-Now you can start using your microphone.

5-WIRELESS CONNECTION

You can connect your compatible wireless devices such as a cellphone, computer etc., to listen to your audio tracks from this speaker.
Press the MODE button on the speaker, or press the MODE button on the remote control to enter wireless mode, indicated on the LED display.

6-CHARGING THE SPEAKER

- 1-Full recharge takes 8-12 hours
- 2-Please use the supplied charging cable to charge the speaker.
- 3-When you are using your unit while it is plugged to an external power source, be sure the battery switch is ON.
- 4-To protect the lifespan of the built-in battery, be sure to fully charge your unit on the same day the battery runs out.

Not charging your unit right away can affect the performance of the battery.

FCC Warning Statement

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- - Reorient or relocate the receiving antenna.
- - Increase the separation between the equipment and receiver.
- - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- - Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

The device has been evaluated to meet general RF exposure requirement.