

Control Stick

Control Stick

Power Switch

**USE 2 X 1.5V "AA" BATTERIES
(NOT INCLUDED)**

	Forward	Press both control sticks forward.
	Backward	Press both control sticks backward.
	Spin/Steer	Spin/Steer the vehicle by pressing and holding the control sticks in opposite directions.
	Forward	Press both control sticks backward.
	Backward	Press both control sticks forward.
	Spin/Steer	Spin/Steer the vehicle by pressing and holding the control sticks in opposite directions.

1. Rechargeable batteries are to be removed from the toy before being charged.
2. Rechargeable batteries are only to be charged under adult supervision.
3. Non-rechargeable batteries are not to be recharged.
4. Different types of batteries or new and used batteries are not to be mixed.
5. Only batteries of the same or equivalent type as recommended are to be used.
6. Batteries are to be inserted with the correct polarity.
7. Exhausted batteries are to be removed from the toy.
8. The supply terminals are not to be short-circuited.
9. Do not touch wheels or tires when they are in motion.
10. Do not collide with humans or any animals to avoid accident from occurring.

- Packaging has to be kept since it contains important information.
- **WARNING!** Not suitable for children under 36 months. **CHOKING HAZARD**
- Where applicable, remove all packaging before giving this item to your child.
- Contents may vary in style, colour, shape and decoration from images shown on package or in advertising.

تحذير: مخاطر الاختناق أجزاء صغيرة غير مناسبة
للأطفال دون سن الثالثة

WARNING:
CHOKING HAZARD - Small parts
not suitable for children under
3 years

معلومات للمعلم
 يرجى الاطلاع على هذه المعلومات الرجوع لها في الصفحات:
 1- ملخص أو ملخصات لأطفال تحت سن 14 حسب عدد بطون الفصح المصنوعة
 2- ملخص الأثار ومشكلات عن الأثار المفقودة
 3- ملخص ورمز (إذا التفتد) كذا فإن أسماء هذا العالم الملتك
 مصنوعة في الصين
 4- ملخص الملتك، بما أنه يحتوي على معلومات عامة.



MADE IN CHINA

DHTRC10214G