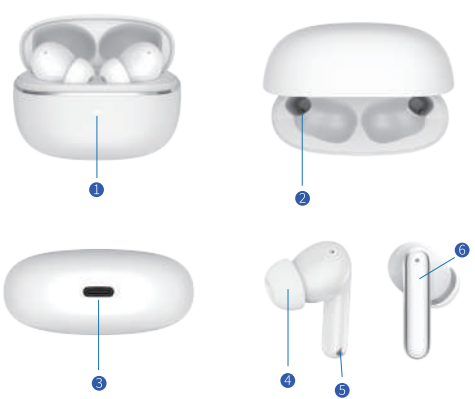


风琴折： 75mm×75mm

TWS XY-17 功能操作说明	产品示意图  ①指示灯 ②充电顶针 ③Type-c充电口 ④耳帽 ⑤充电触点 ⑥触控区域	产品参数 ·型 号:XY-17 ·蓝牙版本:V5.3+EDR ·耳机电池容量:30mAh ·充电仓电池容量:400mAh ·电源输入:5V ·待机时间:约44g ·工作时间:约4小时（最大音量） ·工作电压:3.3V-4.2V ·充电时长:70分钟 ·喇叭阻抗:F13/32欧 ·频率响应:20-20KHZ ·传输距离:10米以上 产品包装明细 ·蓝牙耳机本体（2PCS） ·耳机储电仓 ·Type-c充电线 ·使用说明书 ·精美包装盒 ·耳帽（3对） 	产品使用方法 1.开机 自动开机（第一次使用） 步骤一：打开充电仓上盖。 步骤二：拿出耳机，此时耳机自动开机匹配，等待连接手机 手动开机 耳机不在充电仓里并且耳机是关机的状态，长按左右耳机5秒开机 2.关机 耳机自动关机 步骤一：使用后，将耳机从耳朵上拿下来。 步骤二：将左右耳机放入充电仓，关上充电仓上盖，会自动关机并充电。 手动关机 步骤一：如果耳机处于开机并且相互连接状态，单击任意一只耳机4秒关机。 步骤二：将左右耳机放入充电仓，关上充电仓上盖关机并充电。 3.蓝牙配对 步骤一：将耳机从充电仓拿出来。 步骤二：将手机蓝牙打开。 步骤三：找到耳机蓝牙名XY-17。 步骤四：点击连接，连接成功后语音提醒。	注意：如果已有配对设备信息，耳机会在2-4S内自动回连设备；若未连接到设备，耳机待机5分钟后自动关机。 4.耳机使用操作 A 接听/挂断： 单击任意一只耳机一次接听/挂断电话。 长按任意一只耳机1.5S为拒绝接听电话。 B 暂停/播放： 音乐播放过程中单击任意一只耳机即可暂停/播放音乐。 C 上一曲/下一曲： 音乐播放过程中双击左边耳机即可完成上一曲操作。 音乐播放过程中双击右边耳机即可完成下一曲操作。 D 音量加减： 点击三下左边耳机可提高音量。 点击三下右边耳机可减弱音量。 E 唤醒语音助手： 长按1.5秒唤醒SIRI。	使用注意事项 ① 耳机需存放在干燥通风的环境下，避免与油、水汽、蒸触，以免影响产品性能。 ② 避免使用刺激的，有机溶剂或含有这些成份的物品清洁。 ③ 耳机需按正确规范要求使用，注意使用环境对耳机的影响，为保证连接顺畅，建议手机和耳机之间的距离在10米范围内。 ④ 如耳机有连接不上或通讯不畅等其他问题，请勿私自拆卸耳机本体及其配件否则不予保修。 ⑤ 给耳机充电，请选用标配的车载充电器或本公司指定的符合要求的充电器。 ⑥ 为保证您正常使用耳机，请确保耳机的电量充足。	FCC警告 本设备符合FCC规则第15部分。操作需要满足以下两个条件： (1)本设备不得造成有害干扰;(2)本设备必须接受接收到的任何干扰，包括可能导致不正常操作的干扰。 注1:根据FCC规则第15部分，本设备已经过测试，符合B类数字设备的限制。这些限制是为了在住宅装置中提供合理的保护，防止有害干扰。本设备产生、使用并能辐射射频能量，如果不按照说明书安装和使用，可能会对无线电通信造成有害干扰。但是，不能保证在特定的安装中不会发生干扰。如果本设备确实对无线电或电视接收造成有害干扰，可以通过关闭和打开设备来确定，则鼓励用户尝试通过以下一种或多种措施来纠正干扰:重新定位或重新安置接收天线。 (1)增加设备与接收机之间的距离。 (2)将设备连接到与接收器连接的电路不同的插座上。 (3)向经销商或有经验的广播/电视技术人员寻求帮助。 注2:未经合规责任方明确批准，对本设备的任何更改或修改都可能使用户失去操作设备的权力。 该装置已经过评估，可满足一般射频暴露要求。本装置可在便携式暴露条件下使用，不受任何限制。
--	---	---	---	---	--	--

TWS XY-17 Function Instructions	Diagrammatic Sketch  ①Light ②Charging ejector ③Type-c interface ④Ear cap ⑤Charging contacts ⑥Touch area	Specifications ·Model: XY-17 ·Bluetooth version: V5.3+EDR ·Earbud battery:30mAh ·Charging case battery:400mAh ·Power input:5V ·Product weight: about 44g ·Working time:≈4 hours (maximum volume) ·Working voltage: 3.3V-4.2V ·Charging time: 70 minutes ·Speaker impedance: F13/32Ω ·Frequency response: 20-20KHZ ·Transmission distance:over 10 meters Package List ·Bluetooth headset（2PCS） ·Earphone Charging box ·Type-c charging cable ·User's manual ·Gift package ·Earphone caps (3 pairs) 	How to use 1. The boot Automatic startup (first use) Step 1: Open the top cover of the charging bin. Step 2: Take out the earphone. At this time, the earphone will start up automatically and wait to connect the phone. Manual boot The earphone is not in the charging bin and the earphone is off. Press left and right for 5 seconds to start the earphone. 2. To turn it off Automatic earphone shutdown Step 1: Remove the earphones from your ears after use. Step 2: Put the left and right earphones into the charging bin,close the cover of the charging bin,and it will automatically shut down and charging. Manually turn it off Step 1: If the earphones are turned on and connected to each other, click either ear The machine shuts down in 4 seconds. Step 2: Put the left and right earphones into the charging bin, close the cover of the charging bin, shut down and charge. 3. Bluetooth pairing Step 1: Take the earphones out of the charging bin. Step 2: Turn on bluetooth. Step 3: Find the headset bluetooth name XY-17. Step 4: Click Connect, voice reminder after successful connection.	Note:If there is pairing device information,the headset will automatically connect to the device within 2-4s. If the headset is not connected to the device,The headset automatically turns off after 5 minutes of standby. 4. Operation of earphone A Answer/Hang up: Click any headset to answer/end the call. Hold down either earphone for 1.5 seconds to refuse to answer the call. B Pause/play: Click either earphone to pause or play the music. C Previous/next: During the music playing, double click the left earphone to complete the operation of the previous song. Double-click the headset on the right during the music playing to complete the next song operation. D Volume increase and decrease: Tap the left earphone three times to increase the volume. Click the right earphone three times to reduce the volume. E Wake up the voice assistant: Press and hold for 1.5 seconds to wake up SIRI.	Precautions for use ① Headphones should be stored in a dry and ventilated environment to avoid contact with oil, water vapor and steam.In order to avoid affecting product performance. ② Avoid cleaning with irritating, organic solvents or materials contain- ing these ingredients. ③ The headset should be used according to the correct specification requirements,and pay attention to the influence of the using environment on the headset. To ensure smooth connection, it is recommended that the distance between the mobile phone and the earphone be within 10 meters. ④ If the earphone fails to connect or communicate properly, do not remove the earphone without permission The machine body and its accessories are not guaranteed otherwise. ⑤ To charge the earphone, please use the standard car charger or the one specified by our company Chargers required. ⑥ To ensure normal use of the earphone, ensure that the power of the earphone is sufficient.	FCC Warning This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. NOTE 1: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: (1) Reorient or relocate the receiving antenna. (2) Increase the separation between the equipment and receiver. (3) Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. -Consult the dealer or an experienced radio/TV technician for help. NOTE 2: Any changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.
---	---	--	---	--	--	--