


85*125mm 材质及工艺：128g 铜版纸双面印刷 风琴折

注：四色印刷

acer

 
WIRELESS GAMING HEADSET

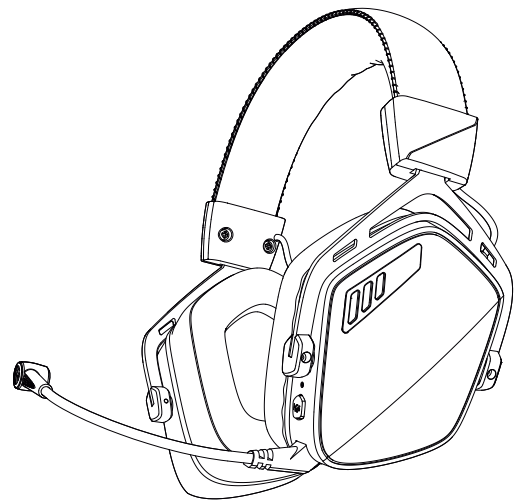


MODEL:HG02

Package Contents

ACER Wireless Gaming Headset

 
2.4GHz Wireless Transmitter

User Manual

3.5mm Audio Cable

USB Type-C Charging Cable


Overview

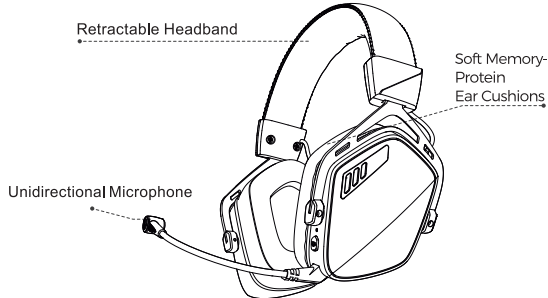

Retractable Headband

Soft Memory-Protein Ear Cushions

Unidirectional Microphone

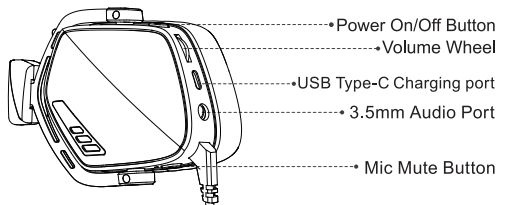

→Power On/Off Button

→Volume Wheel

→USB Type-C Charging port

→3.5mm Audio Port

→Mic Mute Button

Power ON/OFF

1s 

 Hold on 2s

 1s

 Hold on 2s → Power Off

MIC ON/OFF


ON  Press once

OFF  Press once

ON  OFF 


Note: On the wired mode, the microphone mute function does not work.

Wireless Mode Usage

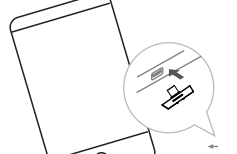

→Power On

 Hold on 5s



Successful  Always on

Failure  Fast flashing

 


Successful  Always on

Failure  Fast flashing

Note: Press and hold the power on button for more than 5 seconds , release your finger when you hear **Power On** and **Pairing**


Successfully connected:



10 seconds on for 1 second

This feature only takes effect in wireless mode

Headset Charging

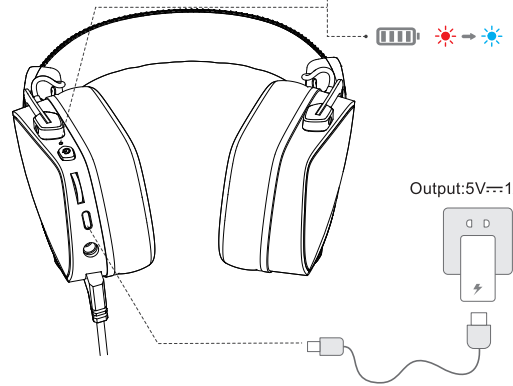

Red LED

Output:5V=1A

Note

1.If your headset is disconnected from your devices and no operation is performed for 10 minutes , your headset will turn off automatically.

2.Insert the 3.5mm audio cable, then the headset turns off and enters the wired mode.


3.Low Battery Reminder: When you hear the low battery tone "battery low" and the red light flashes, please charge the headset in time.

4.Bluetooth and 2.4GHz modes will not work during the charging process.


Device	Wireless			Wired		
	Sound	Mic	Mic Mute	Sound	Mic	Mic Mute
PC						
PS5/PS4 Console						
Xbox Series X Console						
PS5/PS4 Controller						
Xbox Series X Controller						
Switch						
Cell phone (3.5mm)						
Tablet (3.5mm)						

Radiation Exposure Statement
The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

① Using with PC/Mac in Wireless Mode

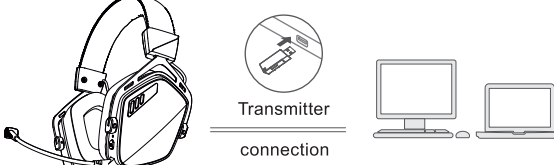


Transmitter connection

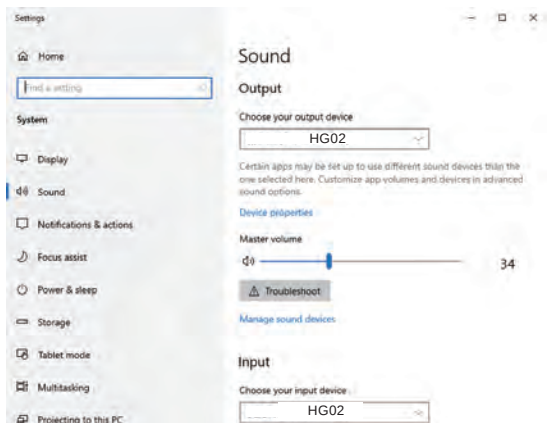

1.Open Sound settings


2.Choose your output device

② Using with PS4/PS5 Controller in Wired Mode

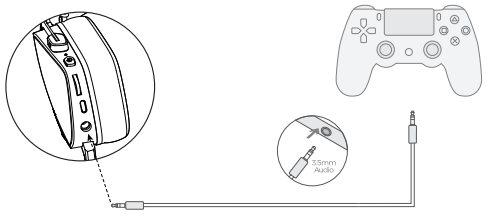

PS4/PS5 Controller


Using with PS4/PS5 Console in Wireless Mode

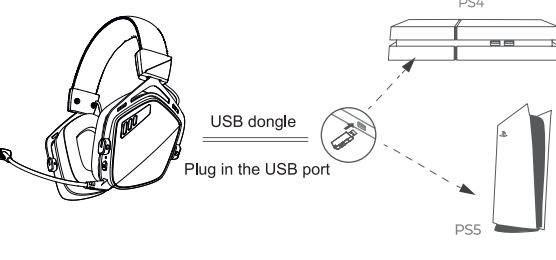

Route: Settings → Devices → Audio Devices


Set 'HG02' as Input Device & Output Device

③ Using with Xbox Controller in Wired Mode

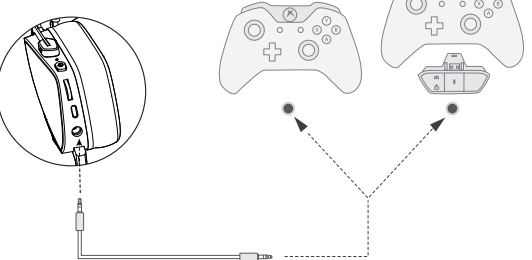

Note: Wireless mode is not available for Xbox.

④ Using with Phone on Bluetooth Mode

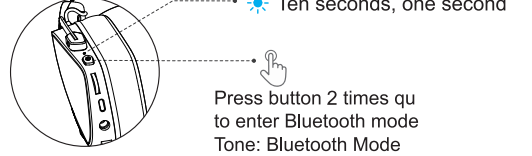

Ten seconds, one second

Press button 2 times qu to enter Bluetooth mode

Tone: Bluetooth Mode

Note: Frequent switching of modes will cause the headset connection to slow down.

Specifications

Model.....HG02

Headset battery capacity.....Lithium battery 3.7V/1200mA

BT Pattern Working time.....about 110 hours(70%volume LED OFF)

Charging time.....about 4 hours

Standby time.....about 200 hours

Input charging standard.....USB Type-C,DC5V/1A

Frequency response.....20Hz - 20KHz

Sensitivity.....102±3dB@1KHz

MIC sensitivity.....-38±3dB@1KHz(Unidirectional)

Wireless Range.....Up to 32 feet

No delay mode wierless

No delay mode connection, support Type-C interface and USB interface of the device.

Charging and Working Time

1.Please charge the headset with 5V/1A standard adapter or via the USB port of PC;

2.Generally,it takes 4 hours to fully charge the headset, but actual the charging time may vary according to different charging devices;

The Microphone can not Work

Wireless mode:

1.Check whether you've set the headset as the default recording device;

2.Check if the microphone has been turned off.

Wired mode:

1.Make sure the line-in cable has been connected tightly;

2.please use a converter cable while connecting with PC.

No Sound or Intermittent Sound from the Headset

1.Check if there are other obstacles which affect the transmitter;

2.If intermittent sound occurs when you are communicating,check whether the network of your device works smoothly;

3.Check whether you've set the headset as the default recording device;

4.Check whether the headset is in lowest volume setting.

Can't Connect to Devices

1.Check whether you used a USB Extension Cable or USB Hub.It is not recommended.

2.Plug directly into the USB jack of the devices host.

3.Try to Replace a USB jack .(Some USB jacks may be power shortage)

4.For PC, it is recommended to plug into the USB jack at the back of the host.

5.For PC ,press and hold the power on button for more than 5 seconds (the red and blue light flashes to enter the search), and then release the button when you hear Power On and Pairing.

We can't meet all our customers' expectations, but we try to meet it.

FCC STATEMENT

1. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) This device may not cause harmful interference, and
(2) This device must accept any interference received, including interference that may cause undesired operation.

2. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
Reorient or relocate the receiving antenna.
Increase the separation between the equipment and receiver.
Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
Consult the dealer or an experienced radio/TV technician for help.