

QUICK START

FUYL Tower 15



VIDEO INSTRUCTIONS:

<https://vimeo.com/288109115>

Visit our website for detailed instructions.

www.lockncharge.com/support (International)

www.pclocs.com.au/support (AUS and NZ)

 
What's required?



x2



x4



x1



x1



x1



x3




pclocs





lockncharge

1

INSTALL TOWER FEET

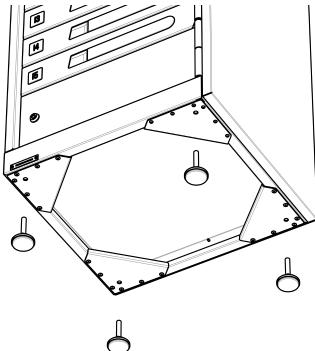

OPTIONAL: FITTING WINDOW COVER

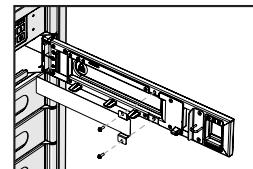
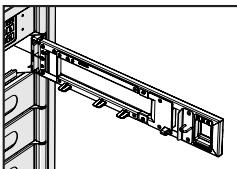
**2**

FIX TOWER TO THE WALL





MANDATORY

Fix FUYL Tower to the wall using the supplied bracket

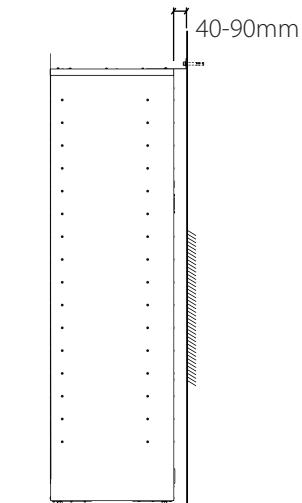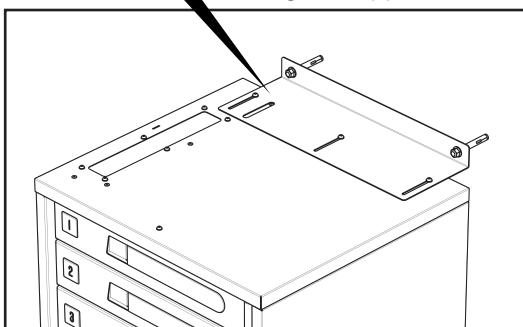
**3**

CONNECT ETHERNET CABLE

NOTE: This step is not required if you have decided to not connect your Tower to the Cloud.

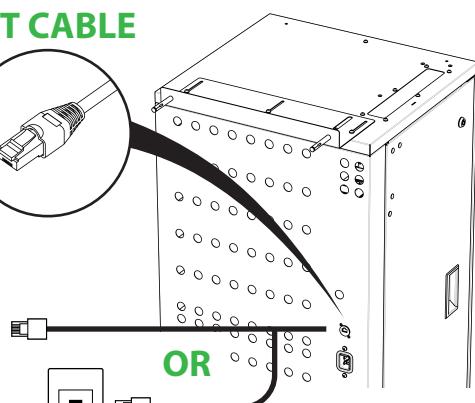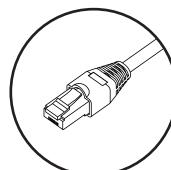**OR**

4 CONNECT TO POWER

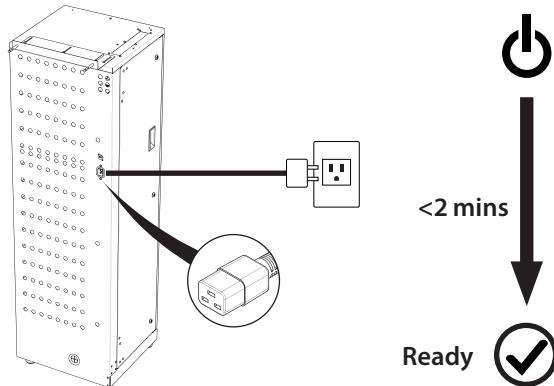


5 FIREWALL AND PROXY

Ensure that your network firewall or proxy is not blocking outgoing connections to the endpoints listed. Please contact your network administrator if you are unsure of any changes to your network configuration that may be required.

Address	Port	Protocol
registry.pclocs.io	TCP 443	https
a136cfw17adicb-ats.iot.us-west-2.amazonaws.com	TCP 8883	mqtt
time1.google.com	UDP 123	ntp
time2.google.com	UDP 123	ntp
time3.google.com	UDP 123	ntp
time4.google.com	UDP 123	ntp

6 RETRIEVE LOCAL HOST ADDRESS

Note: If you have powered on your Tower before connecting the ethernet cable to your laptop or port, restart from the Towers display after connecting an ethernet cable.

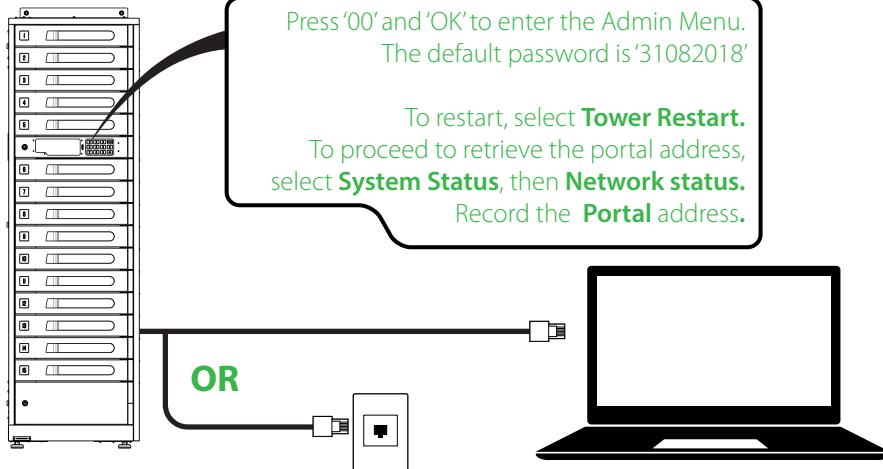

7 ONBOARD TOWER TO YOUR ACCOUNT



Open browser and type the **Portal address** (local host).

Username: admin

Password: 31082018

NOTE: Some browsers will report security warnings. The security warnings appear because the FUYL Tower has generated a self-signed certificate to secure your connection. It should be safe to proceed because it is a temporary connection to the local host on the FUYL Tower.

Your Account code should have been sent to you via email on sign up.

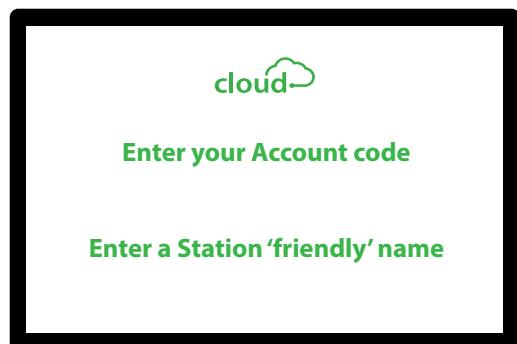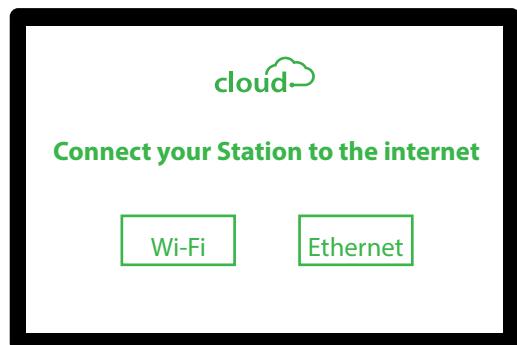

8 LOGIN TO THE CLOUD PORTAL WITH YOUR ACCOUNT

