

QUICK START

FUYL Tower 5



VIDEO INSTRUCTIONS:

<https://vimeo.com/339043097>

Visit our website for detailed instructions.

www.lockncharge.com/support (International)

www.pclocs.com.au/support (AUS and NZ)

What's required?



x1




x1




x1

1 CONNECT ETHERNET CABLE




NOTE: This step is not required if you have decided to not connect your Tower to the Cloud.

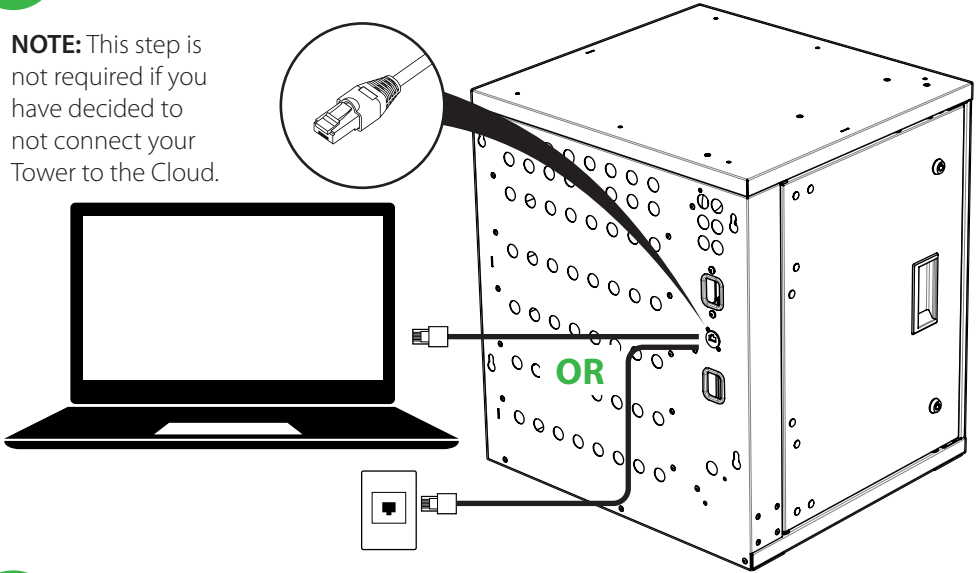

2 CONNECT TO POWER

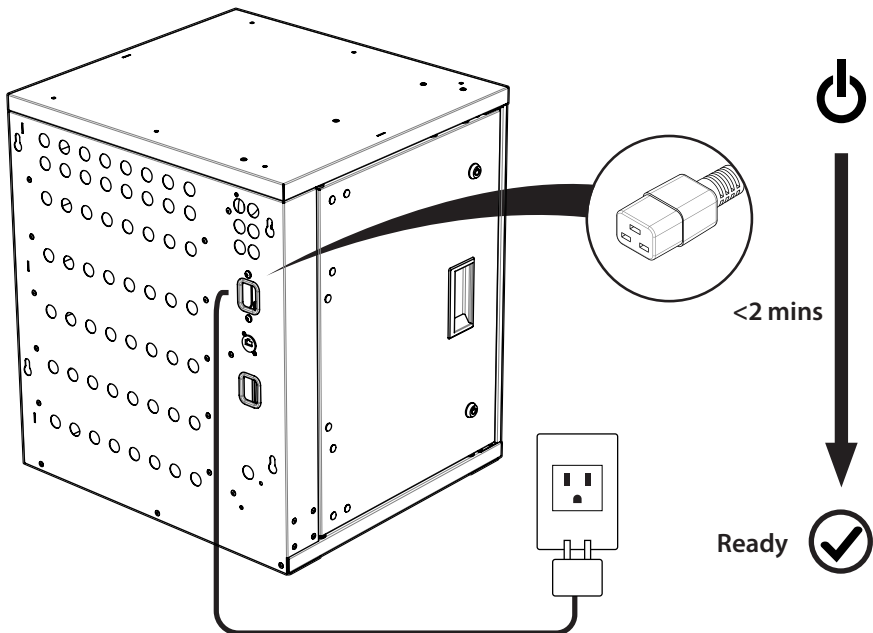

OPTIONAL: FITTING WINDOW COVER

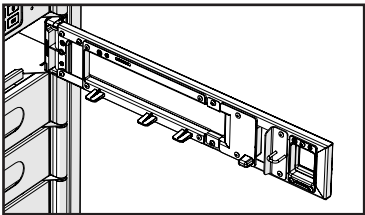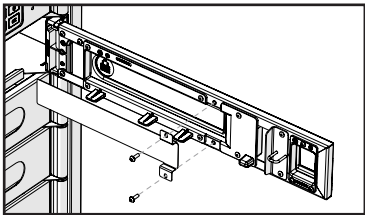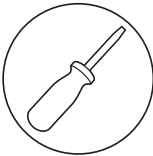

3 FIREWALL AND PROXY

Ensure that your network firewall or proxy is not blocking outgoing connections to the endpoints listed. Please contact your network administrator if you are unsure of any changes to your network configuration that may be required.



Address	Port	Protocol
registry.pclocs.io	TCP 443	https
a136cfw17adibc-atl.iot.us-west-2.amazonaws.com	TCP 8883	mqtt
time1.google.com	UDP 123	ntp
time2.google.com	UDP 123	ntp
time3.google.com	UDP 123	ntp
time4.google.com	UDP 123	ntp

4 RETRIEVE LOCAL HOST ADDRESS

Note: If you have powered on your Tower before connecting the ethernet cable to your laptop or port, restart from the Towers display after connecting an ethernet cable.

Press '00' and 'OK' to enter the Admin Menu.
The default password is '31082018'

 To restart, select **Tower Restart**.
To proceed to retrieve the portal address, select **System Status**, then **Network status**.
Record the **Portal** address.

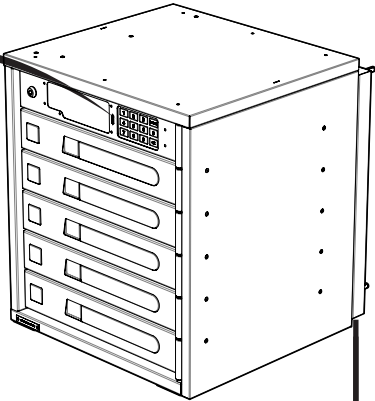

5

ONBOARD TOWER TO YOUR ACCOUNT



Open browser and type the
Portal address (local host).

Username: admin

Password: 31082018

NOTE: Some browsers will report security warnings. The security warnings appear because the FUYL Tower has generated a self-signed certificate to secure your connection. It should be safe to proceed because it is a temporary connection to the local host on the FUYL Tower.

Your Account code should have been sent to you via email on sign up.

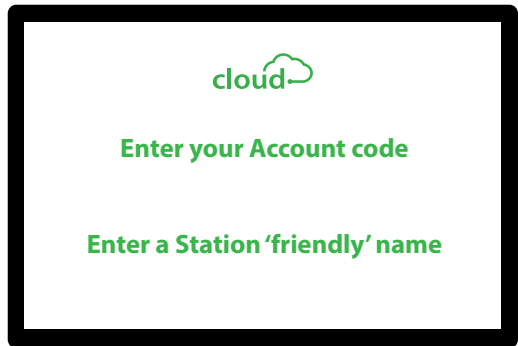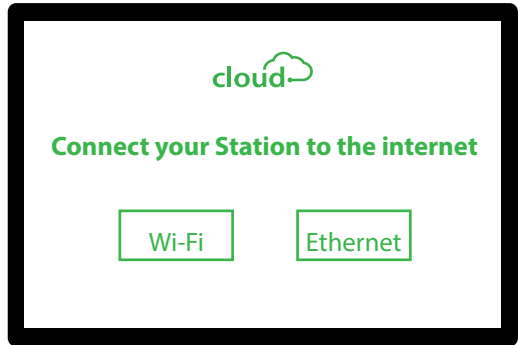

6

LOGIN TO THE CLOUD PORTAL WITH YOUR ACCOUNT



pclocs



lockncharge

www.lockncharge.com (International)
www.pclocs.com.au (Australia and New Zealand)