


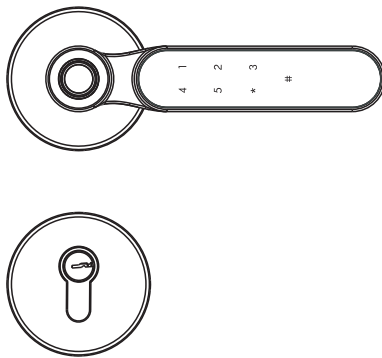

S2
(Tuya BT)

Smart Lock User Manual

Please read this manual carefully before use

V1.1

Usage Notice

Note: Please prepare a Phillips screw driver and 4pcs AAA batteries before installation.


1. In default setting, it can be unlocked with original password 12345 ended with "#", any fingerprint or mechanical key.
2. There will be a low power alarm when voltage below 4.8V, please replace the new AAA batteries in time.
3. Please don't use any corrodent material to clean lock surface.
4. Please use mechanical key to unlock when password and APP not work. Make sure your mechanical keys kept in outdoors safe places.
5. Suitable door thickness: 35 ~ 55mm.
6. Work temperature: -25°C~ 55°C.

Features

1. The total capacity of system is 100, the fingerprint capacity is 50, the password capacity is 50, the first two are administrators.
2. Touching button, durable.
3. Support volume adjustment(Mute/Low/High) and low power alarm.
4. Support 6-8 password and 10 virtual passwords.

Name	Parameter
Fingerprint Sensor	semiconductor
DPI	500
Identify Time	0.3S
Unlock Way	Fingerprint, Password, Key and APP
System Capacity	100
Supply Voltage	6V
Low Voltage Alarm	4.8V
Standby Current	<=90uA

Installation Overview

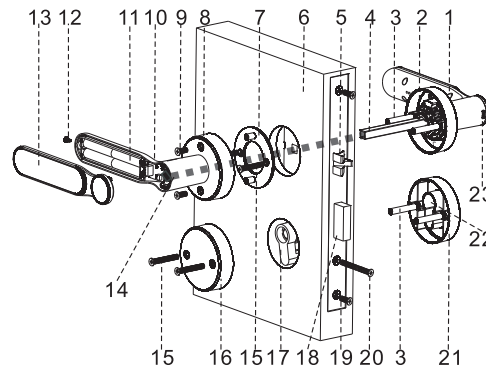

- | | |
|----------------------------------|---------------------------------------|
| 1. Front Panel | 13. Battery Cover |
| 2. Direction Dot | 14. Connection Wire |
| 3. Connection Column | 15. Connection Column Screws(M4*35mm) |
| 4. Square Steel | 16. Lock Cylinder Back Cover |
| 5. Latch-Bolt | 17. Lock Cylinder |
| 6. Door | 18. Dead-Bolt |
| 7. Iron Plate | 19. Lock Body Screws |
| 8. Back Panel | 20. Lock Cylinder Screws |
| 9. Back Panel Screws(M4*10mm) | 21. Lock Cylinder Front Cover |
| 10. 'SET' Button | 22. Connection Column Screws |
| 11. Battery | 23. Key Hole |
| 12. Battery Cover Screws(M3*6mm) | 24. Emergency Power Port |

Installation

1. Installation Instructions

- a. It is recommended professionals to install with reference installation video.
- b. While installing, the door must be in half-open state until the commissioning is completed.
- c. While installing the front panel, the connection wire interface should be passed through the square steel hole of the lock body slowly to avoid the damage of the connection wire interface.
- d. After the installation is completed, check the password`12345#` fingerprint, APP, key unlock, handle twist ok or not.
- e. If it can not work normally, please check if any improper installation or problem of power cord loose.

2. Open Hole


Please refer to the open hole drawing, and drill right holes on the door.

3. Remove The Back Panel

Remove the back panel, remove the battery cover, remove the back panel screws(M4*10mm)(2pcs), remove the iron plate.

4. Confirm The Direction of The Door

This smart lock is suitable for 4 kinds of opening directions.
(Left Out/Left In/Right Out/Right In)

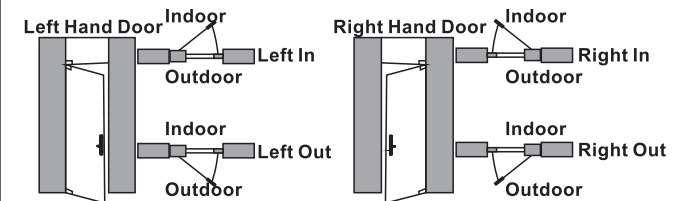

5. Install Lock Body


- 5.1. Choose the installation direction of the latch-bolt of the lock body by the door opening directions.



- 5.2. Change the direction of lock body

- a. Push the reversing block to the other side.
- b. Push the latch-bolt into the lock and turn 180 degrees.
- c. Put back the reversing block, and the latch-bolt will pop up automatically.

- 6.3. Put the lock body into the door frame and tighten 4 fixing screws.

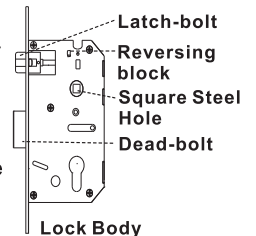


5. Lock Installation


5.1 Fixing The Front Panel

- Fix 2 connection columns.
- Rotate the square steel and let the direction dot face up.
 - Left open: the dot face 'L'.**
 - Right open: the dot face 'R'.**
- Make the connection wire go through the square steel hole.
- Make the connection column and the square steel match with the correct holes on lock body, fix the front panel on the outdoors.
- Make the square steel in the middle of the iron plate.**
- Fix 2 connection column screws (M4*35mm).

The Direction dot face up.

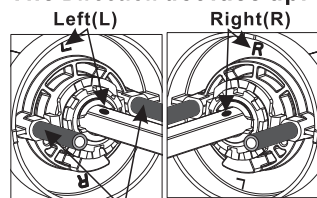


Connection Column
Square Steel Iron Plate

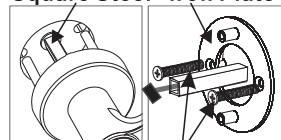

Connection Column Screws


5.2 Fixing The Back Panel

- Make the connection wire go through the square steel hole on the back panel.
- Fix the back panel with 2 back panel screws (M4*10mm).
- Shake the handles and make sure them installed well.
- Connect well the connection wire with the corresponding interface of the back panel.
- Install 4 AAA batteries.
- Install the battery cover.
- Fix the battery cover screw (M3*6mm).

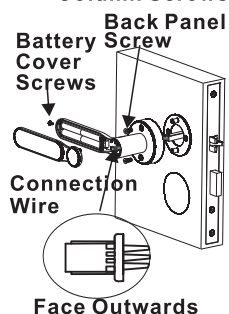


5.3 Fixing The Lock Cylinder and The Lock Cylinder Cover

- The key hole of the lock cylinder is placed in the lock body by the front panel end.
- Adjust the position of the lock cylinder so that the lock cylinder screw is aligned with the screw hole, and tighten the screw.
- Shake the lock cylinder to ensure that the lock cylinder is securely fastened.
- Fix 2 connection columns.
- Install the lock cylinder front cover and the lock cylinder back cover.
- Fix 2 connection column screws (M4*35mm).

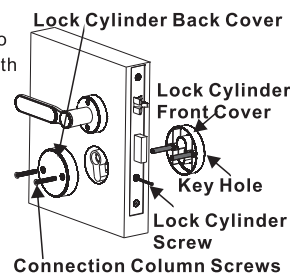

Connection Column Screws

6. Install Buckle Plate and Buckle Box

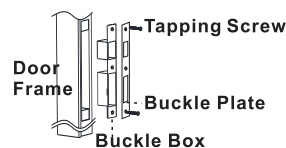

7. Commissioning

- Please always keep the door in half-open status when commissioning.
- Check the following function can be achieved or not.
 - *Press down the front handle, latch-bolt/dead-bolt remains in locking status.
 - *Press down the front handle, latch-bolt/dead-bolt retract in unlocking status.
 - *Lift up the front and back handle, dead-bolt stretches out in any status.
- Verify other function includes Self-lock, Anti-peeping password, "Set" button, APP work well or not.

Using The Lock

Add Administrator (The first two are administrators, the first is password)

- Long press '#' or short press 'SET' button (on the back panel).
- Add administrator password (6-8 digits) ended with # (The same password, 2 times)
- The voice prompts 'successful', then we can continue to add the 2nd administrator.
- Add administrator's fingerprint (8 times), or password (6-8 numbers) ended with '#' (the same password, 2 times).

Notes:

- In order to improve the fingerprint recognition rate, the same finger should be pressed 8 times on different parts of the finger until the whole fingerprint and the outer ring have been collected.**
- the passwords can only be combined between the numbers 1 and 5.**



Add User

- Long press '#' or short press 'SET' button, the voice prompts 'please verify administrator'.
- Verify the administrator, and the voice prompts 'Successful, please add user'.
- Add user's fingerprint (8 times), or password (6-8 numbers) ended with '#' (the same password, 2 times).
- The voice prompts 'successful'.

Delete User

- Long press '#' or short press 'SET' button, the voice prompts 'please verify administrator'.
- Verify the administrator, and the voice prompts 'Successful, please add user'.
- Long press '#' again.
- Press '1' to delete all user fingerprints, press '2' to delete all user passwords, press '3' to delete all users.
- The voice prompts 'successful'.

Note: The operation can only delete users, can not delete administrators. Only resetting the lock can delete the administrators.

Modify Password

- Press '5' '#', the voice prompts 'please input old password'.
- Enter the old password which needs to be modified, the voice will prompt 'New password'.
- Enter new password followed by '#', the voice will prompt 'successful'.

Note: The previous password is invalid after modification.

The administrator password cannot be modified.

Reset Lock

- Long press 'SET' button with 3 seconds, the button light flashes.
- Verify the administrator, and the system restores to the factory default settings. (The initial password is '12345')
- After the reset, all the information are removed (including the administrator).
- Please add a new administrator immediately.

APP Installation and Network Configuration

(Make sure you add administrator before network configuration)

- Make the bluetooth of your cellphone open.
- Search and download 'TuyaSmart' in APP store.
- Install and open the APP, register and login with cellphone number.
- Network Configuration
 - APP: Click 'My family'/'Add Device'/'Auto Scan'/'Start Scanning', or click 'My family'/'Add Device'/'Security&Sensor'/'Add Manually'/'Lock(Bluetooth)'/'Confirm the voice guide'.
 - Lock: Short press '3' '#', verify the administrator.
 - APP: It will automatic find the Lock, click it to start network configuration.
 - The voice prompts 'add Successful'.
 - If the network configuration fails, please try once again.

Notes:

- Make sure the phone is within 15 meters of the lock and the Bluetooth open.**
- APP remote unlock: Long press '🔓' to activate the lock.**

Other Function

Self-lock of The Password: It will be locked 180 seconds when entering wrong password 5 times continuously.

Release Self-lock: Unlock with registered fingerprint once.

Self-lock of The Fingerprint: It will be locked 180 seconds when entering wrong fingerprint 5 times continuously.

Release Self-lock: Unlock with registered password once.

Low Power Alarm: When the battery power is lower than 4.8V, the lock will prompt 'The battery is use up, please replace it', please replace with 4 new batteries in time.

Anti-peeping Password: Random password added before or after the correct password, it also can unlock as long as the real password keep continuously correct. (Anti-peeping password can not exceed 10 digits)

Volume Switch: Press '3' '3' '3' '#', you can switch the volume (Mute/Low/High).

Language Switch: Press '3' '1' '1' '#', you can switch Chinese and English.

Regularly Open Mode:

After the administrator unlocked, the light of '2' '5' will be on, press 'SET' of the back panel now, the lock will be set in the regularly open mode.

Note: Anybody can open the lock directly by pressing the handle in the regularly open mode. Be careful!

Release Regularly Open Mode: Unlock with registered user once.

FCC Statement:

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference.
- (2) This device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient or relocate the receiving antenna.

Increase the separation between the equipment and receiver.

Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Consult the dealer or an experienced radio/TV technician for help.

FCC Radiation Exposure Statement:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.



APP Download QR Code