

Instruction

This contains usage and important cautions, please read carefully and keep it.


-1-

Emergency Radio DF-580

Operation Guide


1. Power button/long press for 3s to switch it on. [Press silence button to switch to radio mode.]
2. Music mode: long press to turn volume down, and quick press to switch to previous song. Radio mode: long press to turn volume down, and quick press to switch to previous channel.
3. Music mode: quick press to pause or play, and long press for 3s to disconnect Bluetooth. Radio mode: long press to search for channel automatically, quick press to switch to next channel.
4. Music mode: long press to turn volume up, and quick press to switch to next song. Radio mode: long press to turn volume up, and quick press to switch to next channel.
5. Switch mode/Bluetooth/FM/AM
6. SOS button [long press for 3s] It also functions as reset button.
7. Radio mode: channel indicator/volume indicator while adjusting volume
8. Bluetooth mode: Bluetooth indicator/ volume indicator while adjusting volume
9. TF mode: indicator of the number of playing song
10. Battery indicator: red light is on while charging. Percentage of battery: 99% is full charge
11. Mode indicator: BT/FM/AM/TF
12. Torch button

Operation Guide

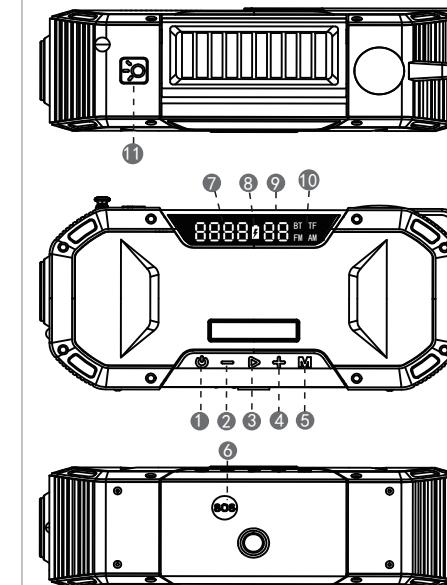

-2-

12. Type C/USB charge port
13. TF card slot, and it will be played automatically after inserting TF card.
14. USB output charging for portable devices

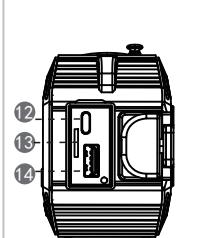

-3-

Bluetooth speaker usage

1. Once device is switched on, the Bluetooth mode is on. To switch from other modes to Bluetooth mode, please quick press button "M" ⑩. (Current mode could be found at ⑩).
2. Open Bluetooth function of phone, and find DF-580 to connect.

Radio Usage:

1. Pull out antenna in FM mode.
2. Quick press button "M" ⑩ to switch to FM or AM mode. (Current mode could be found at ⑩).
3. Long press play button ⑩ for 3s to search for channels automatically. The device will save all the accessible channels, and do not have to do so manually. (When the device is searching for channels, you cannot switch channels by pressing button ⑩. Please be patient and wait for automatic search to finish.)
4. After the device finishing automatic search and saving channels, quick press play button ⑩ to switch to next channel.
5. When next time use FM or AM function, do not need to search for channels again. Quick press play button ⑩ and saved channels could be selected and listened to.

Volume adjustment

1. When turn volume down, please long press ⑩ for 3s.
2. When turn volume up, please long press ⑩ for 3s.

Caution:

There is no substitutable accessories for this product and replacing accessories will lead to invalidation of warranty. Please do not replace battery because it is inner battery. Avoid using device under humid or corrosive circumstance.

* Turn the solar panel of device towards sun directly. When charging, the red light of battery indicator will be on. This function is only recommended for torch, radio, and SOS because of its low efficiency. It is mainly used to extend battery life and face emergency.

Caution: Please switch off the device when using solar power charging.

-4-

Crank charging usage:

Crank charging function is prepared for charging the device, and it is only recommended in emergency. Caution: Please switch off the device when using crank charging.



-5-

Specification :

Model	DF-580
Weight	410G
Size	166*52*78MM
FM	87.5---108MHZ
AM	760---1062KHZ
Power	5W
Play Mode	BT/FM/AM/TF
Waterproof Level	IPX6
Charging Time	3.5H
Charging Input	5V-2A
Battery	5000MAH

Warranty Certificate

Product	Warranty Duration
DF-580	12 Months

-6-

FCC Caution.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

-Reorient or relocate the receiving antenna.

-Increase the separation between the equipment and receiver.

-Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

-Consult the dealer or an experienced radio/TV technician for help.

*RF warning for Portable device:
The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

-9-

英文板

DF-580 说明书 尺寸:60*100mm

80g双胶纸