


Portable Radio DF-589

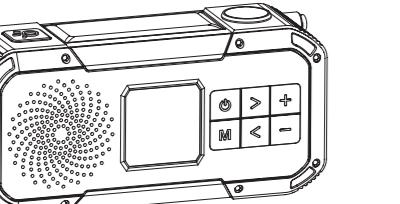

Safety use rules

In order to prevent hazards or damage to the user and to people or objects in the vicinity, this manual sets out the matters that you are expected to observe. In order to use the product safely, please fully understand the relevant contents.

Caution

- In case of thunder when using outdoors, please fold the antenna and evacuate to a safe place.
- Do not use it in an unstable place or condition.
- Do not use, install or store the antenna in a place near the fire, such as a fireplace.
- Please be sure to use the configured USB charging cable for charging the body. Otherwise, there is a risk that it will not charge properly.
- Do not tie up the charging cable or place objects on it.
- Do not operate or use with wet hands.
- Do not subject the device to strong impacts such as drops or collisions.
- Do not expose your eyes to light. Otherwise, it may cause physical discomfort.
- Do not place it in a place facing the sun or under the sun for a long time.
- Do not disassemble or modify.
- Do not insert external objects into the ports or connectors of the product.
- Do not drop it in water, immerse it in water, or leave it in the rain for a long time.
- Do not wipe the machine body with thinner gasoline or alcohol.
- Please put a little neutral cleaning solution in the water and wipe off the stain with a hard cloth.
- Do not use if there are any abnormalities such as odor, heat discoloration, deformation, etc., during use or storage.
- Only for people over the age of children, please do not put it in a place where young children can reach.
- Please unplug the USB charging cable if it is not used for a long time.
- Please do not use or store the device in a state where it is covered with oil, etc.
- When disposing of it, please follow the waste disposal instructions of each country.

Contents


- Safety use rules.....01
- Getting to know your Weather Radio.....02
- How to charge your Weather Radio.....05
- How to charge other devices by radio.....06
- How to use FLASHLIGHT or SOS ALARM etc.....07
- How to use bluetooth speakers.....08
- How to use radio (am/fm/wb/noaa).....08
- Kind reminder.....11
- Specification.....12

Thank you very much for this purchase. Please read this manual carefully and use it correctly. Please be sure to read the "Safety Rules" before using the product. After reading it, please keep this manual properly.

We will not be responsible for anything caused by the wrong Method of use. Please be aware of this.

***The LED in the product cannot be replaced. Please be aware of this.**

Getting to know your Weather Radio

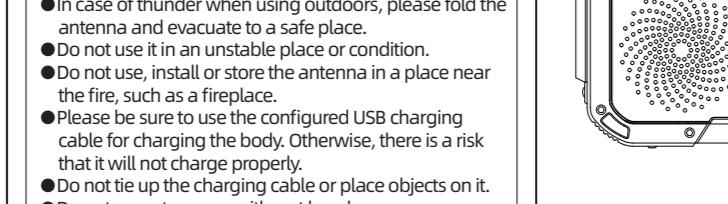


Caution

- Mode display: BT/WB/NOAA/FM/AM
- Display frequency: Displays the present frequency or volume and the saved channel.
- Power display: Lights up red when charging, lights up green when fully charged.
- Status display: Displays the current charge level, when fully charged, only 99 will be displayed.
- Mute / Pause

Volume adjustment method

- Long press the + button, as shown above, the volume will increase.
- Press and hold the - button, as shown above, the volume will decrease.
- The volume can be adjusted from V-00 to V-27. V-00 is silenced.
- Press ① "Power button" to enter the mute mode, and then press again to release the mute mode.

Screen

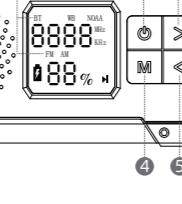

How to charge your Weather Radio

Charging method when using a USB (Type-C) charging cable


- Press and hold the power button to turn off the power. Please do not charge or generate electricity with the power on.
- Damage or accidents to this product or rechargeable products caused by the use of unsupported equipment are not warranted.
- Please check with the manufacturer of the charged device to see if it is supported. The battery life of the recharged device may be shortened due to different specifications of the charged device.
- The product is guaranteed to charge external devices. The charging speed may be very slow or almost impossible due to the specification of the device and cable being charged.
- Due to the specification of the charged device and cable, it may only charge up to 90-99%.
- Do not charge external devices at the same time as charging the unit.

The use of hand-cranked power charging


How to switch saved channels

How to switch channels

Specification

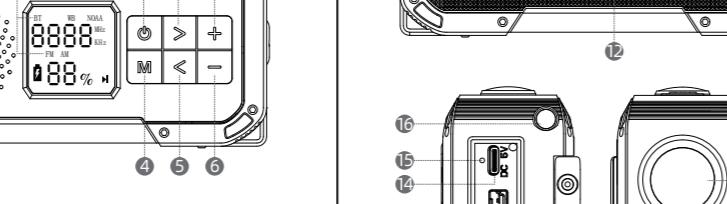

Screen

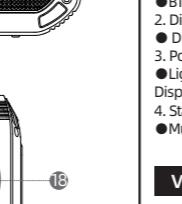

How to charge your Weather Radio

Charging method when using a USB (Type-C) charging cable


- Press and hold the power button to turn off the power. Please do not charge or generate electricity with the power on.
- Damage or accidents to this product or rechargeable products caused by the use of unsupported equipment are not warranted.
- Please check with the manufacturer of the charged device to see if it is supported. The battery life of the recharged device may be shortened due to different specifications of the charged device.
- The product is guaranteed to charge external devices. The charging speed may be very slow or almost impossible due to the specification of the device and cable being charged.
- Due to the specification of the charged device and cable, it may only charge up to 90-99%.
- Do not charge external devices at the same time as charging the unit.

The use of hand-cranked power charging


How to use bluetooth speakers

How to switch channels

Specification

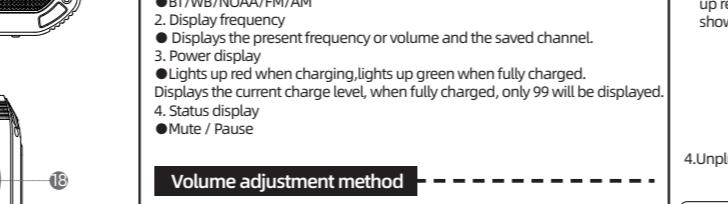

Screen

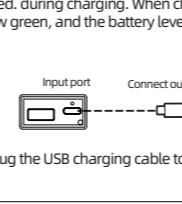

How to charge your Weather Radio

Charging method when using a USB (Type-C) charging cable


- Press and hold the power button to turn off the power. Please do not charge or generate electricity with the power on.
- Damage or accidents to this product or rechargeable products caused by the use of unsupported equipment are not warranted.
- Please check with the manufacturer of the charged device to see if it is supported. The battery life of the recharged device may be shortened due to different specifications of the charged device.
- The product is guaranteed to charge external devices. The charging speed may be very slow or almost impossible due to the specification of the device and cable being charged.
- Due to the specification of the charged device and cable, it may only charge up to 90-99%.
- Do not charge external devices at the same time as charging the unit.

The use of hand-cranked power charging


How to use bluetooth speakers

How to switch channels

Specification

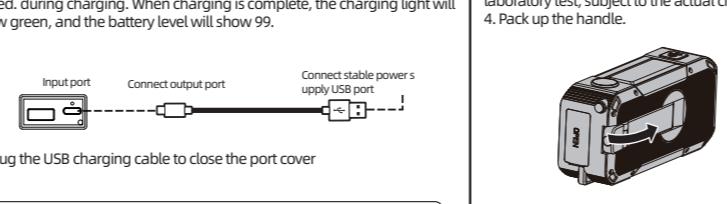

Screen

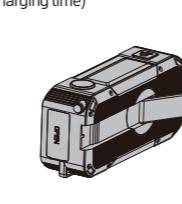

How to charge your Weather Radio

Charging method when using a USB (Type-C) charging cable


- Press and hold the power button to turn off the power. Please do not charge or generate electricity with the power on.
- Damage or accidents to this product or rechargeable products caused by the use of unsupported equipment are not warranted.
- Please check with the manufacturer of the charged device to see if it is supported. The battery life of the recharged device may be shortened due to different specifications of the charged device.
- The product is guaranteed to charge external devices. The charging speed may be very slow or almost impossible due to the specification of the device and cable being charged.
- Due to the specification of the charged device and cable, it may only charge up to 90-99%.
- Do not charge external devices at the same time as charging the unit.

The use of hand-cranked power charging


How to use bluetooth speakers

How to switch channels

Specification

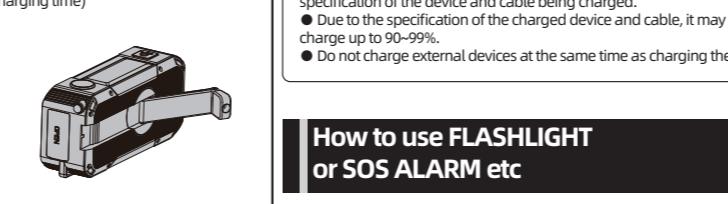

Screen

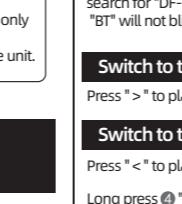

How to charge your Weather Radio

Charging method when using a USB (Type-C) charging cable


- Press and hold the power button to turn off the power. Please do not charge or generate electricity with the power on.
- Damage or accidents to this product or rechargeable products caused by the use of unsupported equipment are not warranted.
- Please check with the manufacturer of the charged device to see if it is supported. The battery life of the recharged device may be shortened due to different specifications of the charged device.
- The product is guaranteed to charge external devices. The charging speed may be very slow or almost impossible due to the specification of the device and cable being charged.
- Due to the specification of the charged device and cable, it may only charge up to 90-99%.
- Do not charge external devices at the same time as charging the unit.

The use of hand-cranked power charging


How to use bluetooth speakers

How to switch channels

Specification

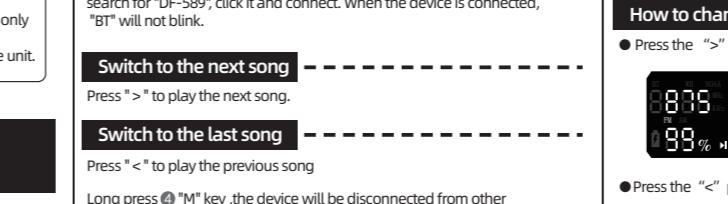

Screen

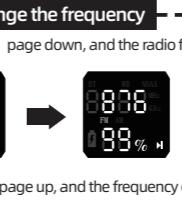

How to charge your Weather Radio

Charging method when using a USB (Type-C) charging cable


- Press and hold the power button to turn off the power. Please do not charge or generate electricity with the power on.
- Damage or accidents to this product or rechargeable products caused by the use of unsupported equipment are not warranted.
- Please check with the manufacturer of the charged device to see if it is supported. The battery life of the recharged device may be shortened due to different specifications of the charged device.
- The product is guaranteed to charge external devices. The charging speed may be very slow or almost impossible due to the specification of the device and cable being charged.
- Due to the specification of the charged device and cable, it may only charge up to 90-99%.
- Do not charge external devices at the same time as charging the unit.

The use of hand-cranked power charging


How to use bluetooth speakers

How to switch channels

Specification

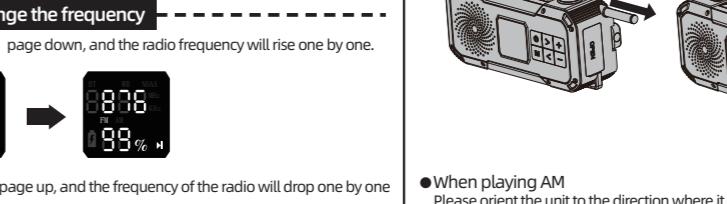

Screen

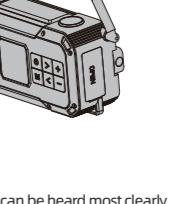

How to charge your Weather Radio

Charging method when using a USB (Type-C) charging cable


- Press and hold the power button to turn off the power. Please do not charge or generate electricity with the power on.
- Damage or accidents to this product or rechargeable products caused by the use of unsupported equipment are not warranted.
- Please check with the manufacturer of the charged device to see if it is supported. The battery life of the recharged device may be shortened due to different specifications of the charged device.
- The product is guaranteed to charge external devices. The charging speed may be very slow or almost impossible due to the specification of the device and cable being charged.
- Due to the specification of the charged device and cable, it may only charge up to 90-99%.
- Do not charge external devices at the same time as charging the unit.

The use of hand-cranked power charging


How to use bluetooth speakers

How to switch channels

Specification

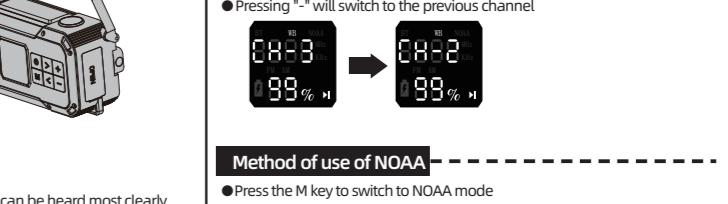

Screen

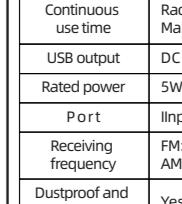

How to charge your Weather Radio

Charging method when using a USB (Type-C) charging cable


- Press and hold the power button to turn off the power. Please do not charge or generate electricity with the power on.
- Damage or accidents to this product or rechargeable products caused by the use of unsupported equipment are not warranted.
- Please check with the manufacturer of the charged device to see if it is supported. The battery life of the recharged device may be shortened due to different specifications of the charged device.
- The product is guaranteed to charge external devices. The charging speed may be very slow or almost impossible due to the specification of the device and cable being charged.
- Due to the specification of the charged device and cable, it may only charge up to 90-99%.
- Do not charge external devices at the same time as charging the unit.

The use of hand-cranked power charging

How to use bluetooth speakers

How to switch channels

Specification

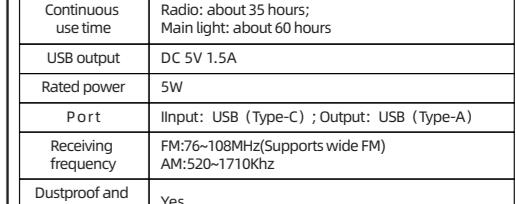

Screen



How to charge your Weather Radio

Charging method when using a USB (Type-C) charging cable

- Press and hold the power button to turn off the power. Please do not charge or generate electricity with the power on.
- Damage or accidents to this product or rechargeable products caused by the use of unsupported equipment are not warranted.
- Please check with the manufacturer of the charged device to see if it is supported. The battery life of the recharged device may be shortened due to different specifications of the charged device.
- The product is guaranteed to charge external devices. The charging speed may be very slow or almost impossible due to the specification of the device and cable being charged.
- Due to the specification of the charged device and cable, it may only charge up to 90-99%.
- Do not charge external devices at the same time as charging the unit.

The use of hand-cranked power charging

How to use bluetooth speakers

How to switch channels

Specification

FCC Warning Statement

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- - Reorient or relocate the receiving antenna.
- - Increase the separation between the equipment and receiver.
- - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- - Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

The device has been evaluated to meet general RF exposure requirement.