

WARNING

Age / Weight Restrictions - Maximum weight Limit: 20 lb (9.1kg)
• Discontinue use if infant attempts to climb out, even if less than 20lbs (9.1 kg) or under 6 months of age.

WARNING

FALL and STRANGULATION HAZARDS: Infants have suffered head injuries falling from swings and have strangled in straps.

- **ALWAYS** use restraints. Adjust to fit snugly.
- **STOP** using product when infant attempts to climb out (approximately 6 months).
- Stay near and watch baby during use. This product is not safe for sleep or unsupervised use. If baby falls asleep, remove baby as soon as possible and place baby on a firm, flat sleep surface such as a crib or bassinet.
- **ALWAYS** place swing on floor. Never use on elevated surface.

WARNING

- **INGESTION HAZARD:** This product contains a button cell or coin battery.
- **DEATH** or serious injury can occur if ingested.
- A swallowed button cell or coin battery can cause **Internal Chemical Burns** in as little as **2 hours**.
- **KEEP** new and used batteries **OUT OF REACH** of **CHILDREN**
- **Seek immediate medical attention** if a battery is suspected to be swallowed or inserted inside any part of the body.



- Remove and immediately recycle or dispose of used batteries according to local regulations and keep away from children. Do NOT dispose of batteries in household trash or incinerate.
- Even used batteries may cause severe injury or death. Call a local poison control center for treatment information.
- REMOTE Control Contains: 3V CR2025 battery
- Non-rechargeable batteries are not to be recharged.
- Do not force discharge, recharge, disassemble, heat above 140°F (60°C) or incinerate. Doing so may result in injury due to venting, leakage or explosion resulting in chemical burns.

- Ensure the batteries are installed correctly according to polarity (+ and -).
- Do not mix old and new batteries, different brands or types of batteries, such as alkaline, carbon zinc, or rechargeable batteries.
- Remove and immediately recycle or dispose of batteries from equipment not used for an extended period of time according to local regulations.
- Always completely secure the battery compartment. If the battery compartment does not close securely, stop using the product, remove the batteries and keep them away from children.

To avoid injury, ensure that children are kept away when assembling this product.
Only use swing in areas with adequate ventilation. To prevent overheating or fire, keep the swing away from heat sources such as radiators stoves or other heat-producing appliances. Do not use extension cords with the AC adaptor. Do not use the swing near water (i.e.: bathtub sink, or laundry tub etc.) The product must only be used with the included AC adaptor. The AC adaptor is not a toy. Disconnect the AC adaptor from the swing before cleaning.

Do not let children play with this product.
Do not lift product from base or arch.
Do not move or lift this product with a baby inside it.
When the product is connected to a music player ensure that the volume of the music player is set to safe listening levels.
Do not use the product if any components are broken or missing.
Do not use accessories or replacement parts other than those approved by the manufacturer.

Joolbaby
NOVA
SIGNATURE
Baby Swing

Control Panel



Power

Press to power on. Press again to power off.

Gear

Press to increase speed up to 5 levels of motion

Time

Set the Nova to turn off after 8, 15, or 30 minutes.

Music

Bluetooth: After switching the Nova on, select "Jool Nova" on your Bluetooth enabled device and the Nova will announce that you're connected.

USB: The USB port is located behind the main console. Connect a flash drive or MP3 player to the port and select between preset and USB options by pressing the Music button.

To enable bluetooth playback while in USB or preset mode, simply press play on your bluetooth device.

Preset: The Nova includes ten preset songs.

Volume: When music playback is enabled, volume buttons appear above the Music button.

Remote Panel



Power



Timer



Stop



Preset/USB



Volume Up



Volume Down



Play/Pause




Previous Song



Speed




Next Song

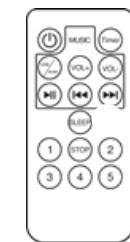


Lock Switch

Secure the seat in place by switching to the lock position. Only for use while the automatic swing mechanism is deactivated.

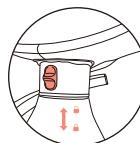

Remote Storage

Protect and store remote control in convenient pocket located under seat.

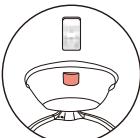

Always Use The Restraint System

To use the restraint system, insert the strap tabs into the sides of the central buckle until they click.

To release the buckle, push the button on the top of the buckle.

How to Clean

Wash the seat fabric and head rest: Machine wash cold. With like colors. Do not bleach. Do not tumble dry. Dry flat.

Cleaning the swing: Wipe with a clean, damp cloth. Do not bleach. Air dry.

Avertissement ISED :

Cet appareil contient un ou plusieurs émetteurs/récepteurs exonérés de licence qui sont conformes au RSS exonéré de licence d'Innovation, Sciences et Développement économique Canada.

L'exploitation est soumise aux deux conditions suivantes:

(1) Ce dispositif ne peut pas causer d'interférences.

(2) Ce dispositif doit accepter toute interférence, y compris les interférences qui peuvent provoquer un fonctionnement indésirable du dispositif.

Cet émetteur ne doit pas être co-situé ou fonctionner en conjonction avec toute autre antenne ou émetteur.

Le dispositif a été évalué pour répondre aux exigences générales d'exposition RF. L'appareil peut être utilisé en état d'exposition portable sans restriction.

ISED Warning:

This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s).

Operation is subject to the following two conditions:

(1) This device may not cause interference.

(2) This device must accept any interference, including interference that may cause undesired operation of the device.

This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

WARNING: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

—Reorient or relocate the receiving antenna.

—Increase the separation between the equipment and receiver.

—Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

—Consult the dealer or an experienced radio/TV technician for help.


RF warning for Mobile device: This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.

Assembly Instructions


Scan for
Video Instructions



INCLUDED PARTS:

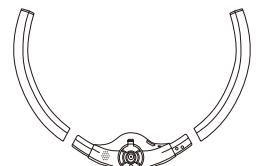


Base + Right & Left Legs

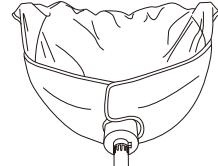

Swing Seat (B)




Canopy (C)

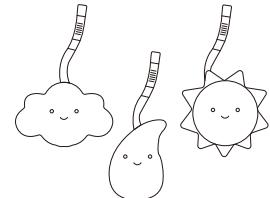


Toys (D)



 Screws x 4 (E)






Power Cord (F)

 


Remote Control (G)


*Philips Screwdriver
*not included

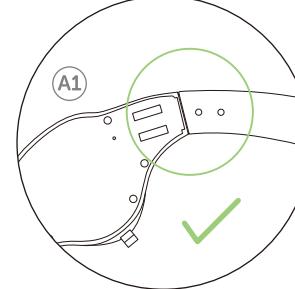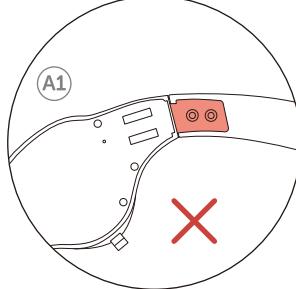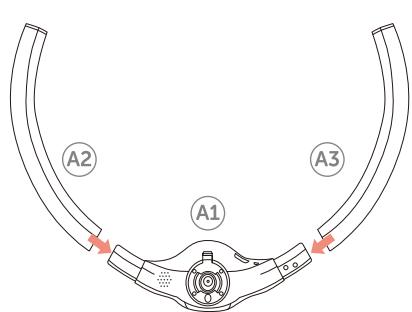


1. Place both legs (A2,A3) over both sides on the base (A1). Ensure that all parts of the tab are fully inserted into the leg. There should be no plastic piece on the outside of the leg.

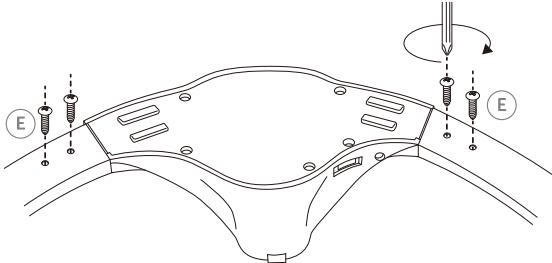


2. Insert and tighten the two screws (E) for each side into the screw holes to secure the legs to the base.

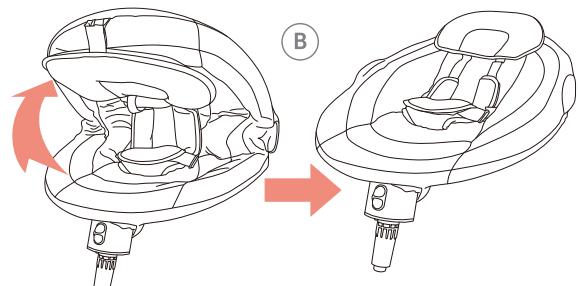


3. Unfold the swing seat (B) and lock into place.

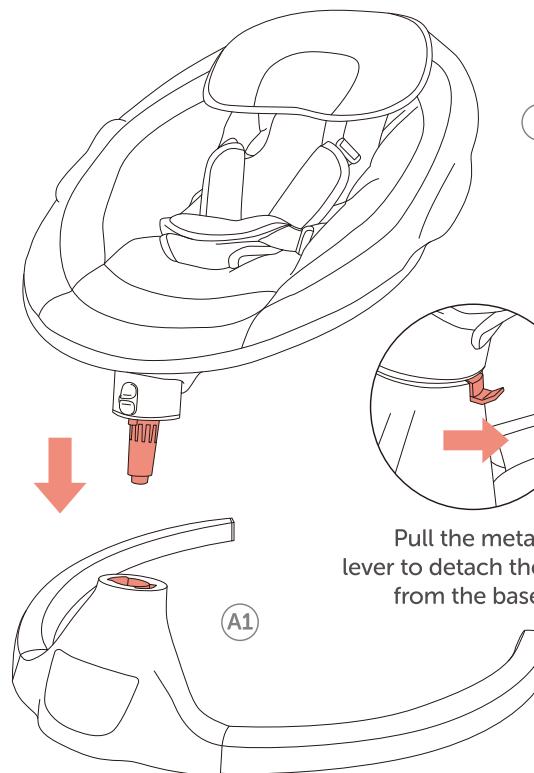


4. Take the seat post and insert it into the base (A1) (to detach, simply pull the metal lever located behind the base and lift the seat).

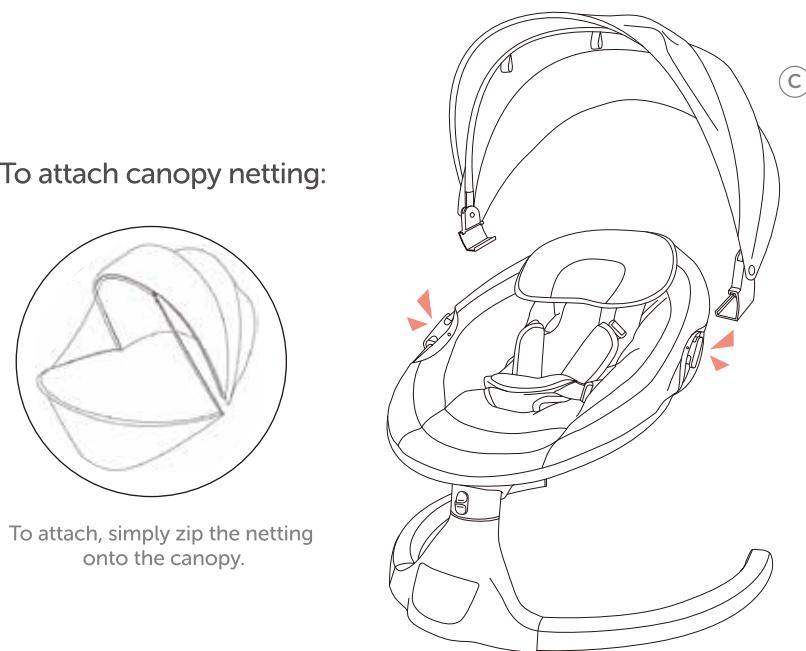


To attach canopy netting:

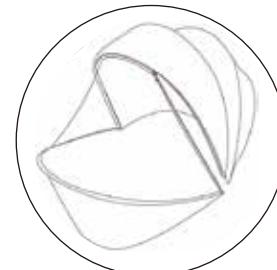


To attach, simply zip the netting onto the canopy.

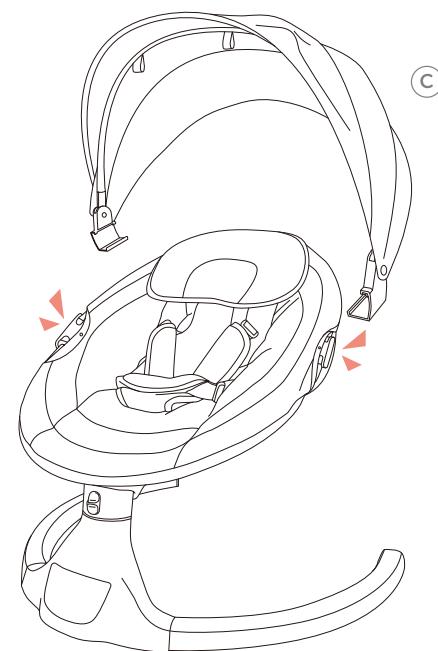


To attach 3 plush toys:

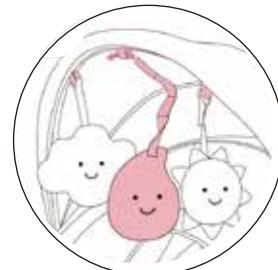

Hang the three included stuffed toys to canopy by wrapping the straps through loops on canopy.

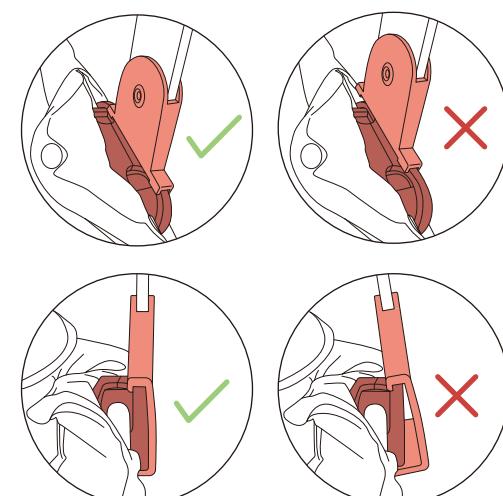


6. Always make sure mounting hooks are properly clipped to frame.

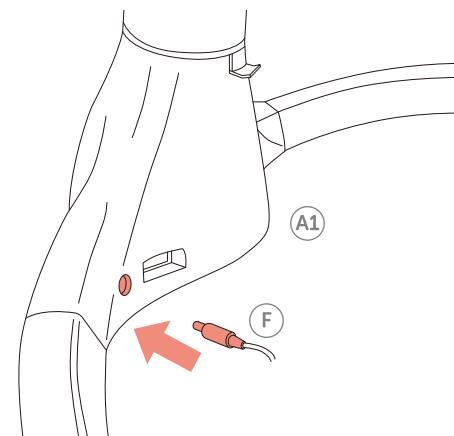

7. Congratulations! Your Nova Nature is ready! Connect the power cord (F) and plug in to turn it on.

How To Store & Travel

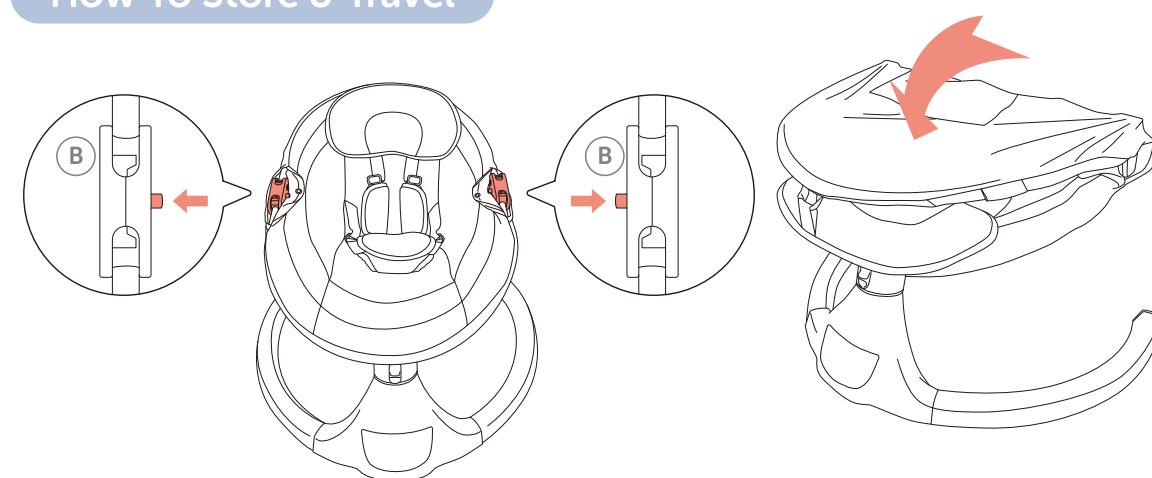

8. For storage and travel, push the two release buttons found on both sides of the swing seat frame and fold the upper part of the seat down.