

capello®



Play-It-All Home Stereo Speaker


Bluetooth Wireless

CD Player

FM Radio

USB Phone Charger

Wireless Remote Control

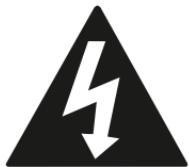

CAUTION

RISK OF ELECTRIC SHOCK
DO NOT OPEN



CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.
(This Caution Marking with Rating Label is located at the bottom enclosure of the unit).



DANGEROUS VOLTAGE: The lightning flash with arrowhead symbol, within an equilateral triangle is intended to alert the user to the presence of uninsulated dangerous voltage within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



ATTENTION: The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.



DANGER: This symbol is intended to alert the user to the risk of exposure to invisible and hazardous laser radiation if the cover or back is opened the interlock fails or is defeated. Direct exposure to the beam may damage your eyesight.

FCC WARNING: This equipment may generate or use radio frequency energy. Changes or modifications to this equipment may cause harmful interference unless the modifications are expressly approved in the instruction manual. The user could lose the authority to operate this equipment if an unauthorized change or modification is made.

ATTENTION: POUR ÉVITER LES CHOC ÉLECTRIQUES, INTRODUIRE LA LAME LA PLUS LARGE DE LA FICHE DANS LA BORNE CORRESPONDANTE DE LA PRISES ET POUSSER JUSQU'AU FOND.

IMPORTANT SAFETY PRECAUTIONS

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Compliance information: This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

LASER SAFETY: This unit employs a laser. Only qualified service personnel should attempt to service this device due to possible eye injury.

CAUTION: USE OF CONTROLS, ADJUSTMENTS OR PERFORMANCE PROCEDURE HEREIN MAY RESULT IN HAZARDOUS RADIATION EXPOSURE

WARNING: TO PREVENT FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS UNIT TO RAIN OR MOISTURE.

SURGE PROTECTORS: It is recommended to use a surge protector for AC connection. Lightning and power surges ARE NOT covered under warranty for this product.

CAN ICES-3 (B) / NMB-3 (B)

SAFETY INSTRUCTIONS

1. Read these Instructions.
2. Keep these Instructions.
3. Heed all Warnings.
4. Follow all instructions.
5. Do not use this apparatus near water.
6. Clean only with a dry cloth.
7. Do not block any of the ventilation openings. Install in accordance with the manufacturer's instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding-type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. When the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
10. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
11. Only use attachments/accessories specified by the manufacturer.
12. Use only with a cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
13. Unplug this apparatus during lightning storms or when unused for long periods of time.
14. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
15. Do not expose this product to dripping or splashing. Do not place objects filled with liquids, such as vases, on this product.
16. Main plug is used as disconnect device and it should remain readily operable during intended use. In order to disconnect the apparatus from the main completely, the main plug should be disconnected from the main socket outlet completely.
17. Batteries shall not be exposed to excessive heat such as sunshine, fire or the like.
18. For sufficient ventilation, the minimum distance around the apparatus is 10cm.
19. The ventilation should not be impeded by covering the ventilation openings with items such as newspaper, tablecloths, curtains, etc.
20. No naked flame sources, such as lighted candles, should be placed on the apparatus.
21. Attention should be drawn to the environmental aspects of battery disposal.
22. Only use the apparatus in moderate climates.



Dear Customer,

Selecting fine audio equipment such as the unit you've just purchased is only the start of your musical enjoyment. Now it's time to consider how you can maximize the fun and excitement your equipment can provide. Life Lab International Ltd. and the Electronics Industries Association's Consumer Electronics Group want you to get the most out of your equipment by playing it at a safe listening level. One that lets the sound come through loud and clear with annoying blaring or distortion and most importantly, without affecting your sensitive hearing. Sound can be deceiving. Over time while listening to music, your 'comfort level' adapts to higher volumes of sound. So much that what sounds 'normal' can actually be loud and harmful to your hearing. Guard against this by setting your equipment at a safe level BEFORE your hearing adapts.

To establish a safe level: Start your volume control at a low setting then slowly increase the sound until you can hear it comfortable and clearly and without distortion.

Once you have established a comfortable listening level: Set the volume dial and leave it there.

Taking a minute to do this now will help to prevent hearing damage or loss in the future. After all, we want you listening for a lifetime. Used wisely, your new Ci302 CD Home system will provide a lifetime of fun and enjoyment. Since hearing damage from loud noise is often undetected until it is too late, we recommend you avoid prolonged exposure to excessive noise. Below is a list of sound levels for your reference.

Decibel Level	Example
30	Quiet library, soft whispers
40	Living room, refrigerator, bedroom away from traffic
50	Light traffic, normal conversation, quiet office
60	Air conditioner at 20 feet, sewing machine
70	Vacuum cleaner, hair dryer, noisy restaurant
80	Aver city traffic, garbage disposals, alarm clock at 2 feet


THE FOLLOWING NOISES CAN BE DANGEROUS UNDER CONSTANT EXPOSURE:

90	Subway, motorcycle, truck traffic, lawn mower
100	Garbage truck, chain saw, pneumatic drill
120	Rock band concert in front of speakers, thunderclap
140	Gunshot blast, jet engine
180	Rocket launching pad



Information courtesy of the
Deafness Research Foundation

location of controls

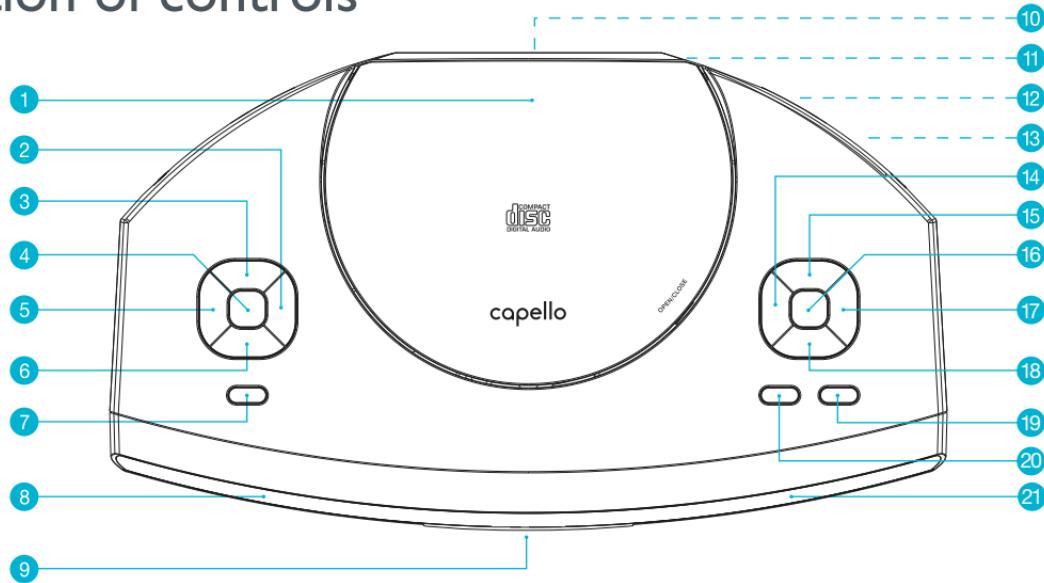


- ① CD Compartment
- ② PAIRING Button
- ③ PRESET + Button
- ④ MODE Button
- ⑤ PROGRAM / CLOCK SET Button
- ⑥ PRESET - Button
- ⑦ STANDBY Button

- ⑧ Left Speaker
- ⑨ Display
- ⑩ USB Charging Port
- ⑪ FM Wire Antenna
- ⑫ DC Jack
- ⑬ AUX IN
- ⑭ SKIP - Button

- ⑮ REPEAT Button
- ⑯ PLAY / PAUSE ▶ II Button
- ⑰ SKIP + Button
- ⑱ STOP ■ Button
- ⑲ VOLUME + Button
- ⑳ VOLUME - Button
- ㉑ Right Speaker

location of controls (remote)

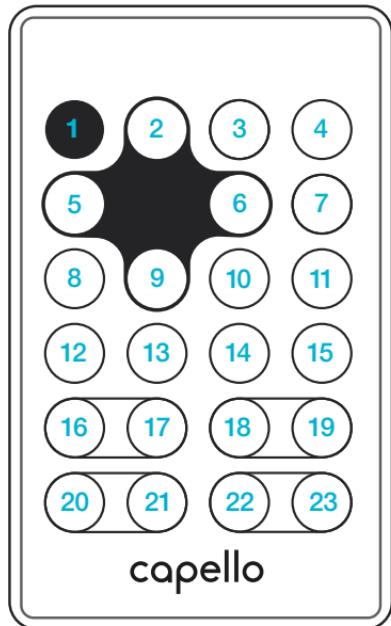

- ① STANDBY ⏻ Button
- ② PLAY / PAUSE ▶▷ II Button
- ③ MUTE Button
- ④ MODE Button
- ⑤ TUNE – ⏴ Button
- ⑥ TUNE + ⏵ Button
- ⑦ MON/ST Button
- ⑧ TIMER Button
- ⑨ STOP ■ Button
- ⑩ SLEEP Button
- ⑪ PAIRING Button
- ⑫ INTRO Button
- ⑬ REPEAT Button
- ⑭ PROG/CLOCK SET Button
- ⑮ RANDOM Button
- ⑯ TREBLE – Button
- ⑰ TREBLE + Button
- ⑱ PRESET – Button
- ⑲ PRESET + Button
- ⑳ BASS – Button
- ㉑ BASS + Button
- ㉒ VOLUME – Button
- ㉓ VOLUME + Button




inside the box

Ci302 CD Home System, AC power adapter, wireless remote control and user guide.



power source

Insert the AC plug into a wall outlet having 120V AC, 60Hz.

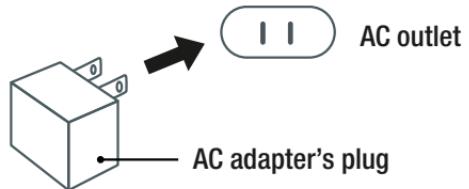

operation

Refer to the location of controls diagram before operation.

- ① To turn the unit on, press the STANDBY button and the unit will enter TUNER mode first.
- ② To turn the unit off, press the STANDBY button again.

notes: When the unit is off, it is in standby mode and will display the clock time.

If the unit was turned off by pressing the STANDBY button while playing, it will turn on to the same source as before.




universal USB charging port

This unit features a USB charging port on the back of the unit. The USB port supplies 5V/1A and will power and charge most devices including iPhones, iPods, smart phones, Android, tablets and most other USB devices. The USB port will automatically charge connected devices as long as the Ci302 is connected to an AC power source. (USB cable sold separately)



inserting remote battery

- 1 Remove the battery compartment, located on the bottom rear of the remote control, by sliding the compartment out. (You can also insert a penny or similar object into the groove on the compartment to help slide it out.)
- 2 Install a CR2025 battery, paying attention to the polarity diagram in the compartment (positive side up).
- 3 Replace the battery compartment.

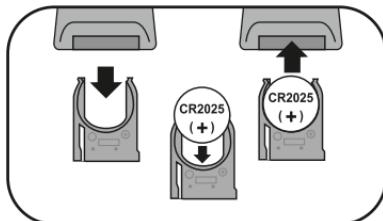

battery precautions:

Follow these precautions when using batteries in this device:

- 1 Warning - Danger of explosion if batteries are incorrectly replaced. Replace only with the same or equivalent type.
- 2 Use only the size and type of batteries specified.
- 3 Be sure to follow the correct polarity when installing the batteries as indicated in the battery compartment.
note: A reversed battery may cause damage to the device.
- 4 Do not mix different types of batteries together (e.g. Alkaline, Rechargeable and Carbon-zinc) or old batteries with fresh ones.
- 5 If the device is not to be used for a long period of time, remove the batteries to prevent damage or injury from possible battery leakage.
- 6 Do not try to recharge a battery not intended to be recharged - it can overheat and rupture. (Follow battery manufacturer's directions.)



using the FM radio

- 1 Turn on the unit by pressing the STANDBY button.
- 2 If you are not already in TUNER mode, press the MODE button and select TUNER mode.
- 3 Repeatedly press the SKIP UP + button or the SKIP DOWN – button to manually advance the frequency on the display up or down until the desired frequency appears.
- 4 For **AUTO TUNING**, press and hold the SKIP UP + button or the SKIP DOWN – button until the frequency in the display starts to scan and then release; the tuner will search and then stop on the next strong station signal it finds. Repeat this step until the desired frequency appears on the display.

note: If the FM station you have selected is broadcasting in stereo, "ST" will appear in the display. To choose between stereo and mono playback, press the MON/ST button on the remote.

Unravel and extend the FM wire antenna for best reception.

setting radio presets

- 1 Follow the steps in the previous section to tune a station. Press the PROGRAM / CLOCK SET button; "MEM" will appear in the display and "01" (if no presets have ever been set) will blink in the display.
- 2 Within five seconds, press the PRESET + or PRESET – button to select a desired preset number (01-20).
- 3 Press the PROGRAM / CLOCK SET button again to confirm the setting and the station will be saved into memory.
- 4 Repeat these steps for up to 20 presets, as desired.
- 5 For **AUTO PRESETS**, press and hold the PROGRAM / CLOCK SET button, "MEM" and "AUTO" will appear in the display, the station will automatically be saved into memory (from Pr 01 to Pr 20).



retrieving radio presets

- 1 Turn the unit on and switch to TUNER mode.
- 2 Press the PRESET + or - button repeatedly to retrieve the desired preset station.



streaming music and audio with Bluetooth wireless

- 1 Turn on the unit by pressing the STANDBY Button.
- 2 Please the MODE button to set the unit to “**BT**” mode.
- 3 Next, press the PAIRING button on the top of the unit. “**Ci302**” will appear on your Bluetooth enabled device. Select “**Ci302**” from the available list and your Bluetooth audio device will connect to the Ci302. If you wish to pair the Ci302 with a different Bluetooth audio device, press the PAIRING button to disconnect the current paired Bluetooth audio device or make sure the current device has been moved out of range.
- 4 During playback, press the PLAY / PAUSE **▶II** button to pause playback and again to resume playback.
- 5 While in STOP mode, you can press SKIP UP **+** or SKIP DOWN **-** button to select a specific track for playback.
- 6 **To skip forward or backward on the disc**, press the SKIP UP **+** or SKIP DOWN **-** button to skip to the beginning of the next track or the beginning of the previous track.
- 7 **To search forward or backward on the disc**, press and hold the SKIP UP **+** or SKIP DOWN **-** button to search within the track currently playing.

note: If the last paired Bluetooth audio device is powered on and within range with Bluetooth enabled, the device will automatically reconnect to the Ci302.



using the CD player

- 1 Turn on the unit by pressing the STANDBY Button.
- 2 If you are not already in CD mode, press the MODE button and select CD mode.
- 3 Press the “Press to Open” area on the CD lid to open the CD compartment. Gently press a CD onto the center spindle with the label side facing up and close the CD lid. The total number of tracks will appear in the display.
- 4 Press the PLAY / PAUSE **▶II** button to begin playback. The current track and elapsed time will appear in the display.
- 5 During playback, press the PLAY / PAUSE **▶II** button to pause playback and again to resume playback.
- 6 When the disc is finished playing, it will stop. Press the STOP **■** button to stop the disc before it is finished.

notes: This unit plays 3 inch single, standard CD, CD-R/RW discs.

If a disc is inserted incorrectly, dirty, damaged or not present at all, “NO DISC” will appear in the display.

Playback will stop when you open the CD compartment, but it is not recommended to open the compartment before pressing the STOP **■** button.

using repeat playback

- 1 While in the STOP / PLAY mode, press the REPEAT button to cycle through the following playback modes:
“Repeat One”  (will playback a single track continuously; see the previous section for how to select a desired track),
“Repeat All”  (will playback all tracks on the disc continuously).
- 2 When the playback mode is selected, press the PLAY / PAUSE **▶II** button.

note: To **STOP AND CANCEL REPEAT** playback, press the STOP **■** button. To just cancel Repeat playback, press the REPEAT button until the Repeat indicators disappear from the display.



playback from a specific CD track

- ① While in STOP mode, press the SKIP UP + button or the SKIP DOWN – button to select a specific track for playback.
- ② When the desired track/file is selected, press the PLAY / PAUSE ►|| button and playback will begin with the track/file you selected.

using random and intro playback

- ① To **RANDOMLY PLAY** the tracks on the disc, while in STOP mode: Press the RANDOM button on the remote; Random playback will begin automatically.
- ② To **PLAY THE INTRO (first 10 seconds)** of each track on the disc, while in STOP mode: Press the INTRO button on the remote; Intro playback will begin automatically.

notes: To **STOP AND CANCEL RANDOM** playback, press the STOP ■ button. To just cancel Random playback, press the RANDOM button until “RAN” disappear from the display.

To **STOP AND CANCEL INTRO** playback, press the STOP ■ button.

using forward / reverse and skip / search

- ① To **SKIP FORWARD or BACKWARD**, press the SKIP UP + button to skip to the beginning of the next track or the SKIP DOWN – button to return to the beginning of the current track
- ② To **SEARCH FORWARD or BACKWARD**, press and hold the SKIP UP + button or the SKIP DOWN – button to search within the current track that is playing.



CD memory programming (up to 20 tracks)

Programming is the ability to preselect the order in which a series of tracks will be played.

- 1 While in the STOP mode, press the PROGRAM / CLOCK SET button. "MEM", the track number and "Pr01" (the program number) will appear in the display.
- 2 Select a track to be programmed using the SKIP UP + button or the SKIP DOWN - button.
- 3 Press the PROGRAM / CLOCK SET button to save the track. Repeat Steps 2 and 3 to program additional tracks up to a maximum of 20 tracks.
- 4 Press the PLAY / PAUSE **▶II** button to begin program playback.

notes: To **CLEAR THE MEMORY** while in the STOP mode, press the STOP **■** button again.



aux-in connection

- 1 Insert one end of the 3.5mm audio cable (not included) into the LINE OUT jack on your external audio unit (e.g. iPad, iPod shuffle, mobile phone, MP3 player, digital media player, etc.) and the other end into the Aux In Jack on rear of this unit.
- 2 To listen to the external audio source, turn this unit on by pressing the STANDBY button, then power on the external audio source. Next press the MODE button to select AUX mode.
- 3 Press play on the external audio source and the sound will playback through the speakers of the home stereo.

note: It is suggested that you unplug the audio cable when you are not listening to the external audio unit.



adjusting the volume, treble and bass

- 1 Press the VOLUME UP (+) or VOLUME DOWN (–) on the remote or on the main unit to increase or decrease the volume.
- 2 To **MUTE THE MAIN VOLUME**: Press the MUTE button on the remote; "MUTE" will appear in the display. Press this button again or either of the VOLUME UP (+) or VOLUME DOWN (–) on the remote or on the main unit to unmute.
- 3 To **ADJUST THE TREBLE**: Press the TREBLE (+) or (–) button on the remote to increase or decrease the treble.
- 4 To **ADJUST THE BASS**: Press the BASS (+) or (–) button on the remote to increase or decrease the bass.

notes: The range for the treble and the bass is –4 to +4.

When this unit is turned off and back on again, the volume will resume at the level which you set before turning the unit off.



setting the time

- 1 With the power off, press and hold the PROGRAM / CLOCK SET button until "12" or "24" Hour blinks in the display.
- 2 Press the SKIP UP + or SKIP DOWN – button to set the unit to the 24 hour mode or 12 hour mode. Then press the PROGRAM / CLOCK SET button and the hours will blink.
- 3 Press the SKIP UP + or SKIP DOWN – button to set the current hour. (If you selected 12 hour mode, be sure to observe the PM indicator to make sure you have set the hour correctly.) Press the PROGRAM / CLOCK SET button again to confirm and the minute digits will blink.
- 4 Press the SKIP UP + or SKIP DOWN – button to set the current minute. Press the PROGRAM / CLOCK SET button and the time will be set.

note: The time will appear in the display when the unit is turned off.



setting the timer

- ① With the unit off, press and hold the TIMER button until the TIMER ON hour blinks in the display.
- ② Within a few seconds, press the SKIP UP + or SKIP DOWN – button to set the TIMER ON hour. Then press the TIMER button again to confirm. Repeat to set the TIMER ON minute.
- ③ Press the SKIP UP + or SKIP DOWN – button to set the desired mode (BT, Tuner, CD). Then press the TIMER button again to confirm.

notes: To **CANCEL THE TIMER**, unit must be in POWER OFF mode. Press the TIMER button and "Timer" will disappear from display. To **STOP THE TIMER**, press the "STANDBY" button.

If you want to use your iPhone / iPod or CD as the source for timer function, please make sure your iPod or iPhone is connected correctly or a CD is loaded properly in the CD compartment.



using the sleep function

- ① While unit is on, press the SLEEP button on the remote control. The unit display will show SLEEP and "90" for approximately 5 seconds, indicating 90 minutes audio playback before the unit automatically powers off.
- ② To select desired time, press SLEEP button repeatedly to display time in 10 minute increments descending from 90 to 10 minutes. Pause at the desired duration. After 5 seconds the duration time will disappear from the display and "SLEEP" will appear on the display.

notes: To **VIEW THE REMAINING** SLEEP time, press the SLEEP button once.

To **CANCEL THE SLEEP** function, repeatedly press the SLEEP button until "OFF" appears on the display.



caring for CDs

- Treat the compact disc carefully. Handle the compact disc by the edges only and avoid allowing your fingers to come in contact with the shiny, unprinted side of the disc.
- Do not attach adhesive tape, stickers, etc. to the compact disc label.
- Clean the compact disc periodically with a soft, lint-free dry cloth. Never use detergents or abrasive cleaners to clean the compact disc. If necessary, use a CD cleaning kit (sold separately).
- If a CD skips or becomes stuck on a section of the compact disc, it is probably dirty or damaged (scratched).
- When cleaning the compact disc, wipe in a straight line from the center of the CD out to the edge of the disc. Never wipe in circular motions.
- This unit is designed to only play compact discs bearing the Compact Disc Digital Audio identification logo. Other compact discs may not conform to the CD standard and may not play properly
- Compact discs should be stored in their cases after each use to avoid damage.
- Do not expose compact discs to direct sunlight, high humidity, high temperatures or dust, etc. Prolonged exposure or extreme temperatures can warp the CD.
- Do not stick or write anything on either side of the CD. Sharp writing instruments or ink may damage the surface.



specifications

GENERAL:

Power Source	DC 9V / 3A
AC Power Supply	AC 100 - 240V ~ 50/60Hz
Power Source (Remote Control).	DC 3V, CR2025 Lithium battery
Speaker.	2 x 6 ohms
Output Power	5W x 2
Dimensions (W x D x H)	13.39" x 7.6" x 5.71" (340 x 193 x 145mm)
Weight	6lbs

RADIO:

Frequency Range (FM)	87.5 – 108 MHz
----------------------------	----------------

CD PLAYER:

Disc Diameter	4.72" (120mm)
Optical Source	Semiconductor laser

BLUETOOTH:

Bluetooth specification	v2.1+EDR
Supported Profile	A2DPV1.2
Range	33 feet (10m) line of sight

USB PORT:

Charging Output	5V/1A
-----------------------	-------

Specifications are subject to change without notice.



FAQs

Q: Why is the USB port not charging my devices?

A: Make sure that the USB plug is firmly connected into the USB port of the Ci302 and your USB compatible device. Also confirm that the Ci302 is plugged in to a power source as the USB charging port will not operate from the backup batteries.

Q: Why will my Nook / netbook device not charge when I connect it to the USB charger?

A: Even though it may be USB compatible, some devices, including the Nook and some larger tablets and devices require a higher output to charge them than the 5V/1.0A USB port on the Ci302 . Please check your device manufacturer's charging specifications as you may be required to only use the specific charger supplied with your device at time of purchase.

Q: Why do I not hear any music when I play the radio?

A: Make sure that a 3.5mm Line-In cable is not plugged into the Line-In jack of the Ci302 as this will automatically switch the unit to AUX even if there is no external audio device connected.

Q: The display is flashing “12:00”?

A: This appears during the initial setup or could be a result of an extended power output or if the Ci302 was unplugged for a long period. Simply follow the steps in the ‘setting the time’ section of this user guide to reset the current time.

For further assistance, please visit our website at hellocapello.com
or contact customer service at support@hellocapello.com or 1-855-896-1795



Life Lab International Ltd.

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Life Lab International LTD. is under license. Other trademarks and trade names are those of their respective owners.