

User Guide

ANC-TWS12 Product Parameter

FCC ID No:2AXPOTWS10 2AXPOTWS11
Load impedance: 32Ω
Operating voltage: earphone 3.7V Charging box 3.7V
Battery capacity: earphone 65mAh Charging box: 430mAh
Frequency range: 2.402G-2.480G
Charging time :1.5 hours
Battery life: 1000 times
Maximum noise deduction: >-26dB
Water proof level: IPX5
Bluetooth version: V5.1
Sensitivity: - 94 dBm
Weight: 6g for single earphone;44g for charging box.

*The above data are all from the laboratory and for reference only.

 
Points for Attention On Battery

The device can be powered by a built-in rechargeable lithium battery. Charge the device for at least 8 hours before first-time use.

- Rechargeable batteries can only be recharged under adult supervision.
- Only the attached Type-C cable can be used to charge the battery. Wireless charging is also possible. Incorrect charging can damage batteries and equipment.
- Do not attempt to open rechargeable batteries or battery packs. There are no usable parts in it.
- Keep the battery out of reach of children. If children swallowed it, please take them to the hospital immediately.
- Do not throw the battery into the fire, otherwise it may explode. Batteries may also explode if being damaged, please handle and disposal it according to local conditions and regulations.

Enter Pairing Mode

When the charging case are opened for the first time,the lights in earbuds flash mean into pairing mode, it takes about 10 seconds

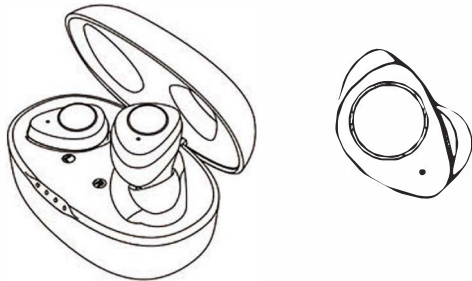

Equipment matching

 
Turn on the "Bluetooth" function of the mobile phone and search "ANC - TWS- S1 " to connect. The prompt "connected" appears after successful pairing. When the device is successfully matched, both the blue and white light will turn off at the same time, then the blue light will turn to slow flash. When replacing the connected device, please disconnect or unpair the device in the bluetooth control panel and enter standby mode after disconnecting.



After taking out the earphone from the charging box, if it is not used for about five minutes, the earphone will automatically shut down to save power.

Charging to The Charging Box

Connect the attached USB type-c cable to the USB interface of the charging device to charge the charging box. It takes about 1.5 hours to fully charge the earphone and charging box.

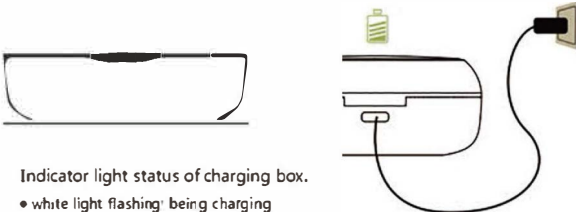


Indicator light status of charging box.

- white light flashing: being charging
- 1 white light on: insufficient power
- 4 white lights on: charging completed

Mobile charging

 Put the earphone into the charging box, and pay attention to the left and right sides. The magnetic suction of the charging box will adjust the earphone to the right position. It takes about 2 hours for the earphone to be fully charged on the left/right. Start Charging will be started once upon the blue light is constantly on.

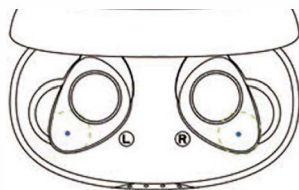

Earphone indicator light status: .

- Blue light is constantly on: earphones are being charged
- Blue light is off: earphones are fully charged

Operation of The Touch Panel

L Left ear

 
- Tap Pause/Play/answer call /hang up call
- Double Click: APT ON → ANC ON → ANC OFF
- Triple Click: Activate Voice Assistant/then click exit
- First press 5s turn it off, then long press 12 seconds to turn on and shut down, restore the factory settings.
- Long press 2S for last song
- Long press 5S to turn it off
- Gaming mode When connected to the phone, press 4 times to enter the gaming mode and another 4 times to exit.

R Right ear

- Tap Pause/Play/answer call /hang up call
- Double Click: APT ON → ANC ON → ANC OFF
- Triple Click: Activate Voice Assistant/then click exit
- First press 5S turn it off, then long press 12 seconds to turn on and shut down, restore the factory settings
- Long press 2S for next song
- Long press 5S to turn it off
- Gaming mode When connected to the phone, press 4 times to enter the gaming mode and another 4 times to exit.



Product Dimensions

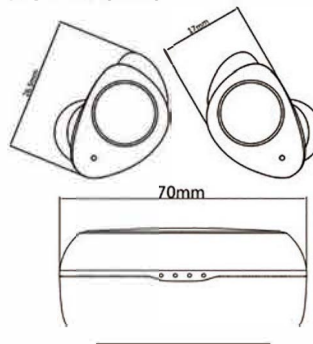

If the device can not work properly, please click the following steps to reset the unit.
If there are only one ear has sound, please put the device in charging case and close it, then open the case again,the earbuds are rematched when earbuds light flashing .
If only one earbuds has voice, mean matching failure, please click the following steps to restore the factory settings this device.
1. Take the earbuds out of the charging case and long press earbuds for five seconds to turn it off.
2. Press and hold the left and right earbuds at the same time. It takes about 12 seconds to turn off the earbuds. please follow these steps to enter automatic pairing mode
A. Simultaneously press the earbuds for five seconds to turn it on, and enter the automatic pairing mode with flashing lights.
B. Put the earbuds back to the charging case, then open the case again, into the automatic pairing mode when the earbuds' lights flashing.

Points for Attention

1.To ensure the normal use of battery, if the earbuds are not used for long time, please put the earbuds into the charging case, so as to avoid loss of power and influence of playing time when the earbuds cannot be automatically shut down in the ANC and Transparent mode.

2.1.The risk of hearing loss can be reduced by following the following safety guidelines when using this product:

When connecting the headset, adjust the volume control to a minimum, and then slowly adjust the volume to a comfortable degree. Keep the volume as low as possible. If the volume needs to be increased, please adjust the volume control slowly. And stop using the speaker immediately if you feel unwell in the ear or if you got tinnitus. Using a high volume for a long period of time will make your ears used to such volume, causing permanent damage to your hearing even without any apparent discomfort.

3.If you are wearing a pacemaker or other electronic medical device, you should seek your doctor's advice before using this product.

4.The packaging contains small parts that can endanger children. Therefore, it should be kept out of the reach of children. Swallowing plastic bags can cause suffocation.

5.Do not attempt to disassemble the product or insert any object into the product by yourself, otherwise it may cause a short circuit, which may lead to fire or electric shock.

6.Customer shall not replace or repair any component. Only authorized dealers or repair service center can open finished products. If any part of the product needs to be replaced for any reason (including normal wear and tear and damage or cracking), please contact the vendor.

7.Avoid rain, dampness or contact with other liquids.

8.If the product is overheating, falling or damaged, or the product falls into a medium liquid, please stop using it.

9.Using headphones while driving may be restricted by local laws. Please consult the local authority. Be careful when using this product when you need to devote yourself to something else.

10.Maintenance of built-in battery. The product is powered by rechargeable batteries. New batteries must be recharged and discharged two or three times before their full function be released. Disconnect from the charger when the battery is fully charged, as overcharging can shorten battery life. When not in usage, the charge in a fully charged battery slowly disappears. Do not place the product near a heat source or expose it to direct sunlight, dust, moisture, rain or mechanical impact. Try to keep the battery temperature between 0°C and 45°C at all times. If the battery is too hot or too cold, the product may not work temporarily, even if it is fully charged.

11.Warning on battery: Improper use of batteries may result in fire or chemical burns. Batteries can explode if damaged.

12.Please refer to the User Manual for Instructions on the charging status indicator lights.

13.When unplugging the power cord or any reinforced parts, please hold the plug and pull it out instead of pulling the cord directly. Do not use the damaged charger.

External Device Connection

*Please use the adapter which is specially provided for this product to charge the battery.

*Disposal of batteries shall be done according to local regulations. Cycle use the battery as much as possible. Do not dispose of batteries as household waste or throw them into fires, so as to prevent them from exploding.

*Unless otherwise specified in this User Guide or the Quick Start Guide, the user shall not remove or replace the battery by himself. Such operations may damage the product.

FCC Caution:

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.