



1/16
SCALE

USER MANUAL



4WD
FOUR-WHEEL DRIVE

14+
AGES

CAUTIONS

(1) Disassemble small parts should be put away, don't let the kid swallow it.
 (2) If the operation site has other radio wave interference, please move the remote control to prevent interference.
 (3) When the remote control power is low, stop the operation immediately.
 (4) Do not dispose of the removed packaging materials, to avoid environmental pollution.

(5) Store your remote control model in a dry and cool place.
 (6) Do not store in a place where near fire and high temperature / humidity.
 (7) If the battery is wetted by water, please wipe off the water thoroughly.

1. PRODUCT CONFIGURATION

2. INSTALL REMOTE CONTROL BATTERY

(1) Push the cover in the direction indicated by the arrow, to open the battery cover (Fig. 1)
 (2) As shown (Fig. 2), install 3.7V "AA" batteries with the correct polarity (battery sold separately)
 (3) Close the battery cover, and push upward (Fig. 3).

ATTENTION

1. When installing the battery, you must place the battery positive and negative terminals with the battery box corresponding indicated terminals.
 2. Do not mix old and new batteries.
 3. Do not mix different types of batteries

3. CHARGE AND INSTALL A RECHARGEABLE BATTERY PACK

(1) First connect the plug of the rechargeable lithium battery pack with the charger port (as shown in Figure 4) (the charger indicator light turns green); then plug the charger into the power socket as shown in (Figure 5). At this time, the charger indicator light is red, indicating that charging is in progress; when the charger indicator light turns green again, the charging time takes about two hours, the charging is finished.

4. CHARGER / BATTERY PACK / CIRCUIT BOARD NOTES AND INSTRUCTIONS

(1) In order to prevent over-voltage charging of the iron-lithium battery pack, the battery may be overheated or damaged or exploded; the charger adopts a voltage-lowering protection device, to avoid the above situation. In order to better protect the battery performance, it is recommended not to make the battery pack continue charging for more than 24 hours, to prevent the battery pack from overheating.
 (2) This battery uses a low voltage, over-discharge protection device. When the battery is over-discharged, the circuit board can be activated to ensure the durability and safety of the battery. In order to better protect the battery performance, it is recommended to turn the racer power switch to the "OFF" position, and remove the battery.
 (3) This circuit board adopts the overheat protection function; when the circuit board overheat protection function is activated, the racer (forward/reverse) function will stop for about 3-4 seconds, and then resume the function.

01

02

5. REMOTE CONTROL PARTS DESCRIPTION AND STEERING FINE-TUNING

(1). Remote control power switch: (Figure 9)
 (2). Remote control parts functions description: (Figure 10)

(2). Steering fine-tuning: Let the racer resume straight forward, when it is unable to travel straight.

6. CONTROL RACER

(1). Install the steering wheel onto the remote control.
 (2). Set the frequency of the remote control and the vehicle: A. When setting up for the first time, the switches of remote control and the vehicle must be turned on at the same time within 2 seconds. When the frequency is correct, the racer and remote control power indicator lights will flash. When the frequency is incorrect, the power indicator light is on all the time. (Figure 13)
 B. If the time is not enough to match the frequency, first turn off the racer and remote control power, and then re-correction.

Note: When the power of the remote control racer and the remote control is low, the power indicator light flashes, so the battery should be replaced or the rechargeable battery pack should be recharged.

(3). Put the finger around the remote control trigger, and when the racer will drive forward, use your finger to push forward the trigger, the car will drive backwards (Figure 14).
 (4). When using the trigger to control the racer, turn the steering wheel at the same time, to control the left/right-turn of the racer.

ATTENTION

- Please pay attention to the polarity, when installing or replacing the battery;
- Non-rechargeable battery is not rechargeable;
- The rechargeable battery pack should be taken out of the racer, before charging;
- When charging the battery, the power indicator is required;
- Do not use old or new batteries or different types of batteries;
- Remove the exhausted battery from the racer
- The power terminal cannot be short-circuited;
- When operating, the hand can not touch the remote control antenna, otherwise the signal will affect the remote control distance, the break off antenna should be handled by an adult.
- This racer is equipped with strong power. When driving at high speed, you can't brake suddenly due to inertia. Please pay special attention when using it.
- When the racer speed slows down, the racer battery is low. Please charge the racer battery according to above ways.
- Connect the charge plug and charging port in a correct way, when charging;
- Please take out the batteries at the remote control and the racer, when not in use for a long time.
- Unpacking is carried out under an adult guidance;
- Keep this information for future reference

71-001	71-002	72-001
Name 171 Racer Cover	Name 171 Racer Cover	Name 172 Racer Cover
Quantity X1 colour yellow	Quantity X1 colour red	Quantity X1 colour green
72-002	73-001	73-002
Name 172 Racer Cover	Name 173 Racer Cover	Name 173 Racer Cover
Quantity X1 colour red	Quantity X1 colour red	Quantity X1 colour purple
74-001	74-002	74-003
Name 174 Racer Cover	Name 174 Racer Cover	Name 174 Racer Cover
Quantity X1 colour green	Quantity X1 colour blue	Quantity X1 colour red

03

04




05




06



07

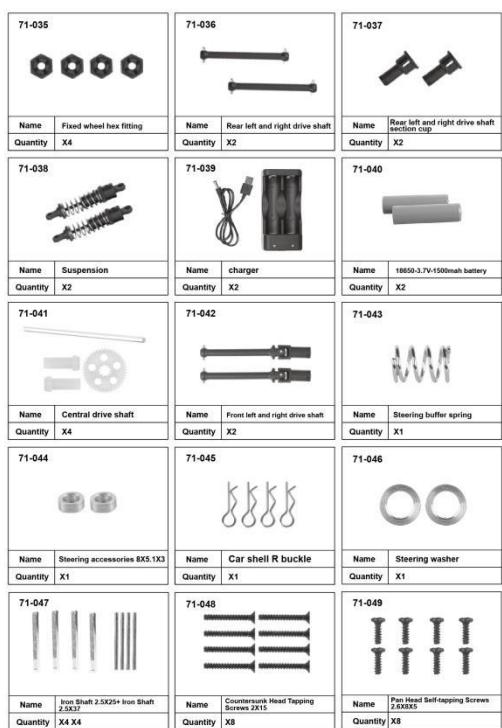

08

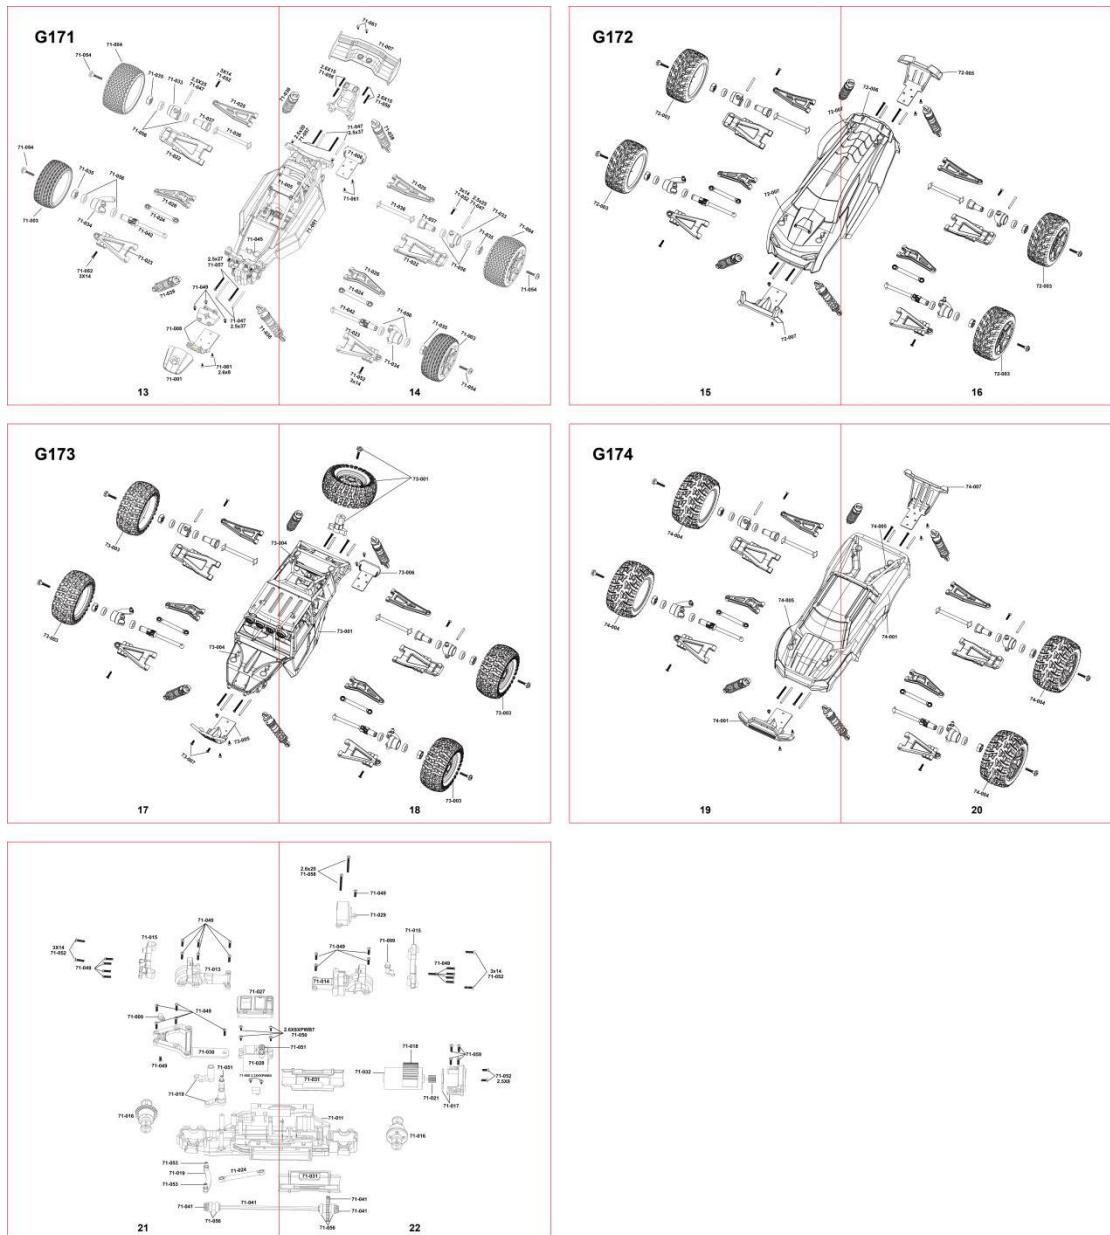

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that

interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Warning: changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment



G171



G172



G173



G174