



Wireless bone conductioncarphones



Instructions for usage and warranty

Operating instructions and Warranty description

Schematic diagram

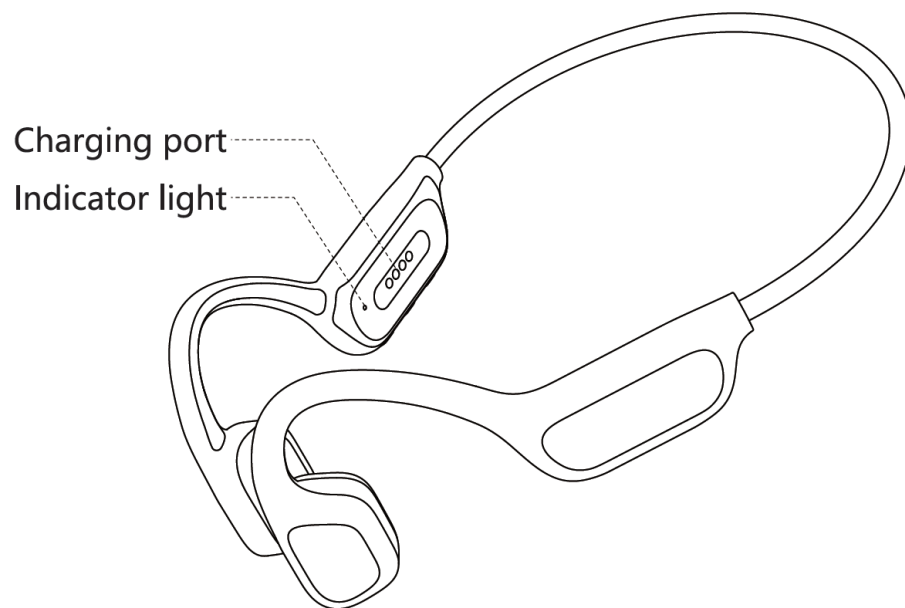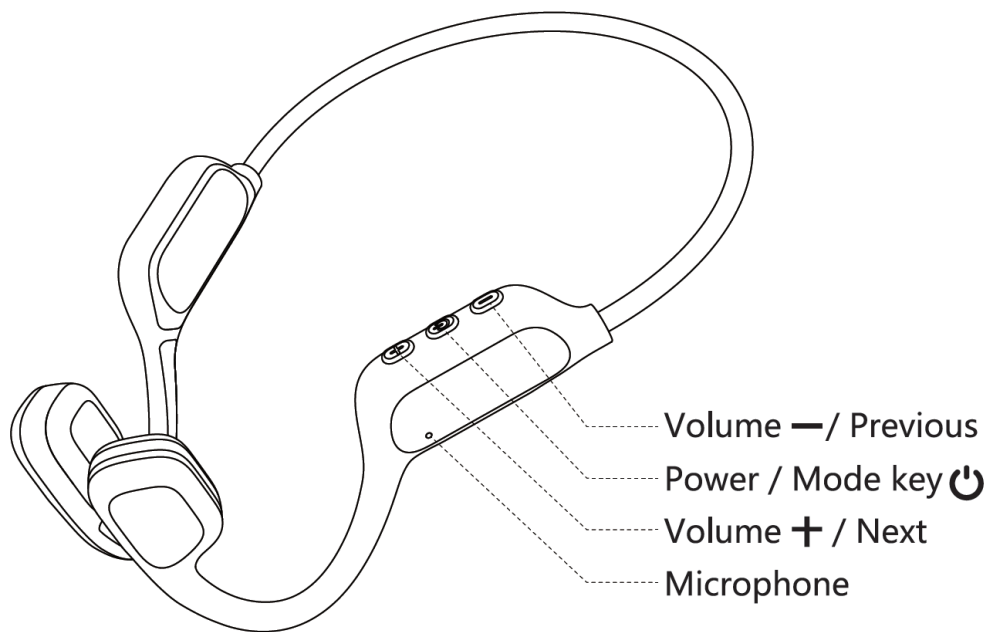

Charge

The headphone uses a built-in rechargeable battery, the first use of the headphone must be fully charged to the battery. In use, if the voice prompts "low battery", the battery is low, and you need to charge the headphone.

The charging cable should be connected to the headset's magnetic charging port , about 2 hours to fill . Charging status indicator is red light, full charge often blue light .

Note Magnetic charging has a positive and negative polarity correspondence, mutual adsorption can be charged normally, and mutual repulsion will not charge or even cause a short circuit.



The rechargeable battery of this product must be properly disposed of for recycling. Please do not place the battery in a fire to avoid explosion.

Power On/Off

Function	Operation	Indicator
On	Press '  'for 3-5s	Light is on
Off		Light is off

Music play

Function	Status	Operation
Increase volume	Play music	Click ‘ + ’
Reduce volume		Click ‘ - ’
Next song		Press ‘ + ’ for 1s
Previous song		Press ‘ - ’ for 1s
Pause		Click ‘ ⏻ ’
Resume	Pause	

Answer the phone

Function	Status	Operation
Answer the call / Hang up	Phone calls in	Click ‘ ⏻ ’
Decline the call		Press ‘ ⏻ ’ for 2s
Volume control	Calling	Click ‘ + / - ’
Phone / Bluetooth earphone switch		Press ‘ ⏻ ’ for 2s

Operating instruction

Wireless pairing: In the off state, press and hold '  ' for 3 to 5 seconds, the indicator light will enter the red and blue light flashing state, and then enter the pairing state. Turn on the Wireless (mobile phone / computer) on the device and search for the device name " X7 Max ". Click the device " X7 Max " to pair and connect.

Wireless / MP3 mode switching: Triple-click '  ' free Switch Wireless and MP3 mode.

Note: Wireless mode is default for boot.

Song download: Connect the magnetic charging cable to the computer and headphones, you can read the USB built-in memory card, and copy the songs from the computer to the USB.

MP3 playback mode switch: When playing audio in MP3 mode, 4-click '  ' to switch between shuffle and sequential playback modes (with memory function)

Game/Music Mode Switching: 5-Click '  ' Switch Game/Music Mode; Game Mode Supports Low Latency (Default Music Mode upon Startup)

AI intelligent voice control

(Phone needs to support voice wake-up function)

Function	Status	Operation
Voice control	Wireless connected	Double click '  '

In the Wireless connection state, Double click '  ' to wake up, after hearing the tone you can voice manipulate the phone, save time to operate the phone, fast and intelligent.

Indicator

Charging	Normally on red light
Finished charging	Normally on blue light
Search for a match	Red and blue lights flash alternately

Product parameter

Model: X7

Wireless: 6.0

Charging time: $\approx$ 2h

Battery: 220mAh

Input: 5V/180mA

Distance: $\approx$ 10m

Operating time : $\approx$ 8h@60% Volume

Profile: HFP, A2DP, AVRCP

Music format support: MP3, WAV, WMA, FLAC, M4A

Care and cleaning

- The headphones should not soak in seawater/brine for a long time, as the magnetic charge part tends to decay. When going to the beach, it's better to protect the magnetic absorption point.
- If not used for a long time, please fully charge it at least once a month.
- Do not disassemble any part of the product without permission. If you find that the earphone is defective, please stop using it.
- Keep the product away from fire, heat, freezing, and chemicals. Do not immerse the earphone in water, and do not wipe it with chemicals such as aromatherapy water.
- Store in a cool, dry place. Do not expose the product to direct sunlight for a long time.
- Please use a charging head with an output of 5V1A or less.

FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.



Product warranty card

This card is a product warranty certificate, please keep it properly

Product name:	Product model:
Purchase date:	Clients name:
Contact:	

Product maintenance records

Date	Bad phenomenon	Solution