

骨传导耳机

使用指南及保修说明

Operating instructions and Warranty description

示意图

音量- / 上一曲
电源键/模式键
音量+ / 下一曲
麦克风

充电口
指示灯

Diagram illustrating the controls and charging port of the JBL Endurance Peak 2 earbuds:

- 音量+ / 上一曲 (Volume Up / Previous Track)
- 电源键/模式键 (Power / Mode Button)
- 音量- / 下一曲 (Volume Down / Next Track)
- 麦克风 (Microphone)
- 充电口 (Charging Port)
- 指示灯 (Indicator Light)

该耳机使用内置可充电电池，首次使用耳机时必须给电池充满电。使用中，若语音“电量低”提示音，表示电池电量低，此时需要给耳机充电。

将充电线连接到耳机的磁吸充电口，2小时左右即可充满。充电状态指示灯长亮红灯，充满电常亮蓝灯。

注意 磁吸充电有正负极对应，相互吸附可正常充电，相互排斥则无法充电甚至造成短路。

! 本产品的可充电电池必须妥善处理，以便回收利用。请不要将电池放入火中，以免引起爆炸。

开关机		
功能	操作	指示灯
开机	长按  3-5 秒	灯亮
关机		灯灭

功能	状态	操作
增加音量	播放音乐	单击“+”
减少音量		单击“-”
下一曲		长按“+”1秒
上一曲		长按“-”1秒
暂停播放		单击“⏸”
恢复播放	暂停播放	

无线配对: 在关机的状态下, 长按  3-5秒, 指示灯进入红蓝灯闪烁状态, 此时即进入配对状态, 打开设备上的设置 (手机/电脑) 搜索名称 “X7 Max”, 选中设备 “X7 Max” 配对连接, 连接成功退出, 即可使用。

 
无线/MP3模式切换: 三击  “切换无线和MP3(TF卡)模式”。


强调: 开机默认无线模式。

歌曲下载: 将原装充电数据线连接电脑和耳机, 即可读取U盘, 将电脑歌曲复制到U盘。

MP3播放模式切换: 在MP3模式放歌时, 四击  “切换 随机播放/顺序播放模式 (带记忆功能)”

游戏/音乐模式切换: 五击  “切换游戏/音乐模式; 游戏模式支持延迟 (开机默认音乐模式)”

功能	状态	操作
语音控制	无线已连接	双击“  ”

说明: 在无线连接状态下，双击“”，听到提示音后，就可以语音操控手机，节约操作手机的时间，快捷又智能。

例如您可以直接操控耳机听：

现在几点钟.....今天天气.....

导航去深圳世界之窗.....打电话给某某.....

打开网易云音乐.....播放刘德华的冰雨.....下一曲.....音量降低.....

打开美团.....打开喜马拉雅.....打开微信.....播放戏曲.....

智能运动，轻松好玩

指示灯


充电中	常亮红灯
充电完成	常亮蓝灯
搜索配对	红蓝灯交替闪烁

型号: X7 Max
充电: $\approx 2h$
输入: 5V/180mA
播放: $\approx 8h$ @60%音量
协议: HFP A2DP AVRCP
音乐格式支持: MP3, WAV, WMA, FLAC, M4A


注意事项

保养与清洁:

- 耳机不能长时间泡海水/盐水, 使用后应用淡水冲洗擦干, 不然充电磁吸部分容易腐蚀。
- 如何长时间不使用, 请至少一个月充满一次电。
- 请不要私自拆装产品上任何部件, 如发现产品有缺陷立即停止使用, 联系销售方售后处理。
- 每次运动后请将耳机表面的水擦拭干净, 特别是充电磁吸位置, 要及时处理干净, 防止汗水, 盐水腐蚀充电口, 影响产品寿命。
- 产品远离火源、热源、冷冻源、化学品、严禁暴力撞击拆装挤压产品。
- 请使用输出5V1A及以内的充电头。

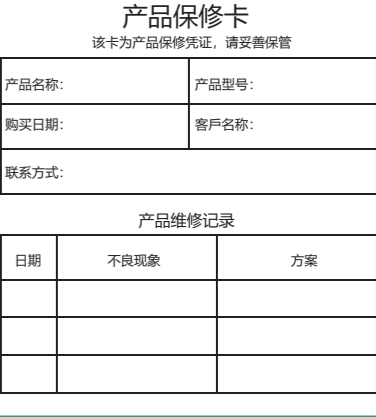

Bone Conduction Headphones



Instructions for usage and warranty
Operating instructions and Warranty description

Diagram illustrating the controls and ports of the JBL Quantum 600 headset:

- Volume -- / Previous
- Power / Mode key ⏻
- Volume + / Next
- Microphone
- Charging port
- Indicator light

The headphone uses a built-in rechargeable battery, the first use of the headphone must be fully charged to the battery. In use, if the voice prompts "Low battery", the battery is low, and you need to charge the headphone.

The charging cable should be connected to the headset's magnetic charging port , about 2 hours to fill . Charging status indicator is red light, full charge often blue light .

Note

Magnetic charging has a positive and negative polarity correspondence, mutual adsorption can be charged normally, and mutual repulsion will not charge or even cause a short circuit.

 The rechargeable battery of this product must be properly disposed of for recycling. Please do not place the battery in a fire to avoid explosion.

Function	Operation	Indicator
On	Press  for 3-5s	Light is on
Off		Light is off

Function	Status	Operation
Increase volume	Play music	Click ' + '
Reduce volume		Click ' - '
Next song		Press ' + ' for 1s
Previous song		Press ' - ' for 1s
Pause		Click ' ⏸ '
Resume	Pause	

Answer the phone

Function	Status	Operation
Answer the call / Hang up	Phone calls in	Click ' ⏻ '
Decline the call		Press ' ⏻ ' for 2s
Volume control	Calling	Click ' + / - '
Phone / Bluetooth earphone switch		Press ' ⏻ ' for 2s

Wireless pairing: In the off state, press and hold '  ' for 3 to 5 seconds, the indicator light will enter the red and blue light flashing state, and then enter the pairing state. Turn on the Wireless (mobile phone / computer) on the device and search for the device name " X7 Max ". Click the device " X7 Max " to pair and connect.


Wireless / MP3 mode switching: Triple-click '  ' free Switch Wireless and MP3 mode.


Note: Wireless mode is default for boot.

Song download: Connect the magnetic charging cable to the computer and headphones, you can read the USB built-in memory card, and copy the songs from the computer to the USB.

MP3 playback mode switch: When playing audio in MP3 mode, 4-click '  ' to switch between shuffle and sequential playback modes (with memory function)

Game/Music Mode Switching: 5-Click '  ' Switch Game/Music Mode; Game Mode Supports Low Latency (Default Music Mode upon Startup)

Function	Status	Operation
Voice control	Wireless connected	Double click '  '

In the Wireless connection state, Double click '  ' to wake up after hearing the tone you can voice manipulate the phone, save time to operate the phone, fast and intelligent.


Indicator

Charging	Normally on red light
Finished charging	Normally on blue light
Search for a match	Red and blue lights flash alternately

Model: X7 Max	Wireless: 5V/1A or less.
Charging time: ~2h	Battery: 220mAh
Input: 5V/180mA	Distance: ~10m
Operating time : ~8h@60% Volume	
Profile: HFP, A2DP, AVRCP	
Music format support: MP3, WAV, WMA, FLAC, M4A	

Care and cleaning

- The headphones should not soak in seawater/brine for a long time, as the magnetic charge part tends to decay. When going to the beach, it's better to protect the magnetic absorption point.
- If not used for a long time, please fully charge it at least once a month.
- Do not disassemble any part of the product without permission. If you find that the earphone is defective, please stop using it.
- Keep the product away from fire, heat, freezing, and chemicals. Do not immerse the earphone in water, and do not wipe it with chemicals such as aromatherapy water.
- Store in a cool, dry place. Do not expose the product to direct sunlight for a long time.
- Please use a charging head with an output of 5V/1A or less.

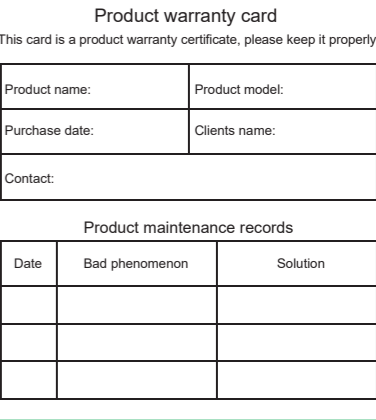

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Radiation Exposure statement

The device has been evaluatec to meel general RF exposure requirement. The device can be used in portable exposure condition without restriction.