


70mm*120mm

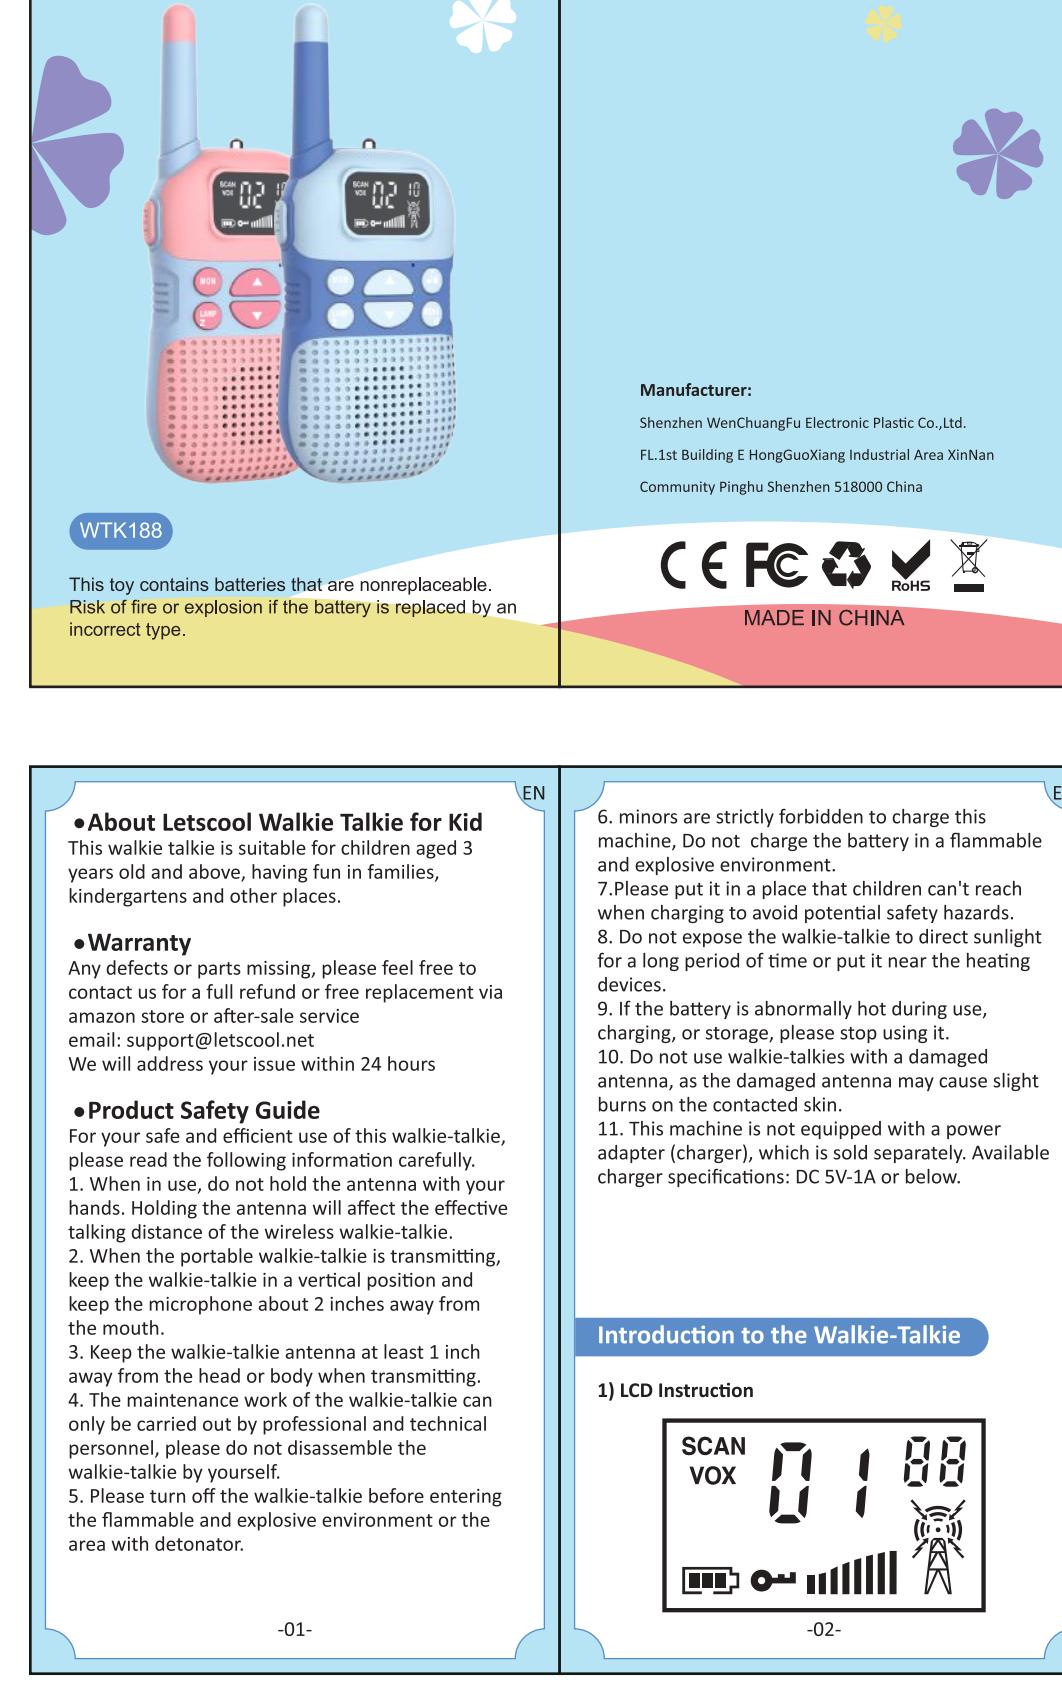

•About Letscool Walkie Talkie for Kid
This walkie talkie is suitable for children aged 3 years old and above, having fun in families, kindergartens and other places.

•Warranty
Any defects or parts missing, please feel free to contact us for a full refund or free replacement via amazon store or after-sale service email: support@letscool.net
We will address your issue within 24 hours

•Product Safety Guide
For your safe and efficient use of this walkie-talkie, please read the following information carefully.
1. When in use, do not hold the antenna with your hands. Holding the antenna will affect the effective talking distance of the wireless walkie-talkie.
2. When the portable walkie-talkie is transmitting, keep the walkie-talkie in a vertical position and keep the microphone about 2 inches away from the mouth.
3. Keep the walkie-talkie antenna at least 1 inch away from the head or body when transmitting.
4. The maintenance work of the walkie-talkie can only be carried out by professional and technical personnel, please do not disassemble the walkie-talkie by yourself.
5. Please turn off the walkie-talkie before entering the flammable and explosive environment or the area with detonator.

-01-


EN

6. minors are strictly forbidden to charge this machine. Do not charge the battery in a flammable and explosive environment.
7. Please put it in a place that children can't reach when charging to avoid potential safety hazards.
8. Do not expose the walkie-talkie to direct sunlight for a long period of time or put it near the heating devices.
9. If the battery is abnormally hot during use, charging, or storage, please stop using it.
10. Do not use walkie-talkies with a damaged antenna, as the damaged antenna may cause slight burns on the contacted skin.
11. This machine is not equipped with a power adapter (charger), which is sold separately. Available charger specifications: DC 5V-1A or below.

EN

Introduction to the Walkie-Talkie

1) LCD Instruction

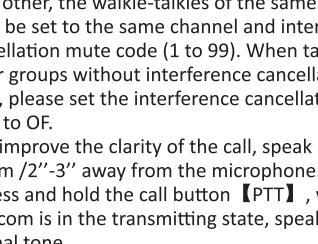

-02-

Indicator	Name	Content
SCAN	Scanning Channel	Display when the two-way radio is turned on, disappear when turned off
VOX	Voice Control	Displayed when it is in voice control operation mode
	Battery	Battery Consumption
	Keyboard Lock	Display when the keyboard of this machine is locked (PTT, switch lights, switch machine, and MON buttons are not restricted when locked)
	Channel	The current channel is displayed, press the [MENU] button, then press UP or DOWN to change
	Volume	Volume display
	Code Channel	Display current CTCSS/ DCS code (with a total of 99)
	Transmitting and Receiving	When receiving, is displayed, when transmitting, is displayed

-03-

EN

2) Overview of the Walkie Talkie

		when the signal is weak, press this key to enter the monitoring state
		Short press this button once to turn on the flashlight function and the flashlight light will stay on; long press to scan the channel.

-04-

EN

Basic operation

1. Power ON and OFF

- In the shutdown state, press and hold the key for more than 2 seconds to turn on the radio. The radio will beep, and all icons will be displayed on the screen instantly. Then display the current channel 2/10 (channel/compression audio)
- In the power-on state, press and hold the key for more than 2S to turn off the radio.

Tips: Etiquette for using wireless walkie-talkies
Press the [LAMP] key to check the channel activity. If you hear quiet noise after pressing the [LAMP] key, it means that the channel is free for use.

2. Communication (transmitting and receiving)

- When using wireless walkie talkies to talk to each other, the walkie-talkies of the same group must be set to the same channel and interference cancellation mute code (1 to 99). When talking with other groups without interference cancellation mute code, please set the interference cancellation mute code to 0F.
- To improve the clarity of the call, speak about 5 to 7.5 cm 2"-3" away from the microphone.
- Press and hold the call button [PTT], when the intercom is in the transmitting state, speak in a normal tone.
- Release the call key [PTT] to end the call, the machine will emit a "boom" ringtone, and the walkie-talkie is in the receiving state.

-06-

Tips: In order to achieve the best performance, it is recommended to stay at least 1.5 meter (five feet) away from each other when using the walkie-talkie to communicate. The best call range: flat and open area.

3.8-level Digital Volume Adjustment

- In the standby mode, short press the [▲] key to enter the volume adjustment mode, the current volume level is displayed on the screen, press the [▲] or [▼] keys to volume up or down.

Tips: Level 1 has the lowest volume and level 8 has the highest volume.

4.Key lock function

- The key lock function can lock the [MENU] key, the up and down buttons (▲▼), and the LAMP key. It helps prevent accidental changes to the settings of the walkie-talkie. Once locked, you can only use the power key (to turn it on and off), PTT transmission function, switch on and off function, and light on and off function.
- To activate the key lock function, press and hold the lock key () for 3 seconds to activate the key lock function, you can see the icon appears on the screen.

5. Monitoring Function

- In the standby mode, when the signal is weak, long press the [MON] key to turn on the monitoring mode, to tell if there is a call, the squelch circuit is turned off, and you will hear background noise (a beep);

-07-

EN

6. Keypad Tone Settings
This function allows you to turn on/off the keypad tone. Steps are as follows:

EN

release the [MON] key to turn off Monitor, you cannot hear background noise.

6.Scanning Function

- Long press the [LAMP] key, the machine will automatically detect the activity of channel, when the scanned channel has a signal, the walkie-talkie will automatically stay on this channel for conversation. 5 seconds after the signal disappear, it will continue to scan the next channel.

7.Mini Flashlight Function

- In the power-on state, short press the [LAMP] key to turn on the flashlight function; short press the [LAMP] key again to turn off.

8.Battery Level Display

- There is a battery indicator in the lower left corner of the display to show the battery level. When the voltage drops to a preset value, the walkie-talkie will automatically shut down to protect the battery. When the battery level is indicated, the two-way radio will play sound alert every 10 minutes or every time you release the call button to remind you to recharge the walkie talkie.

Advanced Operation

1. Set the Working Channel

- In standby mode, press the [MENU] key once to enter the channel selection menu, and the current channel number starts to flash.

-08-

EN

3.2 Press [▲] or [▼] key to select 39-99 (DCS); or [▲] or [▼] key to select 001-02/03

3.3 After selection, press [MENU] key to confirm and enter the next menu, or press [PTT] key to save the new setting.

Tips: The interference cancellation mute codes of this machine include CTCSS (analog sub-audio) and DCS (digital sub-audio).

4.VOX voice control

- Without pressing the TALK launch button, it can be invoked by talking. When you stop talking, the walkie-talkie will automatically stop transmitting. The setting steps are as follows:

- In standby mode, press the [MENU] key 3 times to enter the VOX voice control function, the LCD screen displays 'VOX'.
- Press [▲] or [▼] key to select '001/02/03'.
- Press [▲] or [▼] key to select '001/02/03'.
- Press [▲] or [▼] key to select '001/02/03'.

Tips: The screen will display the VOX icon. According to the noise of the use environment, select the parameters appropriately:
1=High sensitivity, use under low background noise
2=Medium sensitivity, suitable for most applications
3=Low sensitivity, use under high background noise
Note: It is recommended for you to not use VOX in noisy or windy environments.

-10-

5.Call Tone Selection
The call tone is used for notifying the members of the walkie-talkie group that someone wants to speak. Pressing the key will hear the users calling the group. This walkie-talkie has three types of call tones to choose from, the setting steps are as follows:

EN

release the [MON] key to turn off Monitor, you cannot hear background noise.