

For more information, please visit:

www.oraimo.com

 @oraimo accessories

 @oraimoclub

 @oraimomate

True Wireless Sport Earbuds

Model: OEB-E11D

Hereby, ORAIMO TECHNOLOGY LIMITED.

Declares that this True Wireless Earbuds is in compliance with the essential requirements and other relevant provisions of directive 2014/53/EU.

Please read this Guide carefully before using the product

Package Contents



Charging Case x 1



True Wireless Earbud x 2




Type-C Charging Cable x 1



Extra Pair of Eartips x 2


Product Overview

Left Earbud Right Earbud

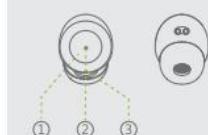

- ① Multi-Function Touch Sensor
- ② Earbud Status Indicator
- ③ Microphone

Product Overview

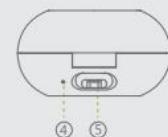

- ④ Case Status Indicator
- ⑤ Type-C Charging Port

Basic Product Specifications

Earbuds

Range: 10m / 33ft

Music play time: Up to 5 hours on single charge, case provides additional 15 hrs

Battery capacity: 35mAh (each earbud)

Charging time: Approx. 1.5 hours

oraimo Lab test results

Charging Case

Battery capacity: 330mAh

Charging time: Approx. 2 hours

*If the charging case is fully charged, it can recharge the earbuds about 3 times.

Using Your Earbuds



Turn On & Pairing

ON



Pairing



* Earbuds will turn on and enter pairing mode automatically when open the charging case.

Earbud Status Indicator	Status
	Flashing white on both earbuds
	Connected to a device

 Make sure the distance of the earbuds and your device is less than 1 metre / 3.3 feet at the first time of connection.

 When turned on, the earbuds will automatically connect to the last connected device if available. If not, the earbuds will enter pairing mode.

 Under any abnormal condition, return the earbuds to the charging case and then take out again.

Turn Off

- 💡 The earbuds will automatically turn off after 5 minutes if no device is connected.
- 💡 When the earbuds are in the charging case and the lid is closed, it will automatically turn off after being fully charged.
- 💡 If the distance of the earbuds and your device is more than 10 metres, it will automatically turn off after 5 minutes.

Charging Your Earbuds & Case

Charging The Earbuds



Earbuds will be charged automatically once they are returned to the charging case with the lid closed.

Charging The Case



Case Status Indicator	
	Steady red (Low level battery)
	Steady orange (Medium level battery)
	Steady green (Full battery)
Status	
Charging	
Fully Charged	

Use the included Type-C charging cable to charge the case.

Case Power Level

Case Status Indicator	
	Steady red (Low level battery)
	Steady orange (Medium level battery)
	Steady green (Full battery)
Status	
Charging	
Fully Charged	

Controls

Music		
	Tap on one earbud twice	Play/Pause
	Tap and hold on the left earbud for one second	Previous track
	Tap and hold on the left earbud for one second	Next track
	Tap on one earbud twice	Answer/End a call
	Tap and hold on one earbud for one second	Reject call

FCC Caution:

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

IMPORTANT NOTE:

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.

—Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

—Consult the dealer or an experienced radio/TV technician for help.

FCC Radiation Exposure Statement:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment.

Call		
 X 2	Tap on one earbud twice	Answer call
 X 1	Tap and hold on one earbud for one second	Reject call

Others		
 X 3	Tap one earbud for three times	Activate Voice Assistant
 X 3	Tap one earbud for three times *Under the TWS Pairing status or no Bluetooth Connected status or single-ear playing status	Clear pairing list of the earbuds
 X 3	Tap and hold on one earbud for three seconds	Game Mode switch*with voice prompt

oraimo
smart accessories

WELCOME GUIDE

*For safety issue, the product remains low capacity during shipping. Please fully charge the product before initial use!

AIRBUDS 3
OEB-E11D
True Wireless Earbuds