



488.5*170mm

Listen to the radio
Turn on the radio and switch it into FM or AM function,rotate the tuning knob to tune a station.

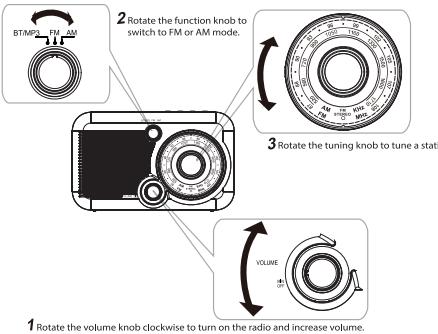

USB, Micro SD Card PLAYBACK
Able to decode and playback all MP3 files which stored in the memory media with USB disk or Micro SD Card.(with max capacity 32GB)

1. Rotate the function knob to BT/MP3 location.
2. Plug in the USB disk or micro SD card.
3. The system will automatically start reading the MP3 files in the USB Storage Media, Micro SD Card.
4. Press **◀ / ▶ / ▶ / ▶** Buttons for PLAY & PAUSE/PREVIOUS/NEXT functions.

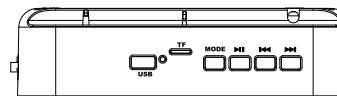


BLUETOOTH PLAYBACK
The function enable to stream audio wirelessly from Bluetooth devices (such as laptops, tablets, smartphones) to the radio.
Before using a wireless device with Bluetooth, please make sure that the device has its Bluetooth radio enabled and switched on.
Then you will need to establish a connection between it and the radio. This process is called "pairing" and you will only have to do it once. Once two devices are paired, they will automatically connect when they detect each other.

1. Rotate the function knob to BT/MP3 location.
2. Unplug the USB disk and Micro card if there are.The radio will be in Bluetooth mode automatically. The Bluetooth indicator will flash quickly.
3. On your bluetooth device,go to its bluetooth setting menu.
4. Have your bluetooth device "search for device" and select the player (T1USB) when it is found. Enter 0000 as a passkey if device ask for one.
5. When pairing is complete,the player is ready to play and the Bluetooth indicator will show steadily.
6. Use the bluetooth device to control playback (e.g., stop, play, next,previous).

Tips: Press MODE button repeatedly to switch to bluetooth mode if there are USB disk and Micro card plug into the radio and you do not wish to unplug,there is prompt for the each mode.

USING AN EARPHONE (NOT INCLUDING)
If prefer to listen with an earphone,plug the earphone into earphone jack on the radio.
Please avoid excessive volume levels for long periods of time when using the earphones.

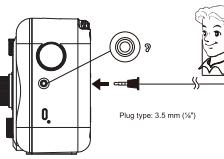

TURN OFF THE RADIO
When finishing using the radio,please turn off it to save power.
Rotate the volume knob anticlockwise till it "click" shut.

SPECIFICATION:

Frequency range	87 – 108 MHz 520 – 1710 kHz
Output jack	Earphone 3.5mm (1/8")
Power	Charger DC 5V Battery 3V (Two R20/LR20, D size, AM-1/UM-1 batteries)
Power consumption	5W
Dimension (WxHxD)	234 x 122 x 82mm (9 1/4" x 4 15/16" x 3 1/4")
Mass	690g (1lb. 8.3oz) (without batteries)

MAINTENANCE:
To clean this unit,use a soft dry cloth.
Before cleaning,please turn off and disconnect it from charger.
If the surfaces are extremely dirty,use a soft cloth dipped in a soap and water solution.
Never use alcohol, paint thinner or benzine to clean this unit.

PORTABLE BLUETOOTH RADIO SPEAKER
Model:T1USB



User Manual Portable FM radio with USB and bluetooth

CAUTION:
Usage of controls or adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.
This unit should not be adjusted or repaired by anyone except qualified service personnel.

PRECAUTIONS BEFORE USE

KEEP THESE INSTRUCTIONS IN MIND:

1. Do not use near water.
2. Clean only with a slightly damp cloth.
3. Do not cover or block any ventilation openings. When placing the device on a shelf, leave 5 cm (2") free space around the whole device.
4. Install in accordance with the supplied user manual.
5. Unplug this device during lightning storms or when unused for a long period.
6. Keep the device away from heat sources such as radiators, heaters, stoves, candles and other heat-generating products. Working and storage temperature is 0~40°C centigrade
7. Avoid using the device near strong magnetic fields.
8. Warning! Never insert an object into the product through the vents or openings. High voltage flows through the product and inserting an object can cause electric shock and/or short circuit internal parts. For the same reason, do not spill water or liquid on the product.

SAFETY PRECAUTIONS

WARNING!

- To reduce the risk of fire, electric shock or product damage,
- Do not expose the unit to rain, moisture, dripping or splashing.
- Do not place objects filled with liquids, such as vases, on this unit.
- Use the recommended accessories.
- Do not remove covers.
- Do not repair this unit by yourself. Refer servicing to qualified service personnel.

CAUTION!

- Remove the batteries if the unit is not to be used for a long time.
- Insert so the poles (+ and -) match those in the unit.
- Do not mix old and new batteries.
- Do not use different types of batteries at the same time.
- Do not break open or short-circuit the battery.
- Do not charge the alkaline or manganese battery.
- Do not use the unit if the cover has peeled off.
- Do not heat or expose to fire.
- Do not leave the batteries in a car exposed to direct sunlight for a long period of time with doors and windows closed.
- Danger of explosion if battery is incorrectly replaced. Replace only with the type recommended by the manufacturer.
- When disposing of the batteries, please contact your local authorities or dealer and ask for the correct method of disposal.
- Small objects
• The knobs (e.g., [TUNING] knob) can come off when pulled hard. To prevent children from swallowing the knob, do not pull it off.

COMPLIANCE WITH FCC REGULATIONS
This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.


Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction

CONTROL LOCATIONS:

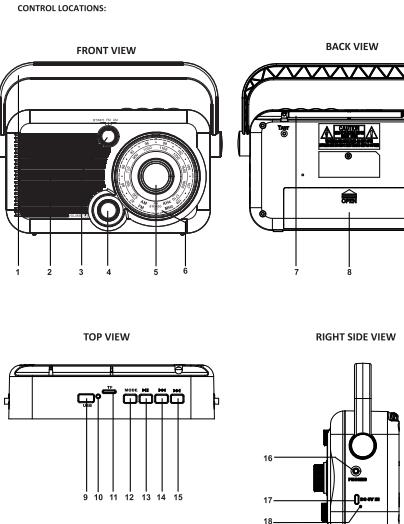


OPERATING INSTRUCTION

Using Dry Cell Batteries (Not Including)
Open the battery compartment and insert dry cell batteries as indicated in the compartment and then replace the battery case.



Battery Charging
Connect the DC 5V in jack on the unit to a 5V USB charger (not including) with the included USB-type C cable. The charging indicator will be in red color during charging. The charging time is around 3~4 hours. When charging finish, the charging indicator will be off. Please remove the unit from charger.

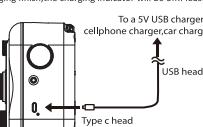

IMPORTANT
If the unit has not been used for a long period of time, the rechargeable battery may be completely discharged into a "sleep mode" condition. This is the characteristic of all the rechargeable battery. For the first time to recharge (to wake up) the battery, it is recommended to charge for a period exceeding 5 hours but not exceeding 24 hours.