




TZ-925

## Rechargeable and Waterproof Remote Dog Training Collar Operation Guide

Please read the entire guide before using

1

### Components

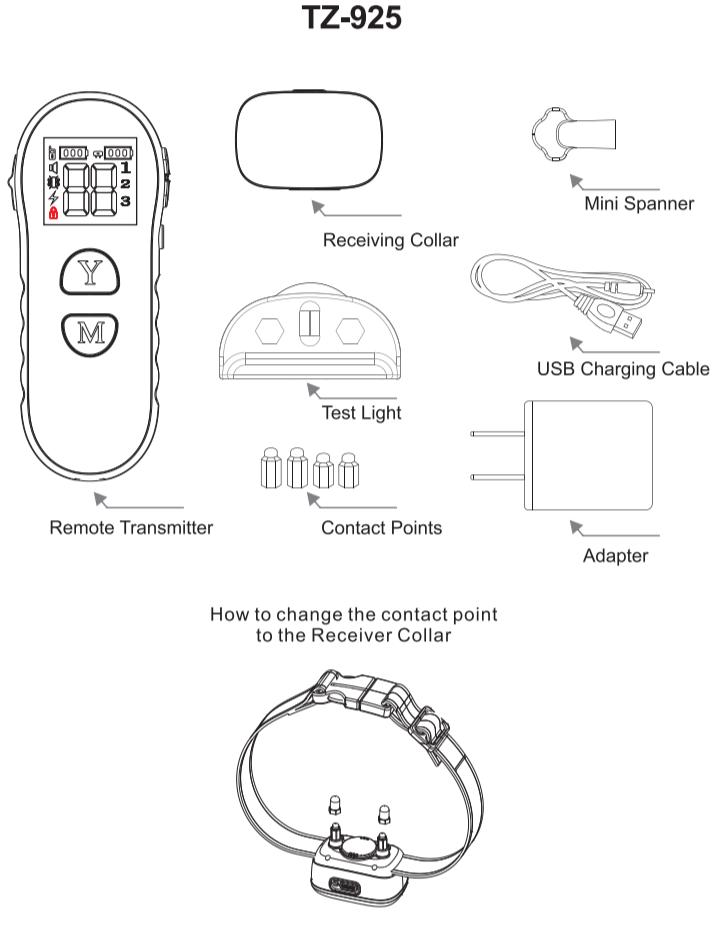

5

**Thanks for choosing the Rechargeable and Waterproof Remote Dog Training Collar.**  
**Our mission is to provide you with the safe tools and techniques to train your dog.**

### Contents


- Features
- How Does the Rechargeable and Waterproof Training Collar Work
- Precautions
- Components
- Key Definition
- Operation Guide
- Step 1 Preparing the Remote Transmitter
- Step 2 Preparing the Receiving Collar
- Step 3 Encoding the Remote Transmitter and Receiving Collar
- Step 4 Testing the Rechargeable and Waterproof Training Collar
- Step 5 Fitting the Receiving Collar to your dog
- Frequently Asked Questions
- General Tips for Training Your Dog
- Common Weights of Different Dog Breeds

### Features

- Rechargeable Remote Transmitter
- Rechargeable and Waterproof Receiving Collar
- 2600 feet (800 meters) remote control range between Remote Transmitter and Receiving Collar.
- Beep Mode activates a correcting tone on the Receiving Collar
- Adjustable vibration intensity level from 1-99 level.
- Adjustable static shock intensity level from 1-99 level.
- Adjustable beep loudness level from 1-9 level.

2

### Key Definition

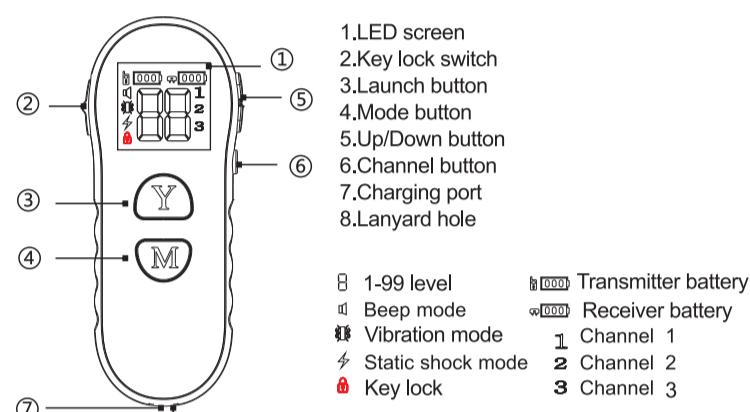

#### 1.LED Screen:

- Beep Mode: When this symbol is displayed, press the Y button to active a Beep tone on the Receiving Collar. Use the Up/ Down buttons to adjust the loudness of the beep from 1 to 9.
- Vibration Mode: When this symbol is displayed, press the Y button to activate Vibration. Use the Up/Down buttons to adjust the intensity of the vibration from 1 to 99.
- Static Shock Mode: When this symbol is displayed, press the Y button to activate Static Shock. Use the Up/Down buttons to adjust the intensity of the vibration from 1 to 99.
- Channel 1/2/3: Select 1/2/3 channel to encode the Receiving Collar 1/2/3.
- Transmitter Battery: When this symbol is on display when charging, means the battery is in full.
- Receiver Battery: When this symbol is on display, means the Transmitter and Receiver encoded successfully.

6

### 8. Power saving modes:

- The Receiving Collar will go into Standby Mode if it's idle for more than 5 mins.
- The Transmitter will go into Standby Mode (B will be light off with 30s, The LED screen will be light off with 3mins). Press any button to re-activate it from Standby mode.

### 9. The Remote Transmitter can be used to control up to 3 Receiving Collars.

### 10. 2 pairs of metal contacts (1 short and 1 long) are included to suit the length of your dog's hair.

### 11. The Transmitter with lock key function.

## How does the Rechargeable and Waterproof Dog Training Collar Work

The Rechargeable and Waterproof Training Collar has been proven to be a safe, comfortable, and effective training system for all dogs weighing over 15lbs. This system allows you to control your dog within a range up to 2600 feet. At the press of a button, the Remote Transmitter sends signal to the Receiving Collar and activates a Beep, a Vibration or a Static Shock correction output. By using the Training Collar properly, you can correct much of your dog's undesired behavior and teach basic and advanced obedience commands.

**Important:** The Training Collar has an effective range up to 2600 feet. Hold the Remote Transmitter horizontally away from your body to achieve the optimum range. Terrain features, weather, vegetation, transmission from other radio devices and other factors may affect the range of the Remote Transmitter.

3

### Precautions

**DO NOT** use this product for aggressive dogs or vicious animals.

#### Risk of skin damage.

It's important to fit the collar properly. A collar that is fitted too tightly or worn for too long may harm your dog's skin. This condition, which ranges from redness to pressure ulcers, is commonly known as bed sores.

#### CAUTION

- Do not let your dog wear the collar for more than 12 hours per 24-hour period.
- If possible, gently reposition the collar on your dog's neck every 1 or 2 hours.
- Never attach a lead to the Receiver Collar, as this would cause excessive pressure on the contact points.
- When using a separate collar to connect a leash, please ensure that it does not put excessive pressure on the electronic collar.
- Examine your dog's neck daily for signs of chafing or soreness.
- If a rash or sore is found, stop using the collar till the injured skin has been healed.
- If the condition persists for more than 48 hours, consult your veterinarian.
- If possible, please use the Beep Mode or Vibration Mode at first, then can try Static shock function.

Please ensure that you charge both the Receiving collar and the Remote Transmitter before using!

To extend the battery life of this product, if you do not intend to use it for a long period of time, please charge them per month.

4

### Operation Guide

#### Preparing the Remote Transmitter:

- Charging the Remote Transmitter with USB Charging Cable.
- Plug the USB Charging Cable into the Charging port.
- Three battery bars of the symbol is running circularly when charging.
- The LED screen will show once its full charged with 2.5 hours. Remove the USB charging cable.

**Low battery indicator:** This symbol will flash 30seconds, then transmitter will be turned off automatically.

#### How to use the Remote Transmitter

- Push down the key lock switch, the LED screen light up.
- Use the Mode button to cycle through different modes. The LED screen will display which mode is currently active (). Press the Y button to launch Beep, Vibration or Static Shock signal.
- Press the Up/ Down buttons to set the intensity of the vibration or shock, or adjust the loudness of beep.
- Select different channels for 1 or 3 Receiving Collars.


**Power Saving Mode:** the Remote Transmitter will go into Standby Mode if it is idle for 3 mins. The LED screen on the Remote Transmitter will not display anything in this case (B will be light off with 30s, The LED screen will be light off with 3mins), press any button to re-activate it.

**Lock Key function:** Push up the lock switch, the will flash for 6 seconds then it goes into lock mode, and it won't be activated anymore, the will flash for 6 seconds again if any button be pressed. Push down the lock switch, the Transmitter will become active again.

8

#### Contact Points:


Deliver vibration / safe static correction

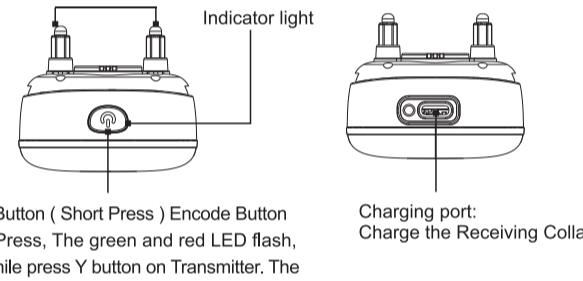

7

#### Testing the Vibration Function

- Press the "Mode" button on Remote Transmitter to select Vibration mode. Press the launch ( ) button to launch vibration signal. If the Receiving Collar vibrates, the Vibration Function is working correctly.
- Press and hold the Y button, the Receiving Collar will continuously vibrate. Press and hold the Y button for more than 8 seconds, the number on LED screen will flash, and the Transmitter stops launching signal. At this time, pressing any button is invalid. After 30 seconds, The transmitter will become active again.
- The intensity of the Vibration can be adjusted by pressing Up/Down button ( ) from level 1 to 99.

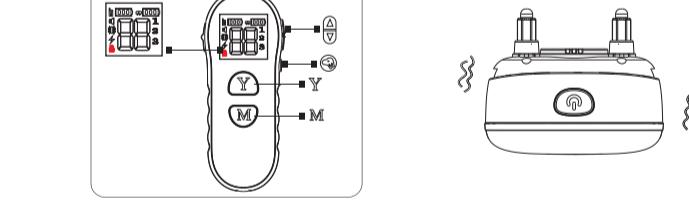


#### Testing the Beep Function

- Press the "Mode" button on Remote Transmitter to select Beep mode. Press the launch ( ) button to launch beep signal. If the Receiving Collar beeps, the Beep Function is working correctly.
- Press and hold the Y button, the Receiving Collar will continuously beep. Press and hold the Y button for more than 8 seconds, the number on LED screen will flash, and the Transmitter stops launching signal. At this time, pressing any button is invalid. After 30 seconds, The transmitter will become active again.




- The loudness of the beep can be adjusted by pressing Up/Down button ( ) from level 1 to 99.

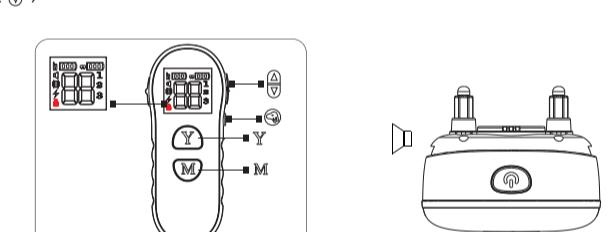

#### Fitting the Receiving Collar to your dog:

- Center the Contact Points under your dog's neck(A).
- The Receiving Collar should be positioned snugly around your dog's neck.

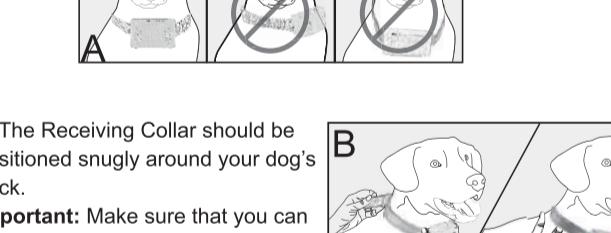

**Note:** Choose the correct Contact Points to suit the length of your dog's hair. If your dog has long hair or a thick coat, use the longer Contact Points.

12

### General Tips for Training Your Dog

- Eliminate one behavioral problem or teach one command at a time. If you move too fast with the training, your dog may become confused.
- Be consistent. Give your dog a single Beep, Vibration, or Static Shock for each misbehavior.
- Do not over-correct your dog. Use a few stimulations as possible during training.
- Unless you can supervise him/ her, it is recommended that you restrain your dog from environments in which he/ she has a history of misbehaving. However, setting up a training session in this case can dramatically improve your chances of success.
- If your dog reacts to the training by hiding or acting fearfully, redirect his/her attention to a simple and appropriate behavior, such as the "Sit!" command.

#### Common Sizes of Different Dog Breeds

Size	Neck (cm)	Chest (cm)	Back Length (cm)	Type
Mini	20-22	25-30	19	Chihuahua, Yorkshire Terrier
Small	20-24	29-36	23	Chihuahua, Yorkshire Terrier, Poodle, Pomeranian
Medium	23-28	35-42	28	Maltese Dog, Shih Tzu
Large	27-31	41-47	31	Miniature Schnauzer, Pekingese
Large	30-34	46-53	35	Schnauzer, English Cocker Spaniel
Large	33-37	52-59	40	Beagle
	43-48	76-84	60	Husky
Huge	47-52	88-97	65	Labrador Retriever
	52-62	92-100	70	Golden Retriever, Old English Sheepdog

13

14

15

### Common Weights of Different Dog Breeds

Large Dogs(Body height over 61cm, weight over 88lbs)

Medium Dogs( Height 40.7-61cm, Weight 24-86lbs)

Small Dogs(Height 25.5-40.7cm, Weight 8-22lbs)

Mini Dogs(Height under 25cm, Weight under 8lbs)

#### FCC Warning

This device complies with Part 15 of the FCC Rules.

Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

**NOTE 1:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

**NOTE 2:** Any changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

16