

尺寸: 105x145mm 157g 双铜+内页 80g书纸+哑胶




Please Read This Manual Carefully Before Use

Contents

Packaging List	1
Product Specifications	2
Main Features	3
How Does the Training Collar Work	4
Important Statement	5
Transmitter Introduction	6
Receiver Introduction	7
Charging Instructions	8
Operation Instructions	9
Receiver Fitting Instructions	14
Pairing Instructions	15
Frequently Asked Questions	16
Troubleshooting	17
Training Tips	18
Common Weights for Different Size Dogs	18
Common Sizes for Different Breeds of Dogs	19

Packaging List

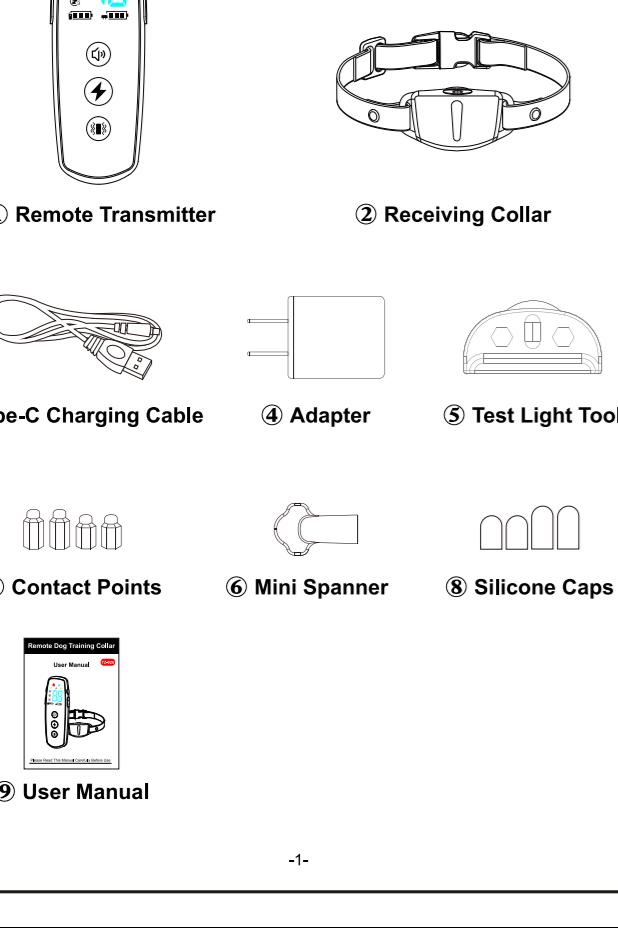

Product Specifications

Product Name:	Remote Dog Training Collar
Product Model:	TZ-926
Material:	ABS+PC
Control Range:	800M(2600FT)
Charging Method:	Type-C
Transmitter/ Receiver Charging Time:	2.5 Hours
Transmitter/ Receiver Standby Time:	180 Days
Transmitter Waterproof Rating:	Not Waterproof
Receiver Waterproof Rating:	IPX7 Waterproof
Working temperature:	-30°C ~ +70°C
Storage temperature:	-30°C ~ +85°C
Relative Humidity:	20%~90%

Main Features

1. The transmitter adopts a large LCD color screen display.
2. Receiver is designed with safe LED light for locating your dog at night.
3. Remote control range up to 800M(2600FT).
4, 4 Working modes: beep, vibration, shock, LED light
5, 1-9 Levels beep loudness adjustable
6, 1-16 Levels vibration or shock intensity adjustable
7, 7 LED Light mode adjustable (light off--red light steady on--red light flashing--green light steady on--green light flashing--blue light steady on--blue light flashing)
8, One Receiver can control up to 3 receiving collars.
9, The Receiver is IPX7 waterproof, and the transmitter is not waterproof.
10, LCD power display, screen can display transmitter and receiver battery levels.

11. Power saving mode design with automatic standby function.

• Without any activity, the Transmitter will switch to Standby Mode () will turn off within 30s, the LCD screen will turn off within 3 minutes). Press any button to turn it from Standby mode.
• The Receiving Collar will go into Standby Mode if it is idle for more than 5 mins. Any movements will activate the Receiver. If the Receiver does not activated when you press the () button on Transmitter, and the Red LED on the Receiving Collar is not on, then gently shake the Receiving Collar, it will be activated.
12. The Transmitter has lock button, no more false triggering.
• Push up the lock switch, the () will be flashing for 6 times then it switches into key lock mode, and it won't be activated anymore. The () will start flashing for 6 times again if any button is pressed, to activate the Transmitter again, please push down the lock switch.

13.

14.

15.

16.

17.

18.

19.

20.

21.

22.

23.

24.

25.

26.

27.

28.

29.

30.

31.

32.

33.

34.

35.

36.

37.

38.

39.

40.

41.

42.

43.

44.

45.

46.

47.

48.

49.

50.

51.

52.

53.

54.

55.

56.

57.

58.

59.

60.

61.

62.

63.

64.

65.

66.

67.

68.

69.

70.

71.

72.

73.

74.

75.

76.

77.

78.

79.

80.

81.

82.

83.

84.

85.

86.

87.

88.

89.

90.

91.

92.

93.

94.

95.

96.

97.

98.

99.

100.

101.

102.

103.

104.

105.

106.

107.

108.

109.

110.

111.

112.

113.

114.

115.

116.

117.

118.

119.

120.

121.

122.

123.

124.

125.

126.

127.

128.

129.

130.

131.

132.

133.

134.

135.

136.

137.

138.

139.

140.

141.

142.

143.

144.

145.

146.

147.

148.

149.

150.

151.

152.

153.

154.

155.

156.

157.

158.

159.

160.

161.

162.

163.

164.

165.

166.

167.

168.

169.

170.