

## Important Safeguards

READ ALL INSTRUCTIONS BEFORE USING.

**DANGER** To reduce the risk of electrocution.

Do not use while bathing.


Do not place or store product where it can fall or be pulled into a tub or sink.

Do not place in or drop into water or other liquid.

Do not reach for a product that has fallen into water. Unplug immediately.

## USER MANUAL

■ ALB-RF5805

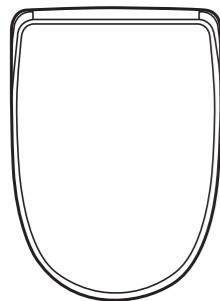


### TABLE OF CONTENTS


Important Safeguards	2
Grounding Instructions	4
Name of Parts	5
Installation method	6
How to use	9
Maintenance	10
Troubleshooting	11
Specifications	13
Warranty	14

- This product was manufactured for household use only.
- Read all operating instructions before installation and use.
- Please save this operating instruction manual and place in an easily accessible location.
- External appearance and specifications are subject to change for improvement of product without notice.

## Name of parts

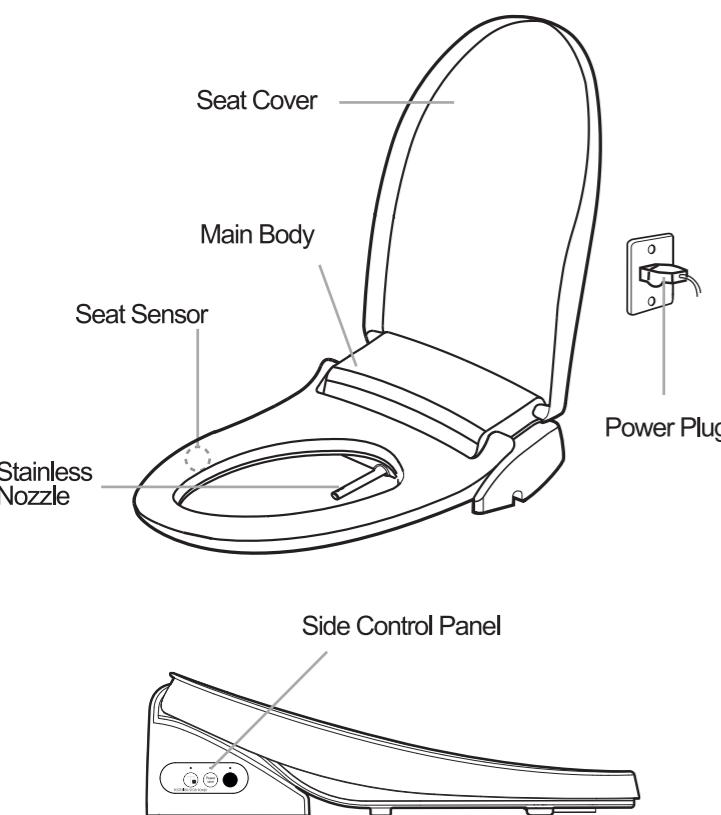

## Installation method

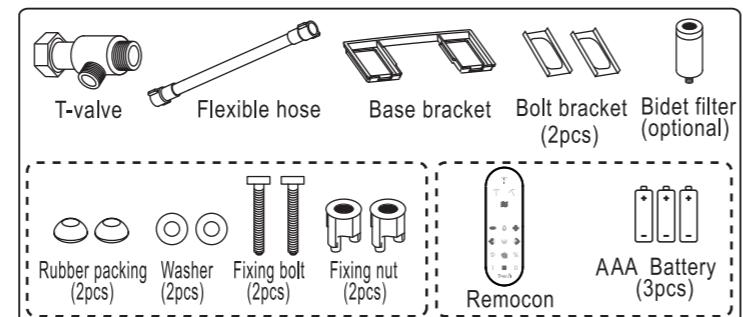


### Before installation

- Read the instructions carefully before installing.
- Plug in only after complete installation then supply water.

### Installation procedure

#### 1 Separate water supply hose

- Turn the water supply valve clockwise to lock, and separate the toilet hose using a spanner.

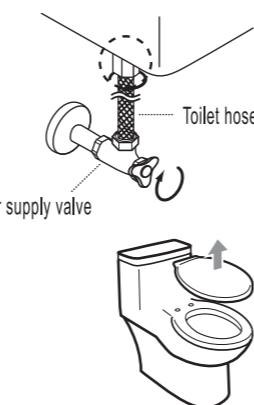

#### 2 Remove the existing toilet seat

- Unfasten the nut and remove the toilet seat.
- Save the old toilet lid and nuts for reinstallation later.



## Important Safeguards

**WARNING** To reduce the risk of burns, electrocution, fire or injury to persons.

- Never use while sleeping or drowsy.
- Never drop or insert any object into any opening or hose.
- Do not use outdoors, or operate where aerosol(spray) products are being used or where oxygen is being administered.
- Do not pour or spray water on to the unit.
- Do not use steam cleaner.
- Keep the unit away from fires or inflammable substance.
- Do not connect to the industrial water supplies.
- Caution against low temperature burns.
- New hose-sets supplied with the appliance are to be used and that old hose-sets should not be reused.

 
**CAUTION** To reduce the risk of injury to persons or damage to the product or the property.

- Do not place heavy objects or step on the unit. It may cause product damage or injury.
- When cleaning the unit, do not use any chemicals. Clean the unit with moist, well-wrung soft cloth. For excessive stains, use soft cloth moistened with mild dish-wash detergent and wipe out with dry cloth. It may cause product damage.
- Do not slam down the lid. It may cause product defect.
- Do not lean on the lid. It may cause product defect.
- When not in use for a long period of time, disconnect the power plug and drain the water tank. Tank water may be contaminated and cause skin troubles.
- Do not twist or pull the connection hoses. It may affect water supply or cause water leakage.
- Do not cover up the warm air outlet or insert hands or other objects. It may cause burn or electric shock.
- Do not operate the unit during product malfunction. Disconnect the power plug and call the authorized service center. It may cause fire or electric shock if the unit is operated while it is out of order.

3


### 3 Connect T-valve

- Install T-valve as shown





### 4 Insert the base bracket

 - Align the base bracket groove with the toilet seat hole.
- Insert the fixing bolt into the base bracket and toilet seat hole.





### 5 Insert the bidet body

- Mount the main bidet into the fixing holes.
- Align the front of the bidet body and the front of the toilet before fastening the nuts.

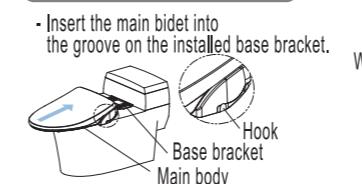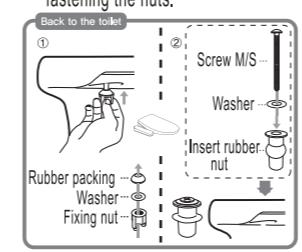

### 6 Connect the flexible hose

- Connect the flexible hose to the T-valve and the main body. Turn the water supply valve counterclockwise to allow water flow.

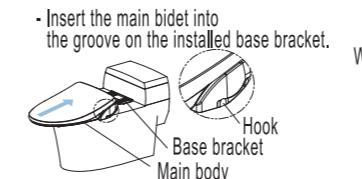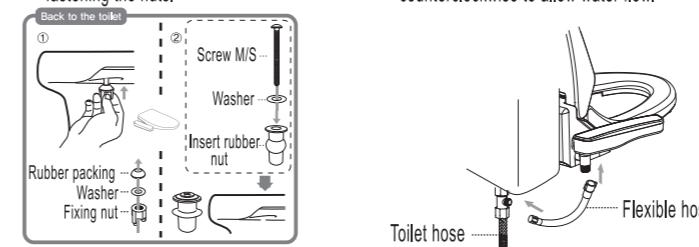

### 7 Operation check

- Turn the water supply valve counterclockwise to check for water leakage.
- Connect the power plug into electrical outlet.
- Check the function for each type of use.

## Grounding Instructions

**WARNING** Improper use of the grounding plug can result in risk of electric shock.

This product is for use a nominal 120v circuit and a GFCI (ground fault circuit interrupter) receptacle is required for use with this product. Do not use this product with an ungrounded outlet. Do not use an extension cord with this product.

If you do not have a GFCI receptacle, contact a qualified electrician to have installed.

### Grounded Outlet

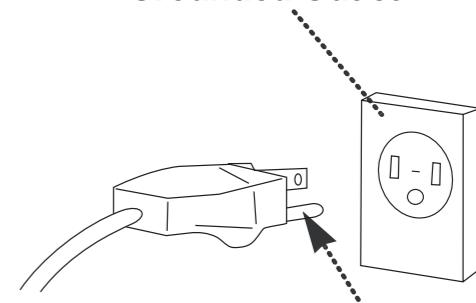


Figure A

4

### Memo

## How to use

### Massage

- Press the Massage button during Posterior/Feminine function, water pressure pulsate from strong to soft.
- Press the button again, then Massage function stops.

### Posterior / Move

- Press Posterior/Move button, Wash function works.
- Press the button again during using this function, Move (Oscillation) function works.
- Press the Move again, then Move function stops.

### Dry

- Use this after using wash function.
- Sweep the water with toilet paper before using dry function for pleasant using.
- The Dry function stops in 3minutes.

### Water pressure / Dry temperature

- 5 levels of Water pressure / Dry temperature.

### Nozzle position

- Control Nozzle position forward or backward.

### Nozzle Sanicare

- When pressing the button, it automatically sterilizes the nozzle for 40 secs. (Only works when the seat is idle)

### Bowl Sanicare

- When pressing the button, it automatically sterilizes the toilet bowl for 45 secs. (Only works when the seat is idle)

### Nozzle clean

- Press the button, then the nozzle extend out for cleaning.
- Press the button again, then the nozzle return to original position.

### STOP

- Press Stop button when you want to stop the function.

9

## Specifications

Item	Description								
Model	ALB-RF5805								
Power rating	AC120V 60Hz 1270W								
Ambient temperature	0~40 °C								
Water supply	Direct water connection								
Water pressure	98~735Kpa								
Wash	<table border="1"> <tr> <td>Posterior wash</td><td>Max 0.7 L/Min</td></tr> <tr> <td>Feminine wash</td><td>Max 0.8 L/Min</td></tr> <tr> <td>Exclusive wash</td><td>Max 0.75L/Min</td></tr> </table>	Posterior wash	Max 0.7 L/Min	Feminine wash	Max 0.8 L/Min	Exclusive wash	Max 0.75L/Min		
Posterior wash	Max 0.7 L/Min								
Feminine wash	Max 0.8 L/Min								
Exclusive wash	Max 0.75L/Min								
	<table border="1"> <tr> <td>Heater capacity</td><td>1200W</td></tr> <tr> <td>Tank capacity</td><td>0L</td></tr> <tr> <td>Water temperature</td><td>Room temp - 40°C</td></tr> <tr> <td>Safety device</td><td>Thermal Fuse, Thermostat,Water Level Sensor</td></tr> </table>	Heater capacity	1200W	Tank capacity	0L	Water temperature	Room temp - 40°C	Safety device	Thermal Fuse, Thermostat,Water Level Sensor
Heater capacity	1200W								
Tank capacity	0L								
Water temperature	Room temp - 40°C								
Safety device	Thermal Fuse, Thermostat,Water Level Sensor								
Dryer	<table border="1"> <tr> <td>Heater capacity</td><td>250W</td></tr> <tr> <td>Air temperature</td><td>Room temp - 55°C</td></tr> <tr> <td>Safety device</td><td>Thermal Fuse, Thermostat</td></tr> </table>	Heater capacity	250W	Air temperature	Room temp - 55°C	Safety device	Thermal Fuse, Thermostat		
Heater capacity	250W								
Air temperature	Room temp - 55°C								
Safety device	Thermal Fuse, Thermostat								
Heated seat	<table border="1"> <tr> <td>Heater capacity</td><td>55W</td></tr> <tr> <td>Seat temperature</td><td>Room temp - 40°C</td></tr> <tr> <td>Safety device</td><td>Thermal Fuse</td></tr> </table>	Heater capacity	55W	Seat temperature	Room temp - 40°C	Safety device	Thermal Fuse		
Heater capacity	55W								
Seat temperature	Room temp - 40°C								
Safety device	Thermal Fuse								
Power cord length	1.2M								
Product dimension	392mm x 535mm x 140mm								
Product weight	3.5kgs								
Deodorizer	0								

13

## Maintenance

### Use Power save

- Press the Power save button to save energy while no use.
- Press the button once(general saving mode), then LED(green light) turns ON, maintains the preset temperature for 30minutes after stand up after that maintains water heater OFF, seat temperature at 30°C, (water heater & seat heater OFF in 24hours)
- Press the button twice(strong saving mode), then LED(red light) turns ON, water heater & seat heater OFF.
- To stop Power save function, press the button to turn LED off.
- In case user sit down while Power save mode, then seat sensor turns ON, water heater and seat heater start working automatically up to the preset temperature. (It takes 5minutes to get to the preset temperature)
- When user stand up, the seat sensor turns OFF, water heater and seat heater automatically return to Power save mode.
- Washing or Dry function can work under Power save mode.

### Clean the Nozzle

- Use soft cloth or toothbrush to clean the nozzle.
- Do not use Abrasive, Volatile detergent, Acid/Alkaline detergent. It may cause breakage or trouble.

### Nozzle clean (Automatic)

Press the Nozzle clean button under seat not occupied, then the nozzle extend out for self-cleaning for 2minutes.

### Nozzle clean (Manual)

- Press the Nozzle clean button for 3seconds.
- Nozzle extends out for 2minutes.
- Clean the nozzle using toothbrush.
- Wipe the nozzle ambient with soft cloth or brush.

- Do not pull out or push the nozzle forcibly.
- Nozzle clean function does not work when seat occupied.
- Nozzle clean function does not work in Child mode.



10

## Warranty

### Product Warranty Card

- We warrant our products to be free from manufacturing defects under normal use and service for a period of one(1) year after purchase. This warranty is extended only to the original purchaser.
- For product defect, please contact your vendor or our service center.

Product Name	Model Name
Date of Purchase	Serial Number
Name of Purchase	Duration of Warranty

### < Free After-sales Service Regulations >

- During the duration of the warranty period, if product defect occurs during normal application as stated in the Instruction Manual, Cautionary Notes, Direction Labels, etc., the product is applicable for after-sales service free of charge.
- Even during the warranty period, after-sales service is not applicable free of charge in case of the following conditions :

- Damage occurring from customer negligence or fault, and defect or damage occurring from wrongful repair or alteration.
- Defect or damage occurring from fire, gas, flood, earthquake, lightning, other natural calamities, pollution, or abnormal electrical power.
- Defect or damage occurring from outside of normal household usage, (long term public usage, used inside a vehicle, installed inside a vessel, etc.)
- Defect or damage occurring from transportation of mistreatment after purchase.
- Defect or damage occurring during removal after installation.
- Wearing of consuming parts,(Packing, Filters, etc.)
- Product reinstallation by customer request.
- Read the Instruction Manual carefully before requesting for an after-sales services since charges will be invoiced for faulty service call visits.

ACE LIFE CO., LTD.

## Troubleshooting

When you think the product is out of order, refer to the following for immediate measures.

### Power supply

Trouble	Possible Causes	Solution
The unit is not working	Isn't the power out or isn't the circuit breaket off?	Wait until the power is restored. Or turn on the circuit breaker.
	Isn't the operation lamp on the display panel of the main body off?	Plug the power plug in the outlet.

### Posterior wash, Feminine wash, Exclusive wash function

Trouble	Possible Causes	Solution
Water pressure is weak	Isn't the water pressure set to low level?	Adjust the water pressure to higher level.
Water is cold	Isn't the temperature set to a low level? Or is it turned off?	Adjust the water temp on the control panel.
	Isn't it in power save mode?	The water temperature is set lower. Press the Power save again.
Water spray stops during use.	The washing stops 90seconds after pressing the Posterior,Feminine and Exclusive button.	Press the Posterior,Feminine and Exclusive button one more.
	Seat sensor may not touch human body.	Check the position of seat sensor on page 5.

11

### Specifications for Remote Controller

Model: IPX7-REMO  
FCC ID: 2AY48IPX7-REMO

### FCC Information to Remote Controller User

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

### Caution

Modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

### FCC Compliance Information : This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment.

### Heated seat

Trouble	Possible Causes	Solution
The seat dose not warm up.	Isn't the temperature of seat set to OFF or low level?	Control the seat temperature on control panel.

### Seat sensor

Trouble	Possible Causes	Solution
The posterior wash or deodorant function works without sitting on the seat.	Isn't the seat wet or occupied by wet towel?	Wipe water out. Remove the wet towel.

### Power Save

Trouble	Possible Causes	Solution
Power save is not working.	Isn't the unplugged? Or is't the power out?	Reset the setting by pushing the power save button from the control panel

### Self diagnosis

Trouble	Indication	Symptom
Water supply stop, or water level sensor faulty		Water not spray, warm water not spray
Water temperature sensor disconnected,short circuit		Warm water not spray
Seat temperature sensor disconnected,short circuit		Seat not heated

12

## Memo