


USER MANUAL

User manual cover with graphics positioned behind product tray

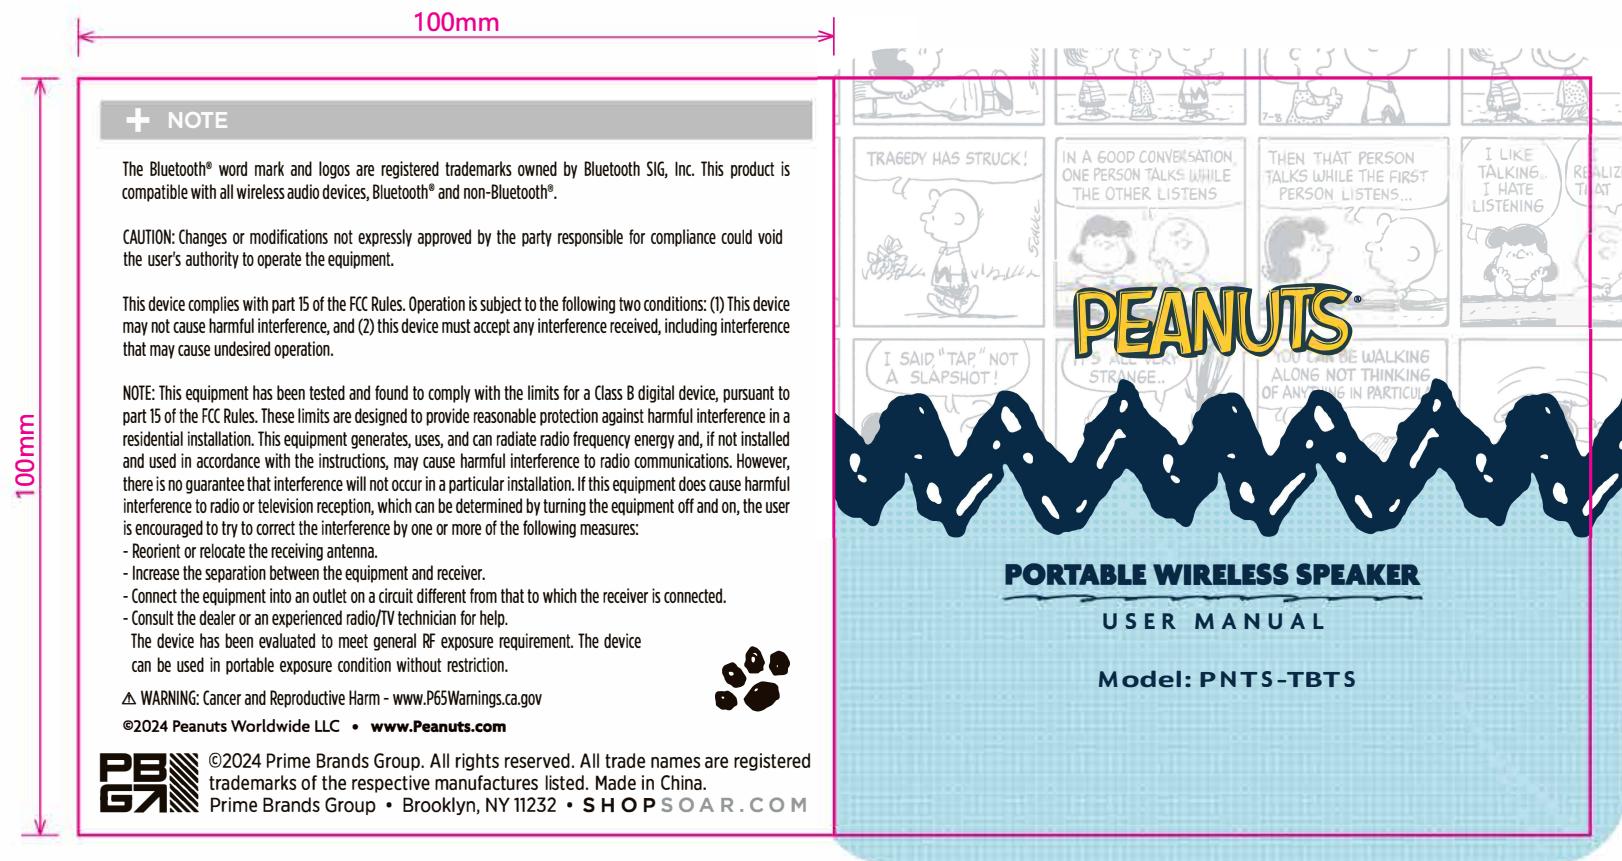

PEANUTS

PORTABLE WIRELESS SPEAKER

Bluetooth

Thank you for choosing the Peanuts Wireless Speaker. The ultimate companion for your on-the-go music needs! With its compact size and fun design, this speaker delivers impressive sound wherever you take it, ensuring your tunes match your style no matter the occasion. Please carefully review this manual before use.

Includes: Wireless Speaker, Type C Charging Cable, and User Manual

PRODUCT KEY

1. On / Off Switch
2. LED Indicator Light
3. Type C Charging Input

OPERATION

Slide the power switch on the bottom of your speaker to the on position. The LED indicator light will turn blue and the speaker will make a tone confirming power on. After 10 seconds the blue light will begin to flash signifying Bluetooth™ pairing mode. To turn your speaker off, slide the power switch to the off position.

On your Bluetooth™ compatible audio device open the Bluetooth™ menu and select "PNTS-TBTS" from the device list when it appears. If you are prompted to enter a password, enter "0000". Once connected your speaker is ready for use. Use your audio device or smart phone to play, adjust volume, and control your desired music. Once you have successfully connected to a smart phone or Bluetooth™ audio player the speaker will automatically connect to that device when powered on. A voice announcement will sound to indicate the pairing. To connect another device, disconnect using the Bluetooth™ menu of the paired device.

SPECIFICATIONS

Speaker : ZW
Battery : 230 mAh (DC5V)
Bluetooth Version : 5.3
Working Voltage: 5V

Wireless Distance : 30ft (10m)
Play Time : 2 hours
Charge Time : 1 hour
Working Current: 0.5A

CHARGING

Plug one end of the charging cable into the Type C port on your speaker and the other end into a suitable 5V power outlet (Computer port or wall charger). The LED indicator will flash red as charging and turn off when finished. Disconnect your speaker when fully charged.

WARNING

This product is for indoor use only. This device is not a toy and should be kept away from children. The product must not be dropped or subjected to intentional impact. Do not use the device in humid environments or in extremely hot / cold temperatures. Do not use chemicals or abrasive detergents to clean the product. Please return for repairs if the product is defective. The warranty is invalid if the product has metal rust, water damage, or other natural oxidation.

WARRANTY

This product has a 1 year warranty against defects in manufacturing under regular consumer use. For instructions about how to obtain warranty service for your product, please contact Customer Service: info@primebrandsgroup.com.