


Smart Chicken Coop Door Quick Guide

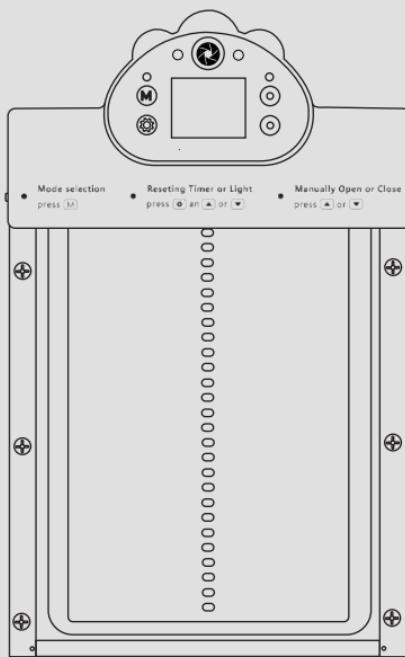

FCC Warning

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Radiation Exposure Statement


This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator and your body.

Catalog


1. What's In The Box	P. 1
2. Smart Chicken Coop Door Structure	P. 2-3
3. Read Before Installation	P. 4
4. Installation of Smart Chicken Coop Door	P. 5-8
5. App Download & Device Connection	P. 9-12
6. Function Settings	P. 13-19
7. Device Sharing	P. 20
8. User Center	P. 21-24
9. Smart Chicken Coop Door Specifications	P. 25
10. Frequently Asked Questions (FAQ)	P. 26

What's In The Box

 Smart Chicken Coop Door
Quick Guide



Quick Guide

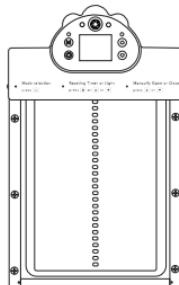


Smart Chicken Coop Door




X 8


Mounting Screws

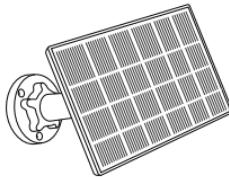

Solar Panel

Smart Chicken Coop Door Structure

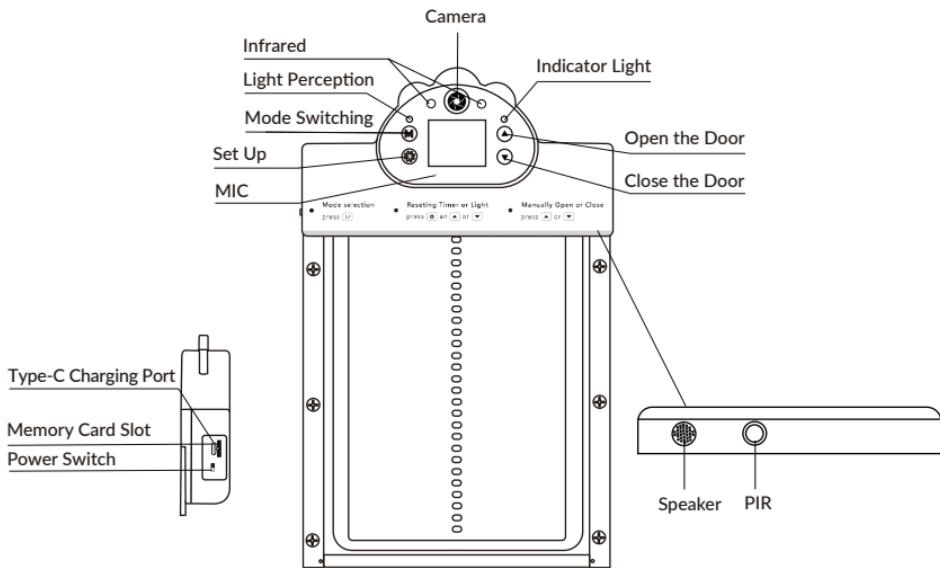

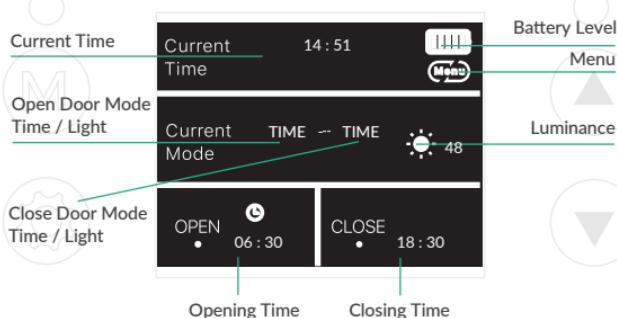

Indicator

- White: No Operation
- Green: Door Opening and Closing Normal
- Flashing Green: Door Opening and Closing


Read Before Installation

1. Keep Coop Door and accessories out of reach of children and pets.
2. Make sure the camera has been fully charged (DC5V / 1.5A).
3. Working temperature: -10°C to 50°C (14°F to 122°F)
Working relative humidity: 0-90%
4. Please do not expose the camera lens to direct sunlight.


Note:

1. The Coop Door Cam only works with 2.4G Wi-Fi.
2. Strong lights may interfere with the device's ability to scan QR codes.
3. Avoid placing the device behind furniture or near microwave products. Try to keep it within range of your Wi-Fi signal.


Installation of Smart Chicken Coop Door

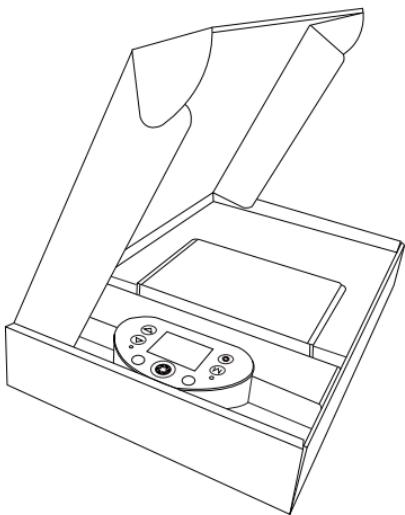


- ① Open the product package, remove the product from it, take out the solar panel and unpack it.

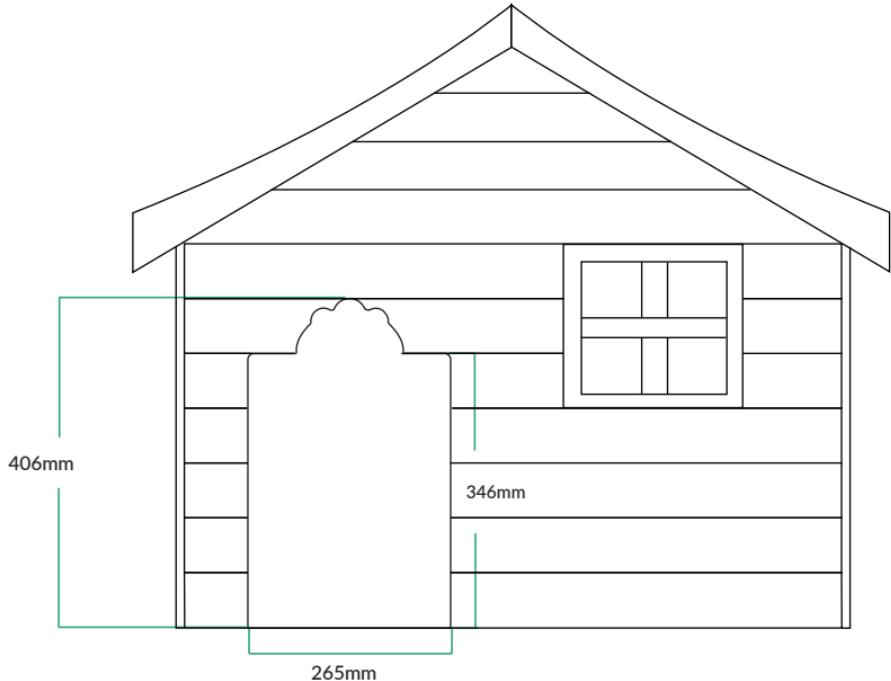

② At the door of the chicken coop, an entrance and exit with a height of 16 inches and a width of 13.6 inches is needed to install the Smart Chicken Coop Door.

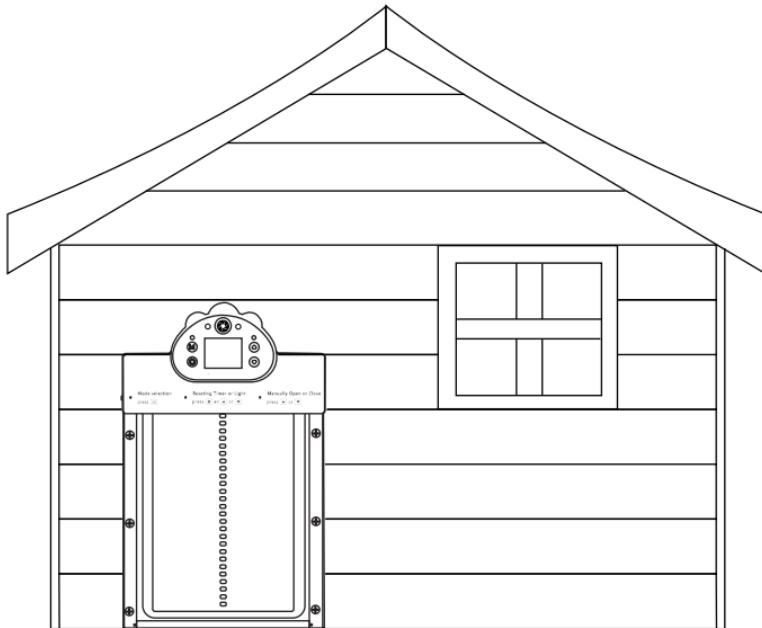

③ As shown, put the Smart Chicken Coop Door into the trimmed opening, align it with the frame and edges, then screw it in place with the camera facing out.

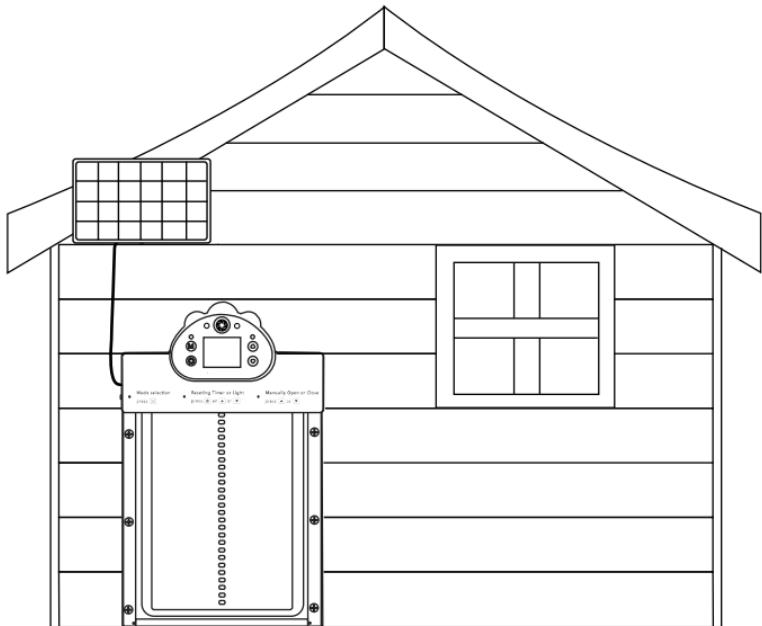

④ Connect the solar panel with a Type-C charging cable and place the solar panel in a suitable location.

How to download Waskame APP

WiFi version with camera


- ① Download the APP: Enter the Google Play or Apple Store, search for the app named Waskame, download and install, or scan the QR code to search app to download and install through the browser.



Note:If a mobile phone authorization prompt appears during the installation process, select 'Confirm' to continue with the installation.

Device Connection

① After installing the APP, press the power button on the side of the chicken door. The red indicator light will flash rapidly. Then open the App and click “+” to add a device. After the device is found, click “CONNECT DEVICE”.

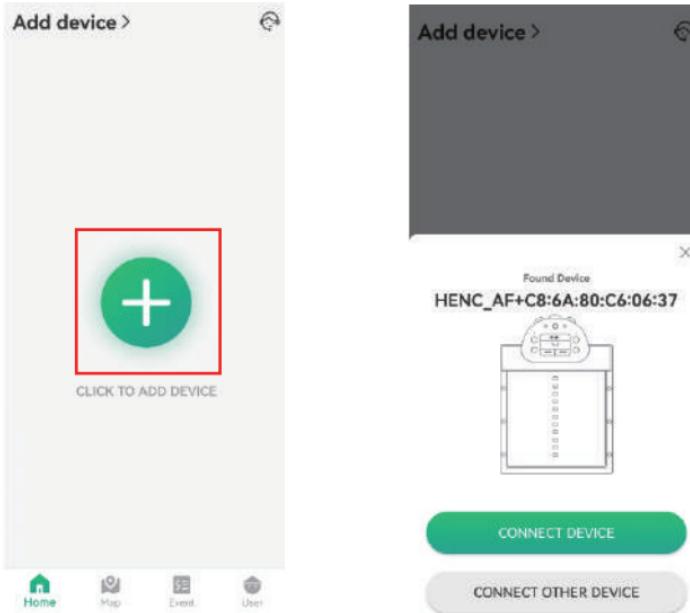


② Select the WiFi with a strong signal and input the correct WiFi password.
Please note that the camera only works with 2.4G WiFi.



Device connection in progress




③ After the connection is successful, click "Play", then click "Video Mode" to control it remotely. Figure 2 shows the page of the video mode.

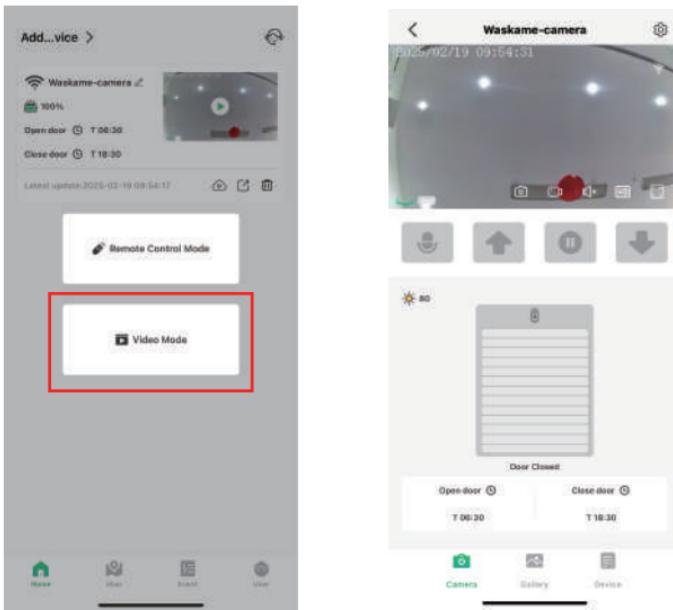

Please Note: Video Mode default is normal mode, you can switch to HD mode to get a better image.


Function Settings

④ Set Camera Related Parameters.

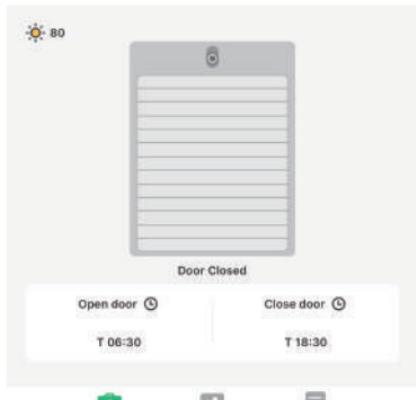


	Camera Settings
	Take Photos
	Click to Start Recording Click Again to Stop Recording
	Turn Sound on/off Sound
	Definition Switching HD/FHD
	View Horizontally
	Intercom on/off
	Open the Door
	Opening the Door
	Stop Opening and Closing Doors
	Closed/Closing

⑤ View Device Information:

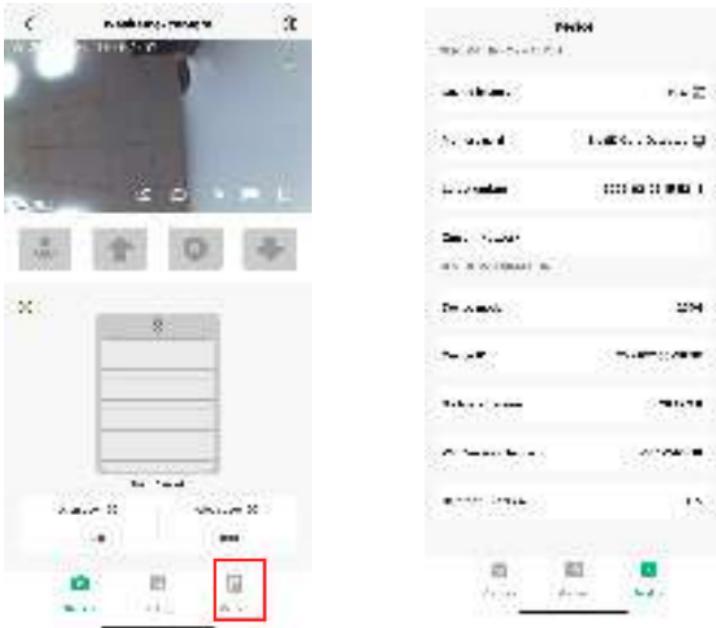


⑥ To Set the Home Page:

Click the settings button in the upper right corner of the video mode.

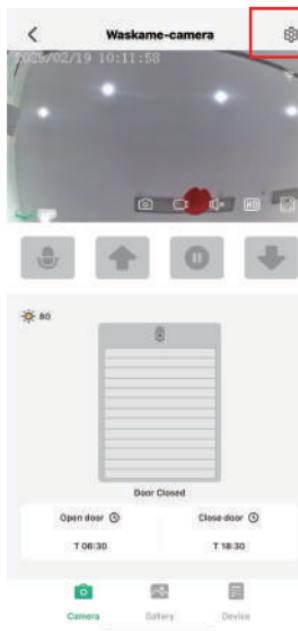

⑦ Alert Settings:

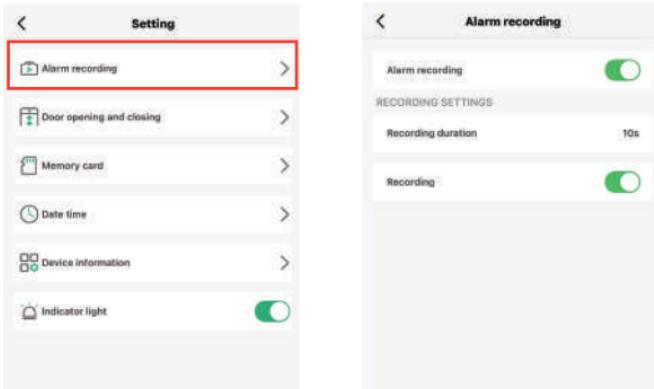

Once alarm recording is on, the alarm will be recorded and photos taken in these scenarios:

1. Door opens when open conditions are met.
2. Door closes when close conditions are met.
3. PIR triggers after door closes on meeting close conditions.
4. Door gets blocked by foreign objects after closing upon meeting close conditions.

Recording lasts 0 - 10s, 20s, or 30s. After recording stops, alarm records again silently.

⑧Door Opening and Closing Modes:

Setting

- Alarm recording
- Door opening and closing**
- Memory card
- Date time
- Device information
- Indicator light

Door opening and closing


DOOR OPENING SETTINGS

- Timed door opening
- Door Opening: 06:30
- Light sensor door opening
- Light Sensitivity: 35

DOOR CLOSING SETTINGS

- Timed door closing
- Door Closing: 18:30
- Light sensor door closing
- Light Sensitivity: 20

⑨Memory Card Settings:

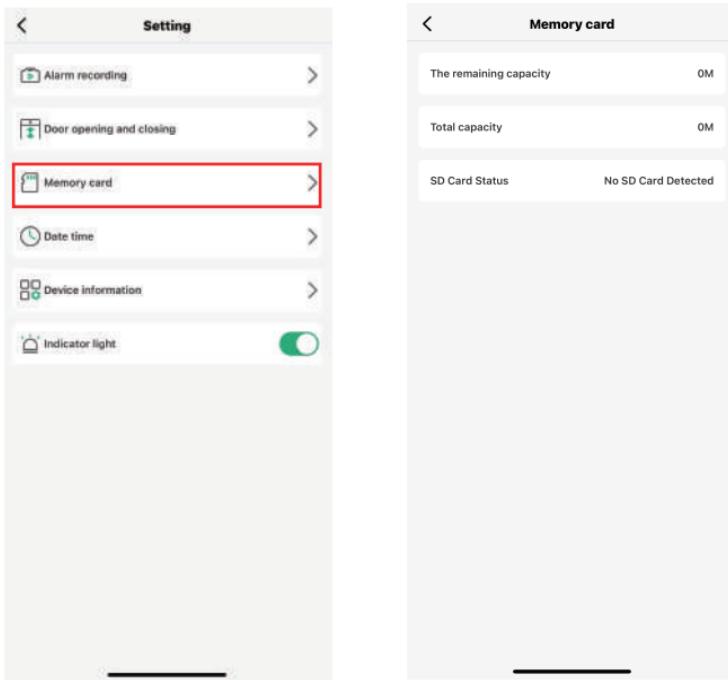

⑩ Date Time Settings and Device Version:

Setting

- Alarm recording
- Door opening and closing
- Memory card
- Date time**
- Device information**
- Indicator light

Date time

Change Device Time Zone

Current Time Zone (GMT +08:00) Beijing, Singapore, Taipei

Current Camera Time 10:13

Synchronize Camera Time


Device information

Device name	Wekame-camera
Device model	Z304
Device ID	XYX16719SWUXFN
Current Network	VDS业务带2.4G
Software Version	29.19.2.2
Device battery	100%
WiFi Version Number	V2.6-240618
Bluetooth Version	0.0.5
Change Network	
Firmware upgrade	
WiFi Firmware Upgrade	

Device Sharing


⑯ Device Sharing Settings:

There are two ways to share on the devices: adding via email or scanning the QR code .

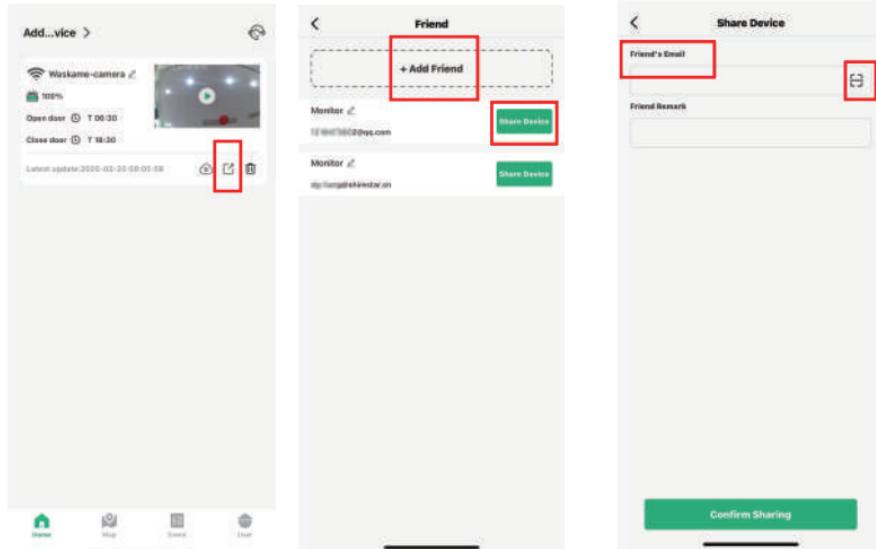


User Center

⑪ Smart Cloud Storage and Order Management Settings:

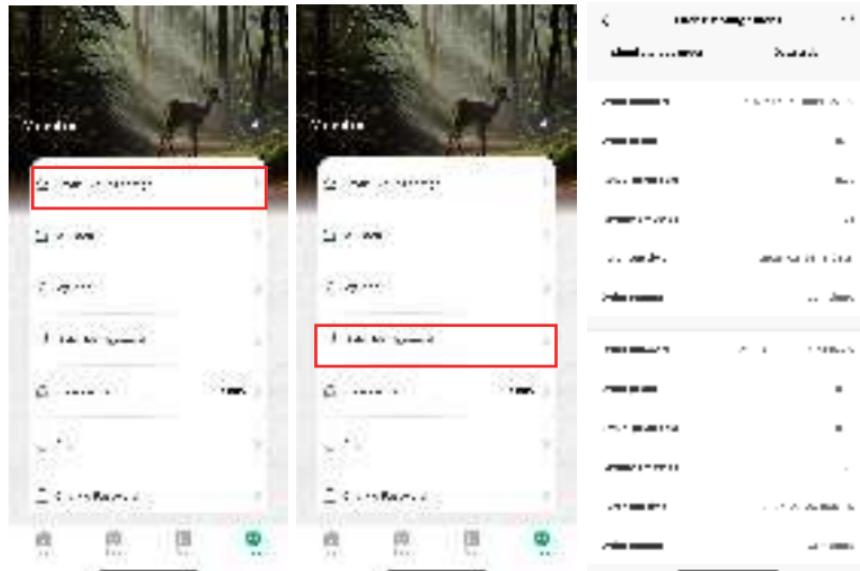


⑫ Change Password Settings:

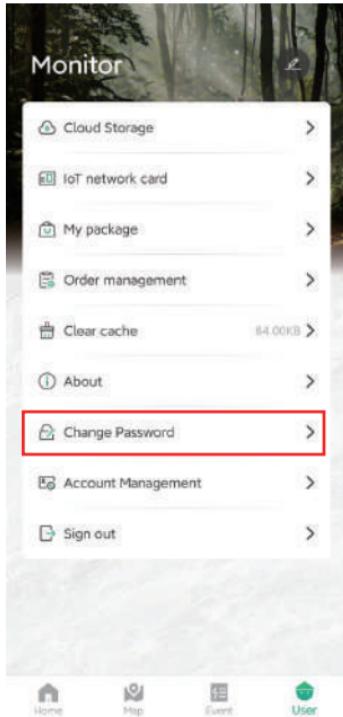


⑬ Account Management Settings:

The account no longer exists, and you cannot log in with the original information.

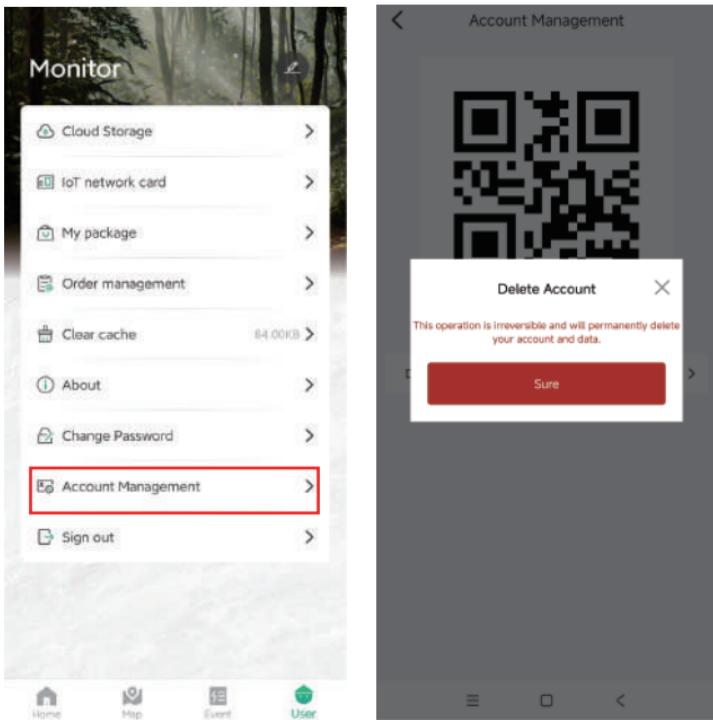

⑯ Sign Out Settings:

Temporarily exits the current account login status while account data is retained.
You can log in again at any time with the correct information.

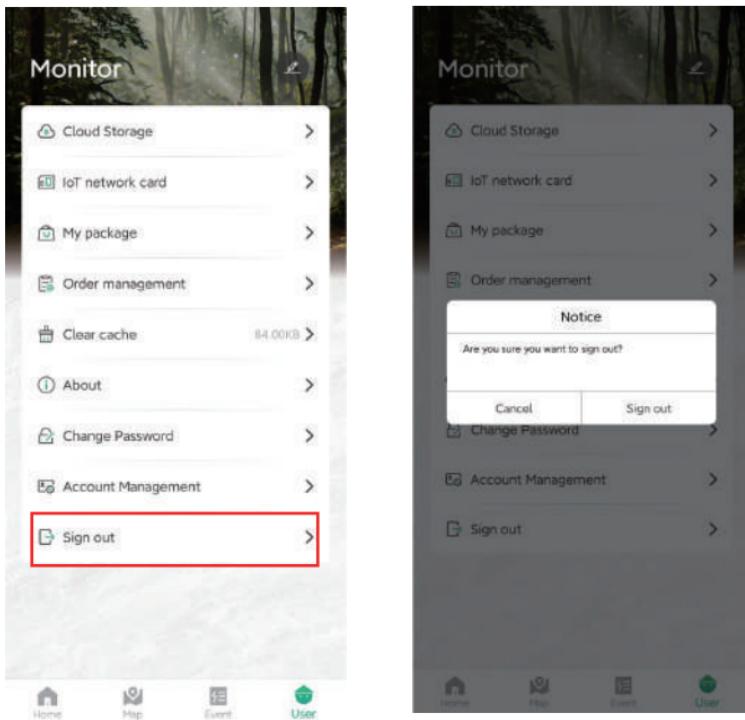

Smart Chicken Coop Door Specification

Power supply	TYPE-C 5V2A
Power consumption	3w(max)
Standby current	1.4MA
Microphone range	5m(max)
Pixel	4MP
Viewing angle	90°
Night visual range	15m(max)
Wireless connection	WiFi
PIR Distance	2M
Operating temperature	-10°C-60°C
Operating humidity	10% ~ 95%non-condensing
Battery capacity	5200mAh
Maximum capacity of Memory card	256G
Solar charging	800mAh

Frequently Asked Questions

Q1: Why doesn't the Wi-Fi name appear when I connect to Wi-Fi?

A1: You need to turn on the "location permission" for the app in the system settings and change it to "allow when using".

Q2: Will the camera show red lights when night vision is activated?

A2: The built-in infrared lamp beads make the camera only show some dim red lights when night vision is activated, but the image quality is still clear under no light environment.

Q3: What are the requirements for Wi-Fi?

A3: Please use a 2.4GHz wireless network. The device does not support the 5GHz wireless network. Meanwhile, please set the Wi-Fi authentication method to wpa2-psk or other lower level of the security method. A password is required.

Q4: How far should the camera be placed from the router?

A4: After testing, the Wi-Fi connection distance can normally reach up to 100 meters in the open area. However, the actual situation depends on the strength of Wi-Fi and its surrounding environment.

Q5: How many Modes of Chicken Coop Door?

A5: Chicken Coop Door have 4 modes: Open door you can choose "Light Mode" or "Time Mode", Close door you can choose "Light Mode" or "Time Mode", it has 4 Combinations.

Q6: What should I do when the device is malfunctioning?

A6: Turn off the switch, wait for 5 seconds, and then turn on the switch again.