
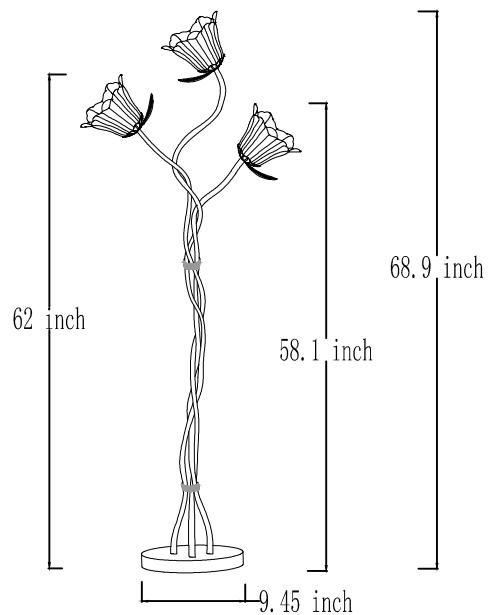


LED Floor Lamp

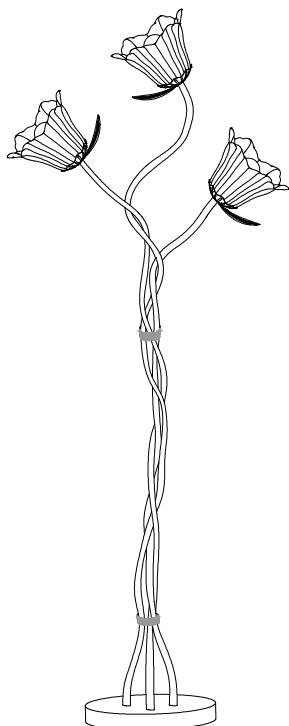


Product Parameters

◆ Input Voltage: AC 85V-265V 50/60HZ

If any problem when you install, send us email to:
servicedled@hotmail.com

Remote Control Mode

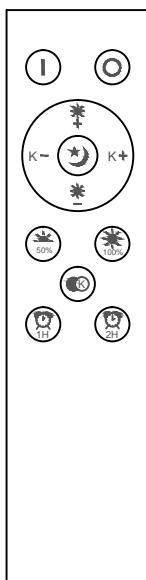

	Turn on / off the light
	Adjust the brightness of the light
	Adjust the color of the lights
	Sleep mode, 15% of Brightness with warm light
	50% of Brightness / 100% of Brightness
	Three colors “3000K/4500K/6000K” cycle switching
	When light is on, press these keys to set the timing function.

NOTED

When you press “Timing” keys, the light will flicker once, that means the “Timing function” is on.

The light and remote control are bound under production already, so that you can use them straightly


◆ How to unbind the light from the remote control?

After turning on the light, press and hold the “” button for 5 seconds within 20 seconds. If the light flashes once, it indicates successful code clearing


◆ How to bind the light to the remote control?

After turning on the light, click the “” button 3 times within 10 seconds. If the light flashes once, it indicates successful code matching


Detailed List

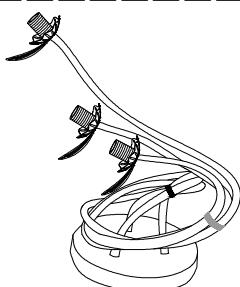

Lamppost X1

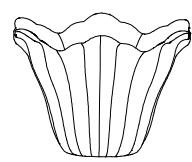

Lampshade X3

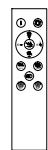


Remote X1



Lamps X3




Nut X3

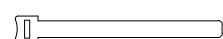

Nylon cable tie X2


Installation Instructions

1

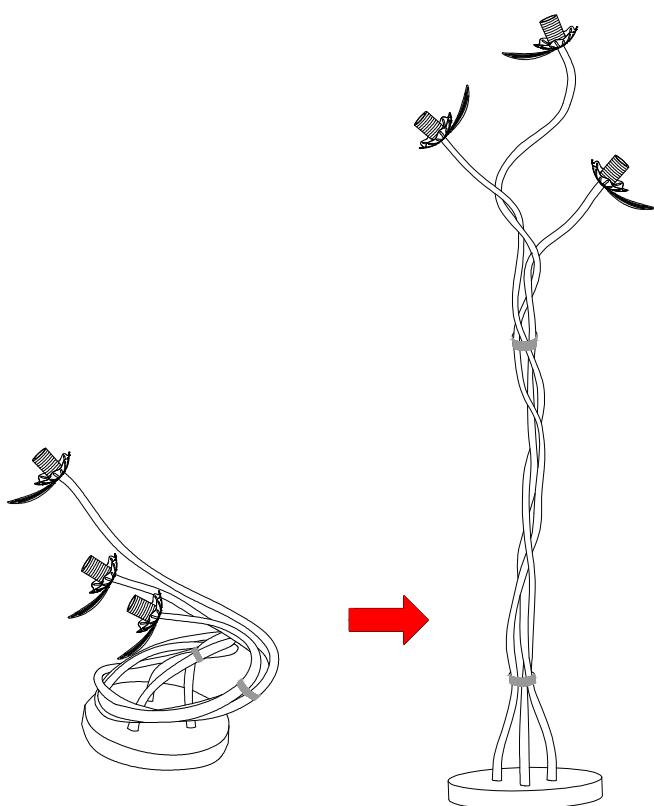


Spread light pole, as shown in the picture.

2

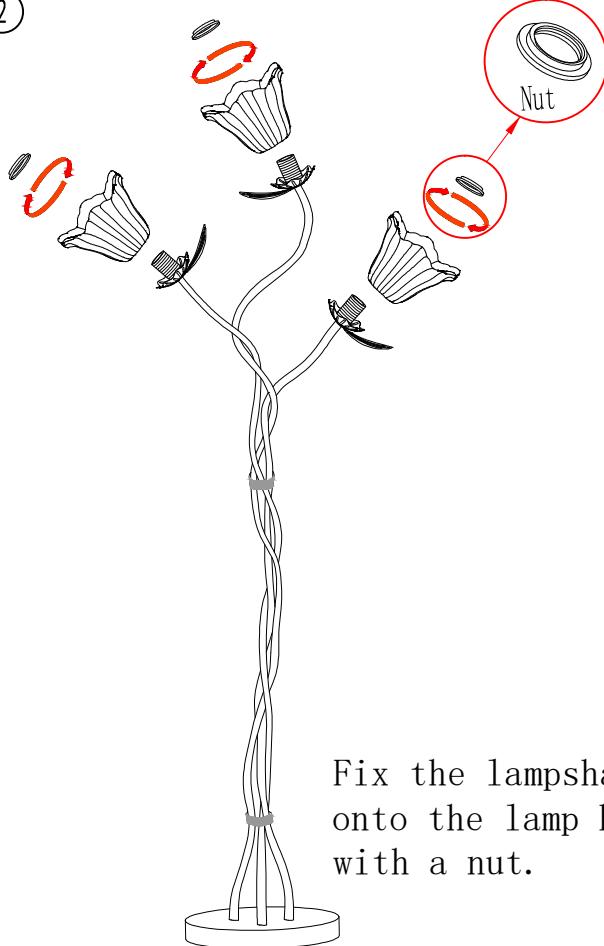


Fix the lampshade onto the lamp head with a nut.

3

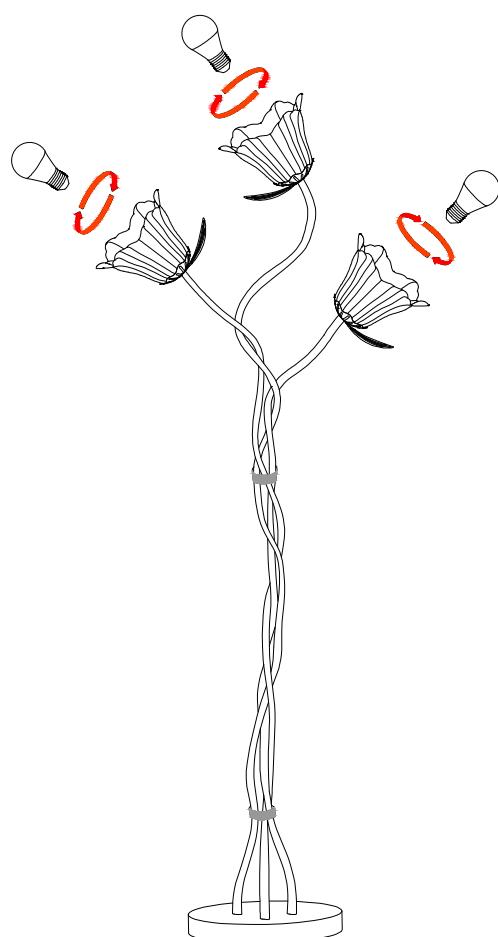

Tighten the bulb.

4

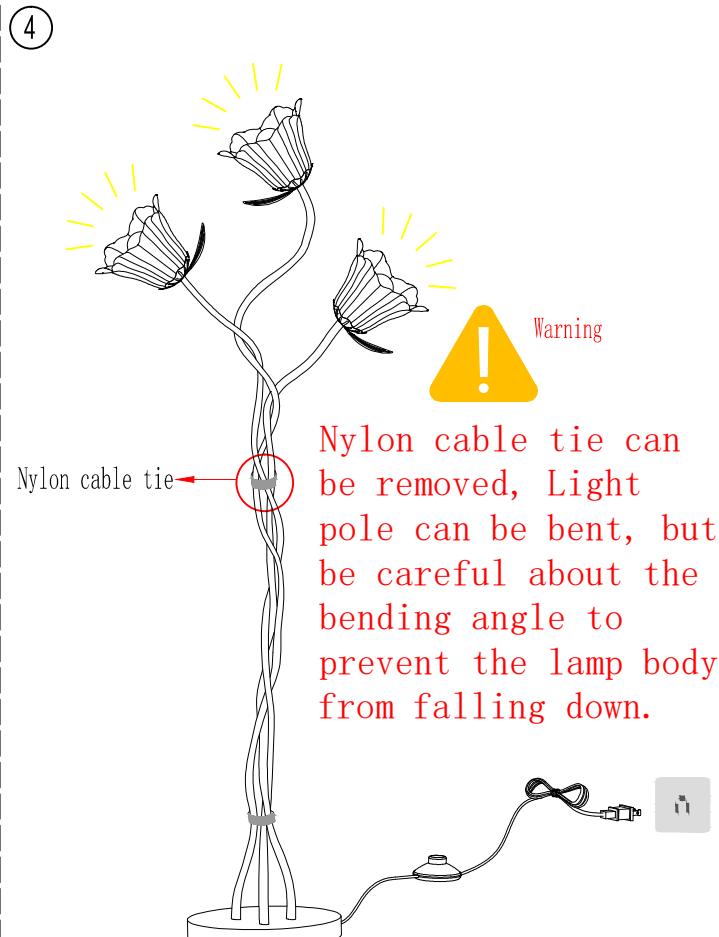

Turn on the power.

Warning

Nylon cable tie can be removed, Light pole can be bent, but be careful about the bending angle to prevent the lamp body from falling down.

FCC Caution:

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.