



Bluetooth®  
RGB LED DUAL MOUNT  
**WIRELESS  
SPEAKER**

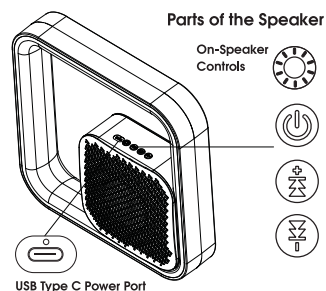 
**Notice:**  
Please read user manual carefully and keep it for reference.

**Package includes:**

- 1 Wireless Speaker
- 1 Charging cable
- 1 User Manual

**Warning:**

- Charge and operate only as indicated in this manual, as improper use may result in damage to the product or injury.
- To avoid risk of shock or injury, do not dismantle the device or insert any objects into the speaker.
  - To avoid electronic interference and/or compatible conflicts, turn off the product in any facilities where posted notices instruct you to do so.
  - Do not pull the speaker charging cable. Damage may result to the cable.
  - Keep out of reach of children. This is not a toy.
  - Avoid exposure to moisture, liquids, heat, flame and high voltage equipment.
  - Do not short circuit the input terminals of the speaker.
  - Do not drop, place heavy weight or allow heavy impact to the speaker.
  - the internal battery should not be crushed, bent, or twisted.
  - Do not disassemble and Do not dispose of in fire.



**How to Use:**


**Power/Charging:**

Connect the type-C charging cable to port that is to the left of the on-speaker control buttons and to an available USB the power adaptor. Please use a power adaptor with 10W or above to boost the speaker.

**Turn ON/OFF:**

Press and hold  to turn ON/OFF the unit.

 

 
 

**Switch between Bluetooth and FM Mode:**

Press  2 seconds to switch between Bluetooth and FM mode.

 

 

**Connect to Bluetooth®:**

1. Switch to Bluetooth® mode if in FM mode.
2. Search for Bluetooth® device named "BC-BS-128" on your mobile device when the LED indicator light flashes in blue.
3. You will hear a prompt sound when they are successfully paired.
4. The speaker will automatically turn off without connection after 5 minutes. To reconnect, you can turn on the speaker and it will automatically connect back to your device once they have been previously paired.

**Bluetooth® Music Playback:**

- Press  once to play / pause the music.
- Press  once to play the previous song.
- Press and hold  to reduce the volume.
- Press  once to play the next song.
- Press and hold  to increase the volume.

**FM Radio Mode:**

1. Switch to FM radio mode by pressing the  button twice.
  2. Press  button to scan and save the radio stations with strong signals. The first scanned station will then be played.
  3. Press  button to play the next station;
- Press  button to play the previous station.

**Specifications**

- Bluetooth Version: 5.4
- Sound Output: 3inches speaker, 2Ω 5W
- Battery type: 2000 mAh 3.7V Li-Ion Battery
- Charge Time: 3-4 hr
- Play Time: 50% volume LED off: 5-6 hr
- Charging Cable length: USB-A to TYPE C 3 ft
- Standby Time: Speaker will power down after 5 min without wireless connection.
- Operating Range: 33 ft
- Music playing time: 3-4h
- Input Power: 5V 1A 5W

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

**FCC Warning Statement**

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.