


Exos Cinema System

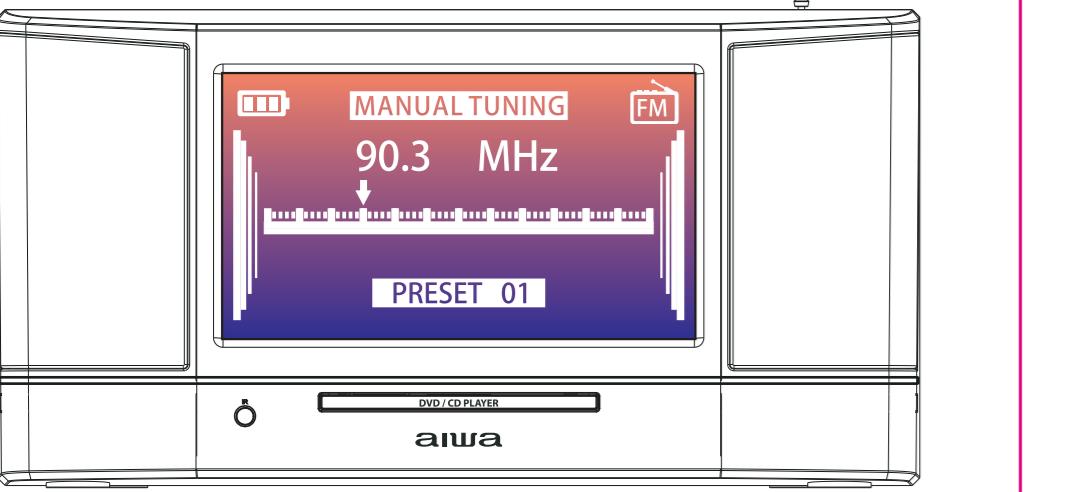

Item: AI7200N

Quick Start Guide

DVD FUNCTION

IMPORTANT NOTE

DVD players used in devices like this are designed to fully read all commercial DVDs. They will also read self-coded DVD-R/DVD-RW discs but it may take up to 10 seconds for playback to start. If playback does not start, it is likely due to the quality of the DVD-R/RW disc and/or the compatibility of the CD compilation software. The manufacturer of this product is not responsible for the playback quality of CD-R/RW discs.

Do not attach a label or seal to either side of the DVD-R/RW disc. It may cause a malfunction.



USING THE BOOMBOX TO PLAY DVDs

1. Press the POWER button to power on the unit. A power indicator will illuminate.
2. If the unit is not in DVD mode, press the SOURCE button repeatedly until DVD mode is selected.
3. In DVD mode, the unit will start to read the inserted DVD disc. If no DVD has been loaded in the DVD compartment, "NO DISC" will display with the aiwa logo.
4. Press the "OPEN/CLOSE" button to open the tray.
5. Carefully load a DVD disc with its label side upward into the DVD compartment then press the "OPEN/CLOSE" button again to close the DVD tray.
6. The player will start reading the disc and playing.
7. Press the VOLUME- or VOLUME + button to obtain the desired sound.
8. To temporarily stop playing, press the PLAY/PAUSE Button. To resume playing, press the PLAY/PAUSE Button again.
9. Press the fast forward ▶▶ button repeatedly to get the playback at speeds x2, x4, x8, x16, x32 or play, press the fast reverse ▶▶ button repeatedly to get the playback at speeds x2, x4, x8, x16, x32 or play by the remote control.
10. Press the next ▶▶ button to play next chapter/trace or press the previous ▶▶ button to play previous chapter/trace.
11. To stop playing, press the STOP ■ button.
12. Press the POWER button to turn off the unit after watching.

WHAT'S INCLUDED

- AI7200N Exos Cinema System
- AC Adapter (DC 14V 3A)
- RCA Audio Video Cable
- Remote Control
- Quick Start Guide

YOUR REMOTE

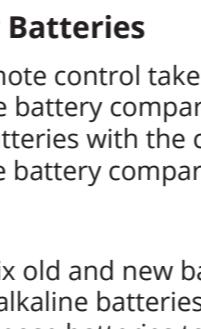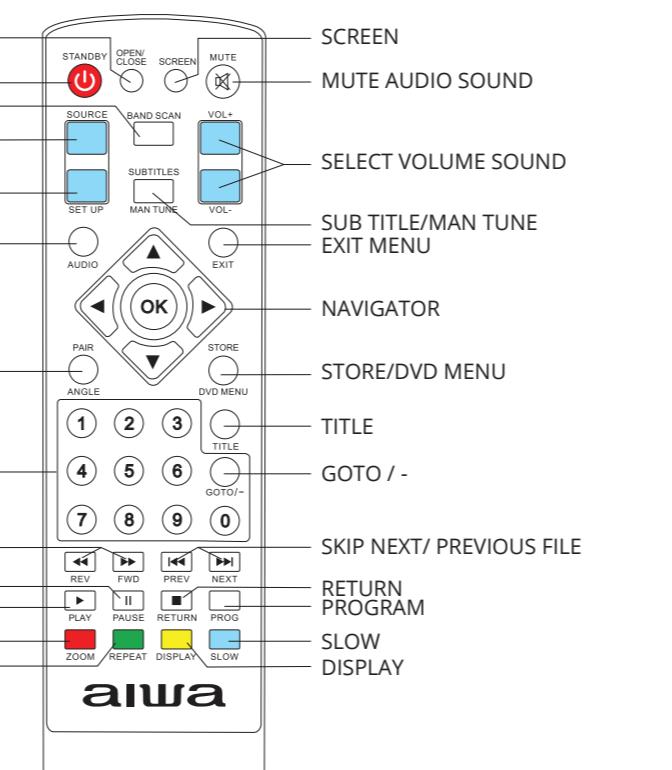

Inserting Batteries


1. Your remote control takes 2 AAA batteries.
2. Open the battery compartment on the rear of your remote.
3. Insert batteries with the correct polarity (+, -).
4. Close the battery compartment.

Warning


- Do not mix old and new batteries.
- Only use alkaline batteries.
- Do not expose batteries to excessive heat.
- Remove batteries if not in use for extended periods of time.

YOUR DEVICE


Top View

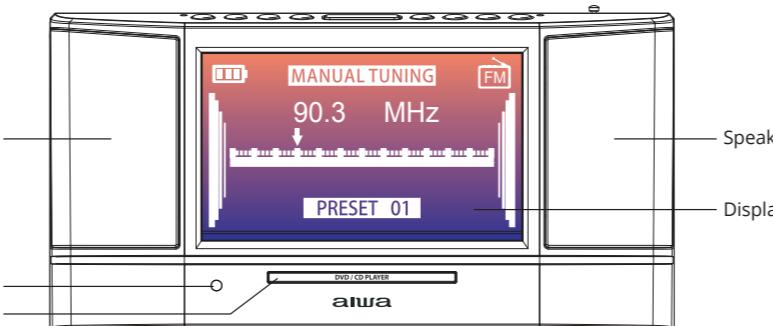

Front View

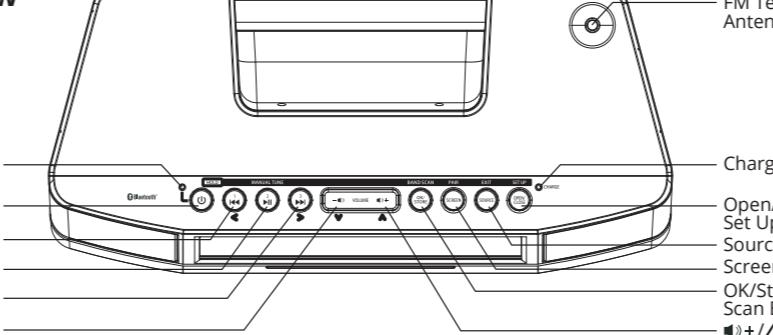


Rear View

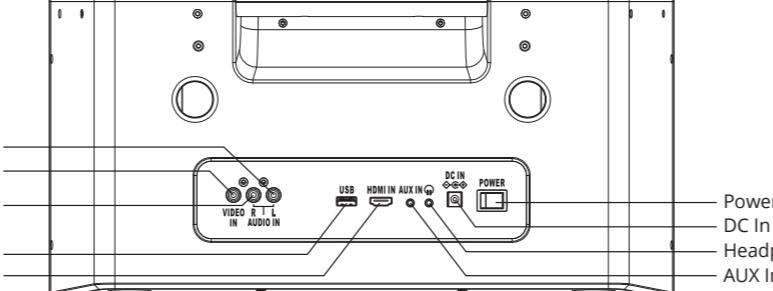

POWERING

Your Exoc Cinema System can be powered with the included AC adapter or built-in rechargeable battery.

Powering with the Included AC Adapter

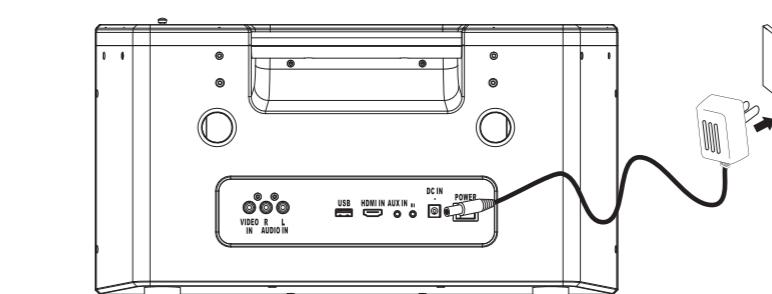

1. Insert the DC plug adapter into the DC In jack on the back of your unit.
2. Plug the AC adapter plug into a standard 120V AC outlet in your home.
3. Press the Power button on the top panel to turn on the unit.

NOTE: Unplug when not in use for extended periods.

BUILT-IN RECHARGEABLE BATTERY OPERATION

1. This unit will also operate using the built-in Lithium rechargeable battery. Fully charge the built-in rechargeable battery before first use, the CHARGE INDICATOR will turn from Red to Green when the built-in battery is fully charged.

2. Unplug the DC INPUT jack of main unit. The unit will enter Battery Operating mode automatically.

LOW BATTERY INDICATION

1. When the built-in battery power lower, the battery icon will appear on the screen, please connect the unit to AC adaptor for charging.
2. After prolonged use, the battery voltage may discharge and operation might become intermittent. When this happens, please recharge the internal battery.

CHARGING INSTRUCTIONS

CHARGING THE BATTERY WITH THE INCLUDED AC ADAPTER

1. Charge the built-in Lithium battery a minimum of 3 hours prior to first use. Firmly and securely insert the DC plug of the adapter into the DC Jack on the back of the unit.
2. Plug the AC Adaptor plug into the 120V AC outlet. Connecting this system to any other power source may cause damage to the system.

3. When the AC power is connected, the battery charging indicator will light solid Red showing that the internal battery is being charged.

4. After the battery is fully charged, the charging indicator will turn to solid Green.

Notes:

1. Charging time will vary if you are listening to music while charging the internal battery. We recommend you place the unit in Power off mode during the charging process or until batteries are fully charged.

2. To prolong the life of a rechargeable battery, it is recommended to completely discharge it before fully charging it again.

3. Rechargeable batteries need to be cycled for maximum performance and longer battery life. If you don't use the player that often, be sure to recharge the battery at least once a month in order to keep the internal battery working properly.

Battery Note and Care

- Do not burn or bury batteries.
- Do not puncture or crush.
- Do not disassemble.
- Recycle Lithium batteries. Do not dispose of in the trash.
- Use only chargers rated for Lithium cells. Be sure the charge's voltage and current settings are correct for the battery pack being charged.
- Charge batteries on a fireproof surface away from flammable items or liquids.
- Batteries should NEVER be left unattended while charging. Only adults should charge the batteries.
- Follow the manufacturer's instructions for charging the product and do not charge longer than recommended. Unplug the charger when the battery is charged or not in use.

iOS Device Connection

iPhone or iPad for Screen Mirroring

(Make sure the unit and iOS device is connected to the same WiFi network.)

1. In SCREEN MIRRORING mode, press < or > button to select "For iOS" icon and press OK button to enter Mirror your iPhone or iPad page. Follow the page instruction to operate.

2. Swipe up from the bottom of your mobile, click Screen Mirr  icon and select "AIWA EXOS Cinema." on the mobile settings.

3. After connected, the mobile device contents will mirror on the unit screen.

Android Device Connection

Screen Mirroring

(Make sure the unit and Android device is connected to the same WiFi network.)

1. In SCREEN MIRRORING mode, press < or > button to select "For Android" icon and press OK button to enter Mirror your Android Phone or Tablet page. Follow the page instruction to operate.

2. On your Android device (Mobile/Pad), open the setting menu, click Screen Mirroring function (different mobile models with different names. For example: Multi-screen, Wireless Display, Smart View etc...) and choose "AIWA EXOS Cinema." name on the mobile device to connect unit.

3. After connected, the mobile device contents will mirror on the unit screen.

DLNA/UPnP mode Connection

(Make sure the unit and Mobil device or Tablet is connected to the same WiFi network.)

1. In NETWORK PLAYBACK mode, Press < or > button to select "Via DLNA/UPnP" icon and press OK button to enter DLNA/UPnP page. Follow the page instruction to operate.

2. Open the video player App on your Mobile device or Tablet, click projection screen  icon and select "AIWA EXOS Cinema." on the mobile settings.

3. After connected, the video / movie will be projected on the unit screen.

SCREEN MIRRORING OPERATION

WiFi Connection

1. Press the POWER button to turn on the unit, power indicator will light Green.

2. If the unit is not in HDMI mode, press the SOURCE button repeatedly until HDMI mode or press SOURCE button once and use ▲/▼ button to select HDMI mode and press OK button to enter.

3. Turn on and start playing the external device you plugged into the HDMI port at the back of the unit.

4. Turn off both the external device and this unit after use. Unplug the HDMI cable from HDMI port at the back of the unit.

5. If screen show no WiFi connected, press and hold SET UP button enter to unit setup menu screen.

OSD Language
(Network Setup)
English


Aspect Ratio(USB/Mirroring)
Auto

Restore Factory Default
Software Update(USB)

Figure 1.

6. Use the ▲/▼ button to select NETWORK/OPTIONS menu.

7. Use the ▲/▼ button to select Network Setup column as figure 1 and press OK button enter to Network Setup menu.

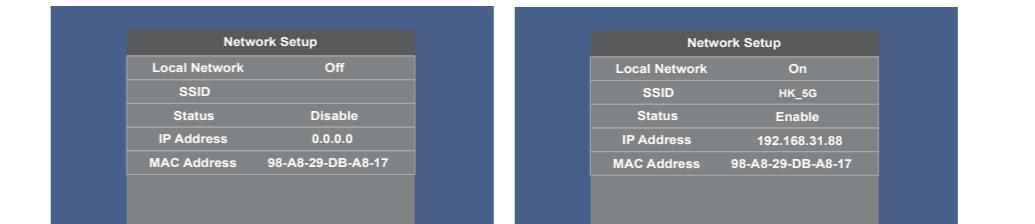

8. Default Local Network off, select Network On icon and press OK button to turn on the WiFi network.

9. Use the < or > button to select Join Network icon and press OK button to see the local network list and use ▲/▼ button to select the name of the local WiFi router and press OK button to "Connected To..." menu, enter the password, press "Enter", select the "Connect" icon to connect.

10. If unit is successful connected, connected information will show on the screen mirroring menu. Unit will exit the menu and finish the setting.

11. If you want to connect another local WiFi router, repeat step 2 to 8. Note: When the router is successfully connected, the unit will automatically connect to the router next time.

FM RADIO FUNCTION

1. Press the POWER button to power on your Exoc Cinema System.
2. Press the "SOURCE" button repeatedly until FM mode is accessed (an "FM RADIO" sound is typically heard).
3. Tune to your desired station by below method:
BAND SCAN: Press and hold "BAND SCAN" button for more than 5 seconds, unit will prompt "Scan whole FM Band and store stations? Press Button Again.", press "BAND SCAN" button again to start. Unit will auto scan available stations in FM band and store it in the memory. Or press TUNE button to toggle to auto tuning on the remote, press SCAN button to start BAND SCAN. After complete the band scan, the first station will broadcast immediately.
- AUTO TUNING:** Unit default in AUTO TUNING mode, press and hold </> button for more than 2 seconds, once a station is found, the radio will stop searching and store in the memory. Then start to broadcast immediately.
- MANUAL TUNING:** Unit default in AUTO TUNING mode, press and hold "MANUAL TUNE" button for more than 2 seconds for switch to MANUAL TUNING mode, press the </> button briefly to fine tune up or down the frequency.

Setting FM Radio Presets

The unit can store up to 20 radio station presets for easy recall at any time.

To Manually Set Presets

1. Find the radio station you would like to save.
2. Press the STORE button on the top panel of the unit or STORE button on the remote control.
3. Press numeric key buttons on the remote control to store in the desired Preset Number, The display will show "PRESET 1, PRESET 2, etc..." (Note: Allow store 1-9 preset number)
4. Repeat steps 1-3 until you have finished saving your presets.
5. To retrieve one of the preset stations already stored, press the numeric key buttons on the remote control.

TIPS FOR BEST RADIO RECEPTION

When listening to FM radio stations, always keep the FM TELESCOPIC ANTENNA fully extended for best performance. If FM reception is weak, try repositioning the unit near an open window until you get better reception.

AUX IN FUNCTION

You can play other music sources (iPods, MP3 players or other digital audio players) through the speakers of the unit by connecting the AUX IN jack to your external player's audio out jack or headphone jack.

1. Plug one end of a 3.5mm audio cable (not included) into the AUX IN jack located on the back of the boombox and the other end of the cable to the headphone jack of your digital audio player.
2. Press the "SOURCE" button repeatedly until AUX mode or press SOURCE button once and use ▲/▼ button to select AUX mode and press OK button to enter (display Rear Analog Audio Input on the screen).

3. Turn on and start playing the external device you plugged into the AUX IN jack.

4. Slowly adjust both the volume controls of your unit and the external device until you reach a comfortable listening level.

5. Turn off both the external audio player and this unit after use. Unplug the audio cable from AUX IN jack.

Notes:
--If you connect the unit to the Line-Out Jack of your external device, you only need to adjust the VOLUME CONTROL of your unit. If you connect to the Headphone Jack of your external device, you may need to adjust both the volume controls of your external device and the unit to obtain the desirable listening level.

--Remember to turn off the unit when you have finished listening. Don't forget to switch off the power of your external audio device as well.

AV IN OPERATION

Your unit can be connected to an external device for watching.


Connecting the AV input

Require an RCA video cable (included).

1. Plug the RCA audio/video cable into the VIDEO IN and AUDIO IN (L,R) port on the back of the unit and the composite video/audio output on an external media player.
2. If the unit is not in AV mode, press the SOURCE button repeatedly until AV mode or press SOURCE button once and use ▲/▼ button to select AV mode and press OK button to enter (display AV on the screen).

3. Adjust the external media player to the correct output setting and play media.

4. The connected AV signal displayed on the unit.

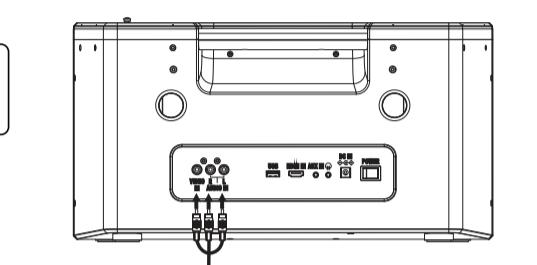

USING SETUP MENU 1

Press SET UP button to enter projector menu. (Unit default in Picture menu.)

Picture Mode	Standard
Contrast	50
Brightness	50
Color	50
Sharpness	50
Color Temperature	Medium

This Picture menu showed on the screen.

1. If the unit is not in AV mode, press the SOURCE button repeatedly until AV mode or press SOURCE button once and use ▲/▼ button to select AV mode and press OK button to enter (display AV on the screen).
2. Use ▲/▼ buttons to select different picture effect to Standard / Dynamic / Mild / User. Use ▲/▼ button to adjust Contrast / Brightness / Color / Sharpness digit if chose User item.
3. Use ▲/▼ buttons to adjust Contrast level 0 to 100. (Active in User item of Picture Mode)
4. Use ▲/▼ buttons to adjust Brightness level 0 to 100. (Active in User item of Picture Mode)
5. Use ▲/▼ buttons to adjust Color level 0 to 100. (Active in User item of Picture Mode)
6. Use ▲/▼ buttons to adjust Sharpness level 0 to 100. (Active in User item of Picture Mode)
7. Use ▲/▼ buttons to select different color temperature to Cool / Medium / Warm.

USING SETUP MENU 2

Press SET UP button to enter projector menu, press </> buttons to select SOUND menu.

Treble	50
Bass	50

This Sound menu showed on the screen.

1. Use ▲/▼ buttons to select Treble level 0 to 100.
2. Use ▲/▼ buttons to select Bass level 0 to 100.
3. Enter to CD/DVD SETUP. See CD/DVD Setup menu for details. (Active in CD/DVD mode)

USING SETUP MENU 3

Press SET UP button to enter projector menu, press </> buttons to select NETWORK/OPTION menu.

OSD Language	English
Network Setup	
Aspect Ratio(USB/Mirroring)	Auto
Restore Factory Default	
Software Update(USB)	

This NETWORK/OPTION menu showed on the screen.

1. Use ▲/▼ buttons to select different language.
2. Enter Network Setup menu, use </> buttons to select Network On/Off or Join Network. (Active in SCREEN MIRRORING mode)
3. Use ▲/▼ buttons to select different Aspect Ratio 4:3 / 16:9 / Full / Auto / Just Scan. Follow below figure.
4. Use ▲/▼ buttons to select Y or N. If chose "Y" that your unit will go to factory default setting
5. Software Update (USB) For service center use only

Note: Press EXIT button to exit the menu.

USING CD/DVD SETUP MENU

In CD/DVD mode, press SET UP button to enter unit menu, use </> buttons to enter unit sound menu, use ▲/▼ buttons to select DVD Setup and press OK button to enter. Unit will show the SYSTEM SETUP menu as figure.

(1) SYSTEM SETUP

In DVD Setup menu, default is in SYSTEM SETUP menu.
(if not, press </> buttons to select SYSTEM SETUP).

SYSTEM SETUP
SCREEN SAVER
TV TYPE
RESUME
DEFAULT

1. Use ▲/▼ buttons to select SCREEN SAVER, then use ▲/▼ buttons to select ON or OFF, press OK button to confirm.
2. Use ▲/▼ buttons to select TV TYPE, then use ▲/▼ buttons to select ratio 4:3PS / 4:3LB / 16:9, press OK button to confirm.
3. Use ▲/▼ buttons to select RESUME, then use ▲/▼ buttons to select ON or OFF, press OK button to confirm.
4. Use ▲/▼ buttons to select DEFAULT, then use ▲/▼ buttons to select Press OK button to Restore factory setting.

(2) LANGUAGE SETUP

In DVD Setup menu, press </> buttons to select LANGUAGE SETUP.

LANGUAGE SETUP
OSD LANGUAGE
AUDIO LANG
SUBTITLE LANG
MENU LANG

1. Use ▲/▼ buttons to select OSD LANGUAGE, then use ▲/▼ buttons to select English / Spanish / French, press OK button to confirm.
2. Use ▲/▼ buttons to select AUDIO LANG, then use ▲/▼ buttons to select English / Spanish / French, press OK button to confirm.
3. Use ▲/▼ buttons to select SUBTITLE LANG, then use ▲/▼ buttons to select English / Spanish / French, press OK button to confirm.
4. Use ▲/▼ buttons to select MENU LANG, then use ▲/▼ buttons to select English / Spanish / French, press OK button to confirm.

(3) AUDIO SETUP

In DVD Setup menu, press </> buttons to select AUDIO SETUP.

AUDIO SETUP
KEY

1. Use ▲/▼ buttons to select KEY, then use ▲/▼ buttons to select KEY b / -4 / -2 / 0 / +2 / +4 / #, press OK button to confirm.

Note: Press EXIT button to exit the menu.

CARE AND MAINTENANCE

1. Do not subject the unit to excessive force, shock, dust or extreme temperatures.
2. Do not tamper with the internal components of the unit.
3. Clean your unit with a dry cloth. Solvents or detergents should never be used.
4. Avoid leaving your unit in direct sunlight or in hot, humid or dusty places.
5. Keep your unit away from heating appliances and sources of electrical noise such as fluorescent lamps or motors.
6. If drop-outs or interruptions occur in the music during DVD play, or if the DVD fails to play at all, the disc's bottom surface may require cleaning. Before playing, wipe the disc from the center outwards with a good soft cleaning cloth.



CLEANING THE UNIT

- To prevent fire or shock hazard, disconnect your unit from the AC power source when cleaning.
- The finish on the unit may be cleaned with a dust cloth. Use caution when cleaning and wiping the plastic parts.
- If the cabinet becomes dusty wipe it with a soft dry dust cloth. Do not use any wax or polish sprays on the cabinet.
- If the front panel becomes dirty or smudged with fingerprints it may be cleaned with a soft cloth slightly dampened with a mild soap and water solution. Never use abrasive cloths or polishes as these will damage the finish of your unit.

CAUTION: Never allow any water or other liquids to get inside the unit while cleaning.

FCC STATEMENT

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.
- The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

WARRANTY

This warranty covers the original consumer purchaser only and is not transferable.

This warranty covers products that fail to function properly UNDER NORMAL USAGE, due to defects in material or workmanship. Your product will be repaired or replaced at no charge for parts or labor for a period of one year.

What Is Not Covered By Warranty

Damages or malfunctions not resulting from defects in material or workmanship and damages or malfunctions from other than normal use, including but limited to, repair by unauthorized parties, tampering, modification or accident.

To Obtain Warranty Service and Troubleshooting Information:
Call (877) 397-8200 or visit our website at www.aiwa.co.

To receive Warranty service along with the name and address of an authorized product service center, the original consumer purchaser must contact us for problem determination and service procedures. Proof of purchase in the form of a bill of sale or receipted invoice, evidencing that the product is within the applicable Warranty period(s), MUST be presented in order to obtain the requested service. It is your responsibility to properly package and send any defective products along with a dated copy of proof of purchase, a written explanation of the problem, and a valid return address of the authorized service center at your expense. Do not include any other items or accessories with the defective product. Any products received by the authorized service center that are not covered by warranty will be returned unrepairied.