



Portable Media **BOOMBOX**



1.


IN THE BOX



Portable
Media Boombox



Remote Control

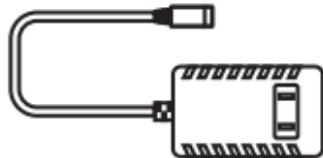

Power Cable/AC Adapter




RCA Audio Video Cable

2.

SPEAKER CONTROLS


Speaker Controls (Top)

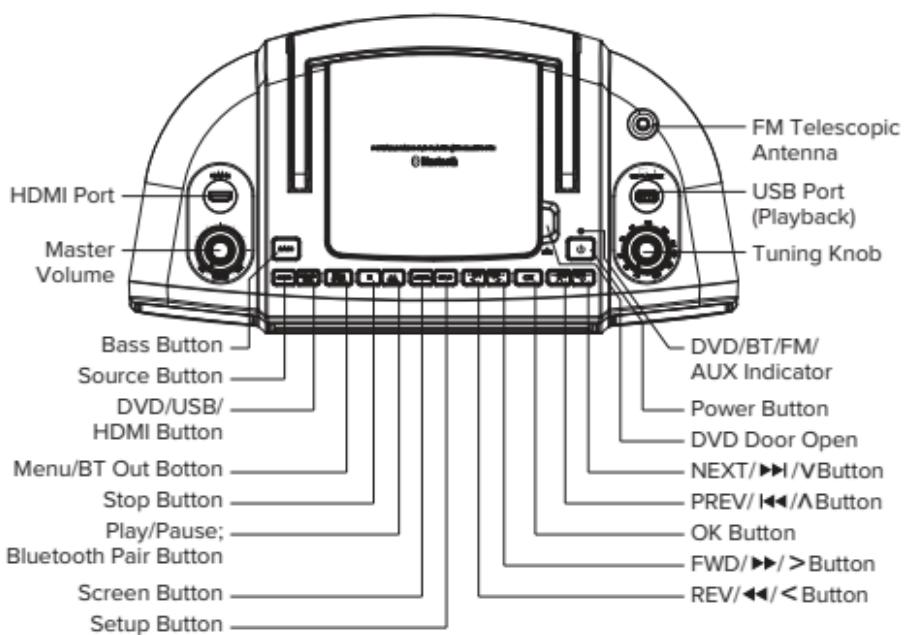

Speaker Controls (Front)





Speaker Ports (Rear)

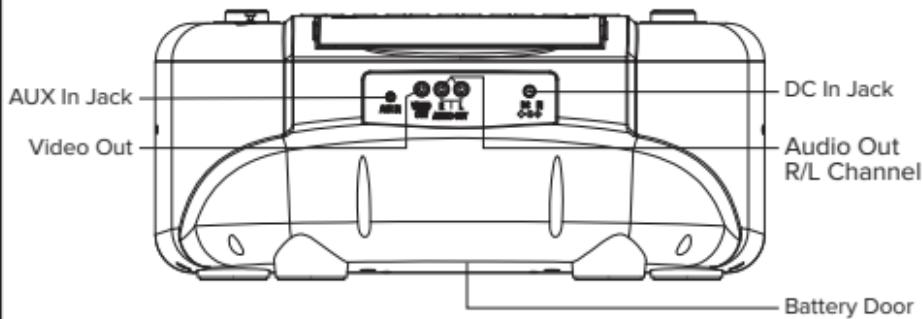

3.

REMOTE CONTROL

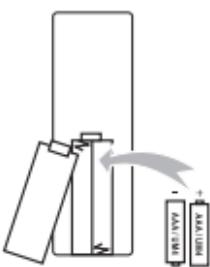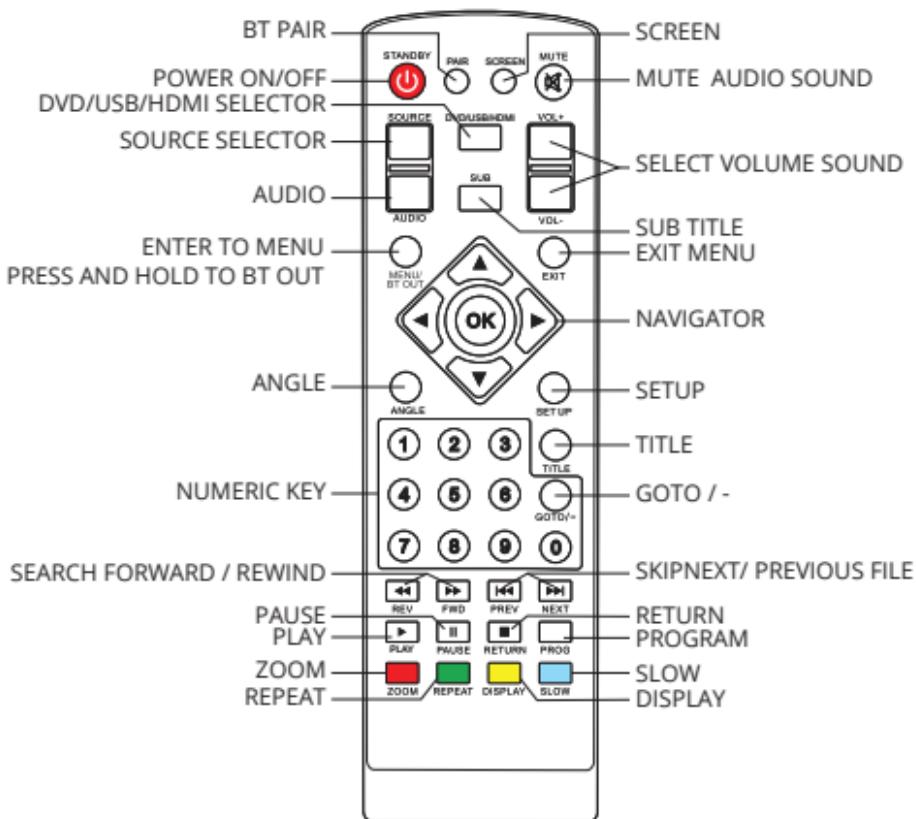

Inserting Batteries

1. Your remote control takes 2 AAA batteries.
2. Open the battery compartment on the rear of your remote.
3. Insert batteries with the correct polarity (+, -).
4. Close the battery compartment.

Warning


- Do not mix old and new batteries.
- Only use alkaline batteries.
- Do not expose batteries to excessive heat.
- Remove batteries if not in use for extended periods of time.

4.

POWER

Your boombox can be powered with the included AC adapter or by inserting 8 "D" size batteries (not included).

Powering with the Included AC Adapter:

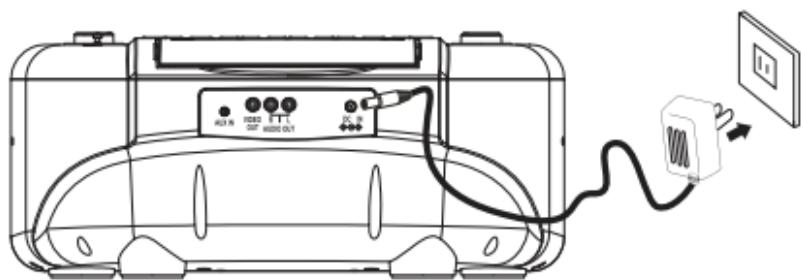

1. Insert the DC plug of adapter into the DC In jack on the back of your boombox.
2. Plug the AC adapter plug into a standard 120V AC outlet in your home.
3. Press the Power button on the top panel to turn on the unit.

NOTE: Unplug when not in use for extended periods.

Powering with Batteries:

1. Your boombox control takes 8 "D" size batteries.
2. Open the battery compartment on the bottom of your boombox.
3. Insert batteries with the correct polarity (+,-).
4. Close the battery compartment.

Warning

- Do not mix old and new batteries.
- Only use alkaline batteries.
- Do not expose batteries to excessive heat.
- Remove batteries if not in use for extended periods of time.

5.

TV/RCA CONNECTION

Your boombox can be connected to a television in order to watch DVDs. You can also connect it to external speakers for an enhanced audio experience.

Composite Video Output

1. Plug the included RCA audio/video cable into the VIDEO OUT port on the rear of the boom box and a composite video input on a television.
2. Adjust the television to the correct input setting.
3. When playing CDG discs, the boombox will output written lyrics to the connected television, acting as a karaoke machine.

RCA Audio Output

1. Plug the included RCA audio/video cable into the AUDIO OUT port on the rear of your boombox and an RCA audio input jack on a television or stereo system.
2. Adjust the television or stereo system to the correct input setting.
3. When playing a disc, the boombox will output audio to the connected television or stereo system. Use the external device to control the output sound level.

6.

DVD FUNCTION

IMPORTANT NOTE

DVD players used in devices like this are designed to fully read all commercial DVDs. They will also read self-compiled DVD-R/DVD-RW discs but it may take up to 10 seconds for playback to start. If playback does not start, it is likely due to the quality of the DVD-R/RW disc and/or the compatibility of the CD compilation software. The manufacturer of this product is not responsible for the playback quality of CD-R/RW discs.

Do not attach a label or seal to either side of the DVD-R/RW disc. It may cause a malfunction.

USING THE BOOMBOX TO PLAY DVDS:

1. Press the POWER button to power on the unit. A power indicator will illuminate.
2. If the unit is not in DVD mode, press the Source button repeatedly until DVD mode is selected.
3. In DVD mode, the unit will start to read the inserted DVD disc. If no DVD has been loaded in the DVD compartment, "NO DISC" will display with the DVD logo.
4. Put your finger on the "OPEN" mark area on the DVD Door and pull gently to open it.
5. Carefully load a DVD disc with its label side upward into the DVD compartment then gently close the DVD door.
6. The player will start reading the disc and playing.
7. Adjust the MASTER VOLUME knob to obtain the desired sound.
8. To temporarily stop playing, press the PLAY/PAUSE Button. To resume playing, press the PLAY/PAUSE Button again.
9. Press the Fast Forward button repeatedly to get the playback at speeds of x2, x4, x8, x20, or normal. Press the fast reverse button repeatedly to get playback at speeds of x2, x4, x8, x20, or normal but in reverse.
10. To stop playing, press the STOP button
11. Press the POWER button to turn off the unit after watching.

7.

USB FUNCTION

The unit is designed to play AUDIO, JPEG and VIDEO files stored on a USB flash drive. If the files on the USB device do not conform to common standards, they may not be played.

1. In DVD mode, press the DVD/USB/HDMI button once to access USB mode (display shows no USB).
2. Insert your USB flash drive into the USB port. The unit starts to read the USB flash drive.

Notes:

USB Function supports flash drives with capacity up to 32 GB maximum.

3. After reading the USB flash drive, the unit will display a menu to select AUDIO, JPEG or VIDEO. Using < & > buttons to select, press OK button to enter. Follow the on screen display to operate.
4. Press the RETURN button to return to the menu.

8.

HDMI FUNCTION

1. Plug an external device into the HDMI port located on the top of the boombox.
2. Power on your boombox, and when in DVD mode, press the DVD/USB/HDMI button twice to enter HDMI mode (display shows HDMI mode).
3. Turn on and start playing the external device that you have plugged into the HDMI port located.
4. Turn off both the external device and your boombox after use. Unplug the HDMI cable from HDMI port at the back of the unit.

Use with Streaming Sticks/Adapters or Other Sources.
This unit features HDMI In functionality for use with external sources such as satellite receivers or streaming sticks/adapters.

Use with a Chromecast™/Roku™/Amazon Fire TV Stick™ etc. allows streaming of a wide range of services to your boombox.

These devices usually also allow 'screen mirroring' so that you can play content from your phone/tablet directly to your boombox.

Simply plug your adapter into the top HDMI Input and power it from the power supply supplied with that adapter.

Alternatively the USB socket on the top of the boombox supports up to 1.5A power for powering such devices.

Keep in mind that these devices require Wi-Fi so your media boombox with stick attached will need to be in range of your Wi-Fi network.

NOTE: If using TV Sticks, please insert the TV Stick before turning on the power, then enter HDMI mode.

BLUETOOTH

The Bluetooth feature enables you to stream and play digital music from your Bluetooth enabled device to your boombox.

1. With your boombox powered on, press the Source button repeatedly to select Bluetooth mode (a “Bluetooth” sound is typically heard). The indicator light will flash.
2. The unit will start in auto connection mode and search for a previously paired device that is active and in range (30 feet/10 meters). If found, a brief welcome melody will be heard and the indicator light will stop flashing and remain solid. If no active device is found, the unit will switch to pairing mode and the Bluetooth indicator keeps flashing.
3. Go to the Bluetooth settings menu of your Bluetooth enabled device, and make sure Bluetooth is turned on. Then select “AL Media Boom 10” from the list of available devices.
4. Once a connection is made, you should hear a melodic tone and the indicator light will stop flashing and remain solid.
5. If you want to connect the Boombox to another new external Bluetooth enabled device, press and hold the PAIR button for few seconds to disconnect the existing connection. The unit will emit two short beeps and Bluetooth indicator will change to flash. Repeat steps 3 to 4 above to make a new link.

10.

BLUETOOTH

BLUETOOTH OUT (TRANSMITTER) FUNCTION

1. Press the SOURCE button to desired function mode except the Bluetooth receiver and FM radio modes.
2. Press and hold the BT OUT button, unit is in Bluetooth transmit pairing mode and Bluetooth indicator flashes.
3. Set your Bluetooth receiver such as headphone or speaker to ON and begin searching for devices.

NOTE:

- a.) If you have several Bluetooth receivers, switch off those receivers that are not in use and place the one to be linked near the unit to avoid Boombox linked to other unwanted Bluetooth enabled devices.
- b.) The effective distance between your external device and this apparatus is within 10 meters (30 feet).

4. Boombox will auto scan and pair with your Bluetooth receiver nearby, pair indicator light will change to solid to indicate a connection has been established.
5. Play music on Boombox in DVD, USB, HDMI or AUX mode, unit speaker sound will be off, you can listen to music by using your Bluetooth receiver such as a headphone or speaker wirelessly.
6. If you want change to pair with another Bluetooth Enabled Device, switch off the Bluetooth function of your Bluetooth receiver which was paired previously. Press and hold the BT OUT button to turn off the function and press and hold the BT OUT button again to pairing mode (repeat step 2 to 5).
7. Press and hold the BT OUT button when you finish listening in Bluetooth transmitter mode, Blue LED will be off and unit speaker will sound again.

Notes:

- 1.) When Bluetooth Receive/In or FM Radio modes are in use, the Bluetooth transmit/Out function is disabled.
- 2.) There will be a brief sound delay when enabling the Bluetooth Transmit/Out function
- 3.) Bluetooth Out (Transmitter) can only pair with Bluetooth receiver such as headphone or speaker for music streaming wirelessly. Use your Bluetooth device volume control if necessary.

11.

FM RADIO FUNCTION

1. Press the POWER button to power on your boombox.
2. Press the Source button repeatedly until FM mode is accessed (an “FM” sound is typically heard).
3. Tune to your desired station with the TUNING knob.
4. Adjust the MASTER VOLUME knob to obtain the desired sound level.

TIPS FOR BEST RADIO RECEPTION

When listening to FM radio stations, always keep the FM TELESCOPIC ANTENNA fully extended for best performance. If FM reception is weak, try repositioning the unit near an open window until you get better reception.

12.

AUX IN FUNCTION

You can play other music sources (iPods, MP3 players or other digital audio players) through the speakers of the boombox by connecting the AUX IN jack to your external player's audio out jack or headphone jack.

1. Plug one end of a 3.5mm audio cable (not included) into the AUX IN jack located on the back of the boombox and the other end of the cable to the headphone jack of your digital audio player.
2. Press the Source button repeatedly until AUX IN mode is accessed (an "Auxiliary" sound is typically heard).
3. Turn on and start playing the external device you plugged into the AUX IN jack.
4. Slowly adjust both the volume controls of your unit and the external device until you reach a comfortable listening level.
5. Turn off both the external audio player and this unit after use. Unplug the audio cable from AUX IN jack.

Notes:

--If you connect the unit to the Line-Out Jack of your external device, you only need to adjust the VOLUME CONTROL of your unit. If you connect to the Headphone Jack of your external device, you may need to adjust both the volume controls of your external device and the unit to obtain the desirable listening level.

--Remember to turn off the unit when you have finished listening. Don't forget to switch off the power of your external audio device as well.


13.

SYSTEM SETUP

Setup menu for SYSTEM, LANGUAGE, AUDIO and VIDEO

In DVD/USB/HDMI mode, access the setup menu by pressing SET UP button on the unit or remote.

SYSTEM Menu

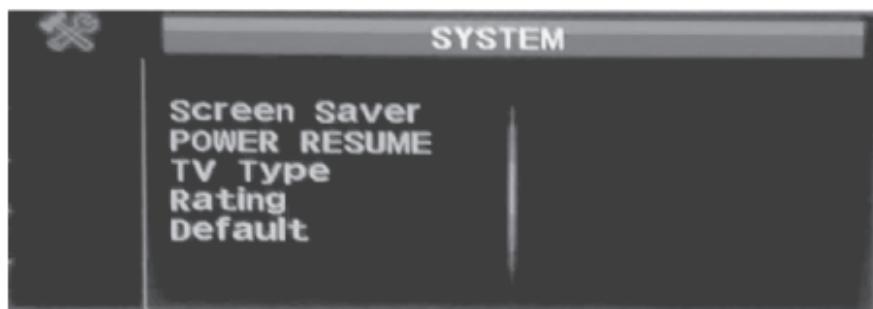

1. Screen Saver

Turn the screen saver feature ON/OFF.

2. Power Resume

Turn the last-position memory feature ON/OFF.

3. TV Type

Select 4:3PS, 4:3LB or 16:9 using the Arrow buttons on the unit or remote.


4. Rating

Select rating level between 1 and 8 (Level 1 for KID and Level 8 for ADULT) using the Arrow buttons on the unit or remote.

5. Default

Reset the player and restore all of the default settings using the Arrow and OK buttons on the unit or remote.

LANGUAGE Menu

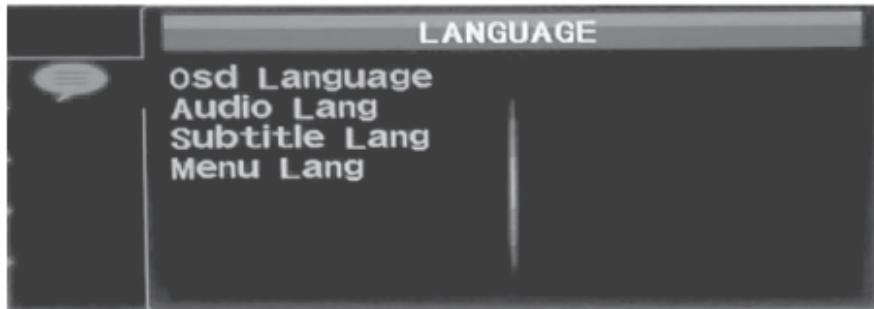

1. OSD Language

Select English, German, Spanish, French or Portuguese for the On Screen Display using the Arrow buttons on the unit or remote.

2. Audio Language

Select Chinese, English, Japanese, French, Spanish, Portuguese, German or Italian for the Audio Language using the Arrow buttons on the unit or remote.

3. Subtitle Lang

Select Chinese, English, Japanese, French, Spanish, Portuguese, German or off for the Subtitle Language using the Arrow buttons on the unit or remote.

4. Menu Lang

Select Chinese, English, Japanese, French, Spanish, Portuguese, German or Italian for the Menu Language using the Arrow buttons on the unit or remote.

AUDIO Menu




1. Key

Adjust the Audio output tone between flat (b) and sharp (#) using the Arrow buttons on the unit or remote.

2. Dual Mono

Select Stereo, Mono L, Mono R, or Mix Mono using the Arrow buttons on the unit or remote.

VIDEO Menu

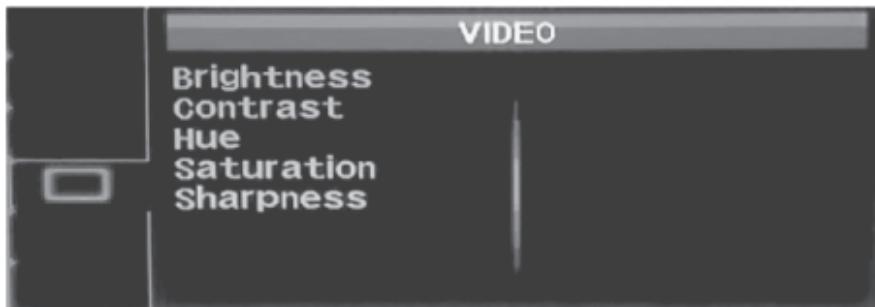

1. Brightness

Set the brightness level between 0 and 12 using the Arrow buttons on the unit or remote.

2. Contrast

Set the contrast level between 0 and 12 using the Arrow buttons on the unit or remote

3. Hue

Set the hue level between -6 and +6 using the Arrow buttons on the unit or remote

4. Saturation


Set the saturation level between 0 and 12 using the Arrow buttons on the unit or remote

5. Sharpness

Set the sharpness level between 0 and 8 using the Arrow buttons on the unit or remote

14.

SAFETY PRECAUTIONS

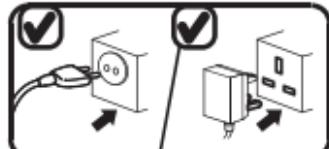

TO PREVENT FIRE OR SHOCK HAZARD, DO NOT USE THIS PLUG WITH AN EXTENSION CORD, RECEPTACLE OR OTHER OUTLET UNLESS THE BLADES CAN BE FULLY INSERTED TO PREVENT BLADE EXPOSURE. TO PREVENT FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.

CLASS 1 LASER PRODUCT

CLASS 1 LASER PRODUCT
APPAREIL LASER DE CLASSE 1
PRODUCTO LASER DE CLASE 1

CAUTION
INVISIBLE LASER RADIATION
WHEN OPEN AND INTERLOCKS
DEFEATED.
AVOID EXPOSURE TO BEAM



This product contains a low power laser device.

15.

SPECIFICATIONS

Radio Frequency Range: FM 88 - 108MHz

Bluetooth: V5.3

Audio Output Power: 3W X 2 (RMS)

Batteries: 1.5V x 8 "D" Size batteries (Not included)

AC Adapter: Output DC 5V $\frac{1}{2}$, 3A $\frac{1}{2}$ $\frac{1}{2}$

*Note: specs may change due to factory model or system upgrades

16.

FCC STATEMENT

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.
- The device has been evaluated to meet general RF exposure requirement. The device can be used importable exposure condition without restriction.

**Having Trouble?
We're here to help!**

Call us 24/7 at 1-855-292-4087
E-mail us at support@alteclansing.com
or visit us at alteclansing.com

**Keep manual and all
relevant information for
future reference.**

17.

WARRANTY

This warranty covers the original consumer purchaser only and is not transferable.

This warranty covers products that fail to function properly UNDER NORMAL USAGE, due to defects in material or workmanship. Your product will be repaired or replaced at no charge for parts or labor for a period of one year.

What Is Not Covered by Warranty:

Damages or malfunctions not resulting from defects in material or workmanship and damages or malfunctions from other than normal use, including but limited to, repair by unauthorized parties, tampering, modification or accident.

To Obtain Warranty Service and Troubleshooting Information:

Call 1-855-292-4087 or Visit our website at www.alteclansing.com.

To receive Warranty service along with the name and address of an authorized product service center, the original consumer purchaser must contact us for problem determination and service procedures. Proof of purchase in the form of a bill of sale or receipted invoice, evidencing that the Product is within the applicable Warranty period(s), MUST be presented in order to obtain the requested service. It is your responsibility to properly package and send any defective products along with a dated copy of proof of purchase, a written explanation of the problem, and a valid return address to the authorized service center at your expense. Do not include any other items or accessories with the defective product. Any products received by the authorized service center that are not covered by warranty will be returned unrepairs.

NO WARRANTIES, WHETHER EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, OTHER THAN THOSE EXPRESSLY DESCRIBED ABOVE SHALL APPLY. DISTRIBUTOR FURTHER DISCLAIMS ALL WARRANTIES AFTER THE EXPRESS WARRANTY PERIOD STATED ABOVE. NO OTHER EXPRESS WARRANTY OR GUARANTY GIVEN BY ANY PERSON, FIRM OR ENTITY WITH RESPECT TO THE PRODUCT SHALL BE BINDING ON DISTRIBUTOR. REPAIR, REPLACEMENT, OR REFUND OF THE ORIGINAL PURCHASE PRICE - AT DISTRIBUTOR'S SOLE DISCRETION -ARE THE EXCLUSIVE REMEDIES OF THE CONSUMER. IN NO EVENT WILL DISTRIBUTOR, ITS MANUFACTURERS, OR SAKAR INT. BE LIABLE FOR ANY INCIDENTAL, DIRECT, INDIRECT, SPECIAL, PUNITIVE OR CONSEQUENTIAL DAMAGES (SUCH AS, BUT NOT LIMITED TO, DAMAGES FOR LOSS OF PROFITS, BUSINESS, SAVINGS, DATA OR RECORDS) CAUSED BY THE USE, MISUSE OR INABILITY TO USE THE PRODUCT. EXCEPT AS STATED HEREIN, NO OTHER WARRANTIES SHALL APPLY. NOTWITHSTANDING THE FOREGOING, CONSUMER'S RECOVERY AGAINST DISTRIBUTOR SHALL NOT EXCEED THE PURCHASE PRICE OF THE PRODUCT SOLD BY DISTRIBUTOR. THIS WARRANTY SHALL NOT EXTEND TO ANYONE OTHER THAN THE ORIGINAL CONSUMER WHO PURCHASED THE PRODUCT AND IS NOT TRANSFERABLE.

Some countries, states or provinces do not allow the exclusion or limitation of incidental or consequential damages or allow limitations on warranties, so limitation or exclusions may not apply to you. This warranty gives you specific legal rights, and you may have other rights that vary from state to state or province to province. Contact your authorized retailer to determine if another warranty applies. This product is manufactured, distributed and sold by SAKAR International, Inc. All other trademarks are the property of the respective owner, who has not sponsored, endorsed or approved this product.

JUST LISTEN.

The Bluetooth® word mark and logos are registered trademarks owned by the Bluetooth SIG, Inc. and use of such marks by AL Infinity, LLC is under license. Other trademarks and trade names are those of their respective owners.