

A5 16P 128g铜版纸 单黑印刷 钉成册

JVC SP-PA200BT
Party Speaker

Instruction Manual





Website: www.jvc.com/usa

1

Notice:
*Please read Instruction Manual carefully and keep it for your records.


Package include:
• SP-PA200BT (Bluetooth®Speaker) x 1pcs
• AC/DC Adapter x 1pcs
• Instruction Manual x 1pcs
• Warranty Card x 1pcs

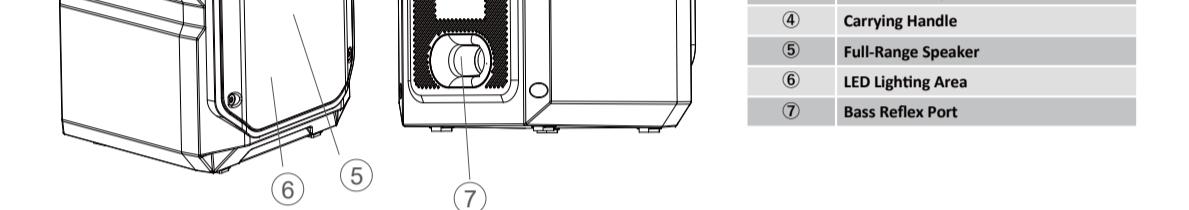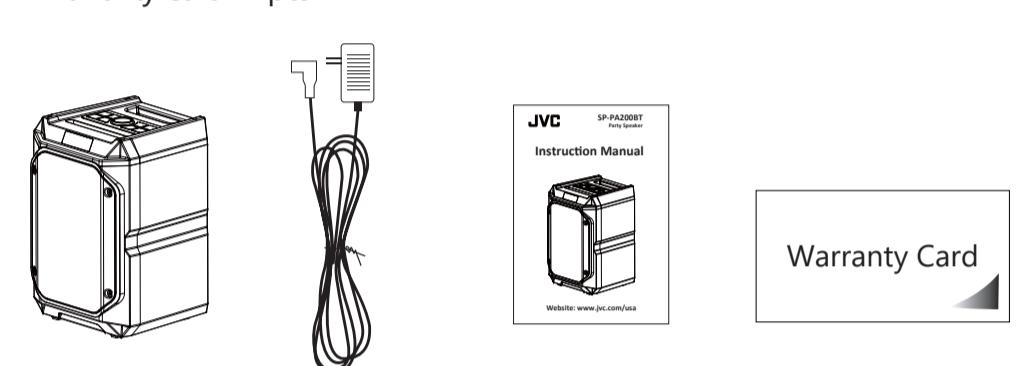

Safety Instructions:

- Never disassemble SP-PA200BT in an attempt to make any repair as this could result in electrical shorts, fires, or product failure.
- Use extra caution in handling spurs.
- Do not expose SP-PA200BT to direct heat or flame.
- SP-PA200BT will not be covered under Warranty if the product shows metal rust, surface spurs, or any other unnatural oxidation.
- Do not short or damage any other part of the device.
- SP-PA200BT may become warm while charging.
- Make sure to always completely turn off both the SP-PA200BT and power outlet before unplugging.
- Use a soft cloth with plenty of water to clean.
- Do not press the buttons to hard as it could damage SP-PA200BT.
- Only use dry cloth to keep SP-PA200BT clean from dust.
- Do not use chemicals on SP-PA200BT.
- Auto Off: 15min.
- Bluetooth® Working Distance: 33 ft / 10m
- Input Power: 100V~240V, 50/60Hz
- AC Adapter INPUT: 100V~240V, 50/60Hz
- OUTPUT DC15V=3.2A
- Operation Temperature: 68~104°F / -5~40°C
- Size: 10.4x15x10 inch / 265x380x254mm

2

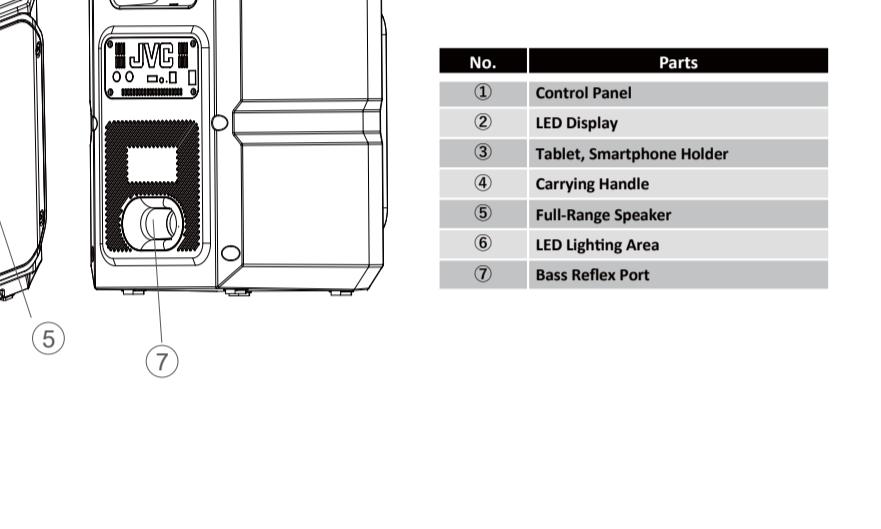

Specifications:

- Bluetooth® Version 5.3
- 6.5 inch x 1 Woofer, 1 inch x 1 Tweeter
- Battery Capacity: 7.4V / 3.600mAh
- Battery: Li-Polymer
- Digital echo for karaoke
- FM 87.5~108MHz
- AUX In: 3.5mm
- USB: 3.2A
- LED Lighting (6 modes)
- Notification Beep
- Auto Off: 15min.
- Bluetooth® Working Distance: 33 ft / 10m
- Input Power: 100V~240V, 50/60Hz
- AC Adapter INPUT: 100V~240V, 50/60Hz
- Operation Temperature: 68~104°F / -5~40°C
- Size: 10.4x15x10 inch / 265x380x254mm

3

Microphone Volume and Mute Control:
• Microphone Volume Up/Down: Short-Press "VOL. MENU" Button ① 1 time, then turn "Rotary Volume" ② to Right (CW) to increase; to Left (CCW) to decrease.
• Mute On: Short-Press "Rotary Volume" ②
• Mute Off: Short-Press "Rotary Volume" ② or Turn Right or Turn Left Rotary Volume ②

Echo Level Control:

- Main Echo Level Up/Down: Short-Press "VOL. MENU" Button ② 2 times, then turn "Rotary Volume" to Right (CW) to increase; to Left (CCW) to decrease.

EQ Control:

- You can select from 5 modes of Equalizer (including Off) by Short-Press ② as below:

Power Control (Auto Power Off):

- **Bluetooth® Mode:**
SP-PA200BT will Power Off automatically if not connected within 15 minutes while being Powered On.

• USB Audio Mode:

- If SP-PA200BT is Powered On and the USB Audio is in the Paused state by Short-Press "▶" ② Button ②, SP-PA200BT will Power Off after 15 minutes.

• AUX Input Mode:

- When SP-PA200BT is Powered On and the AUX Input Audio is in the Mute On state by Short-Press "Rotary Volume" ②, SP-PA200BT will Power Off after 15 minutes. NOTE: Auto Power Off function is deactivated when FM Radio Mode is NOT in the Mute On state.

• FM Radio Mode:

- While SP-PA200BT is Powered On and the FM Radio Mode is in the Mute On state by Short-Press "Rotary Volume" ②, SP-PA200BT will Power Off after 15 minutes. NOTE: Auto Power Off function is deactivated when FM Radio Mode is NOT in the Mute On state.

Charging:
• Low Battery Notification Beep will occur when the battery is lower than 20% and "■" will blink.

• Connect the Adapter to DC in ①.
• Charge indicator ② will show as Red while charging Battery.
• Charge Indicator will change from Red to Green when Battery is fully charged.

Factory Reset:
(1) Select FM by Short-Press "MODE" Button ② while Power On.
(2) Press & Hold "set" Button ② for at least 8 seconds.
(3) LED Display show "■■■■" when Reset is completed.

ATTENTION:

- Microphone Volume Up/Down: Short-Press "VOL. MENU" Button ① 1 time, then turn "Rotary Volume" ② to Right (CW) to increase; to Left (CCW) to decrease.
• Mute On: Short-Press "Rotary Volume" ②
• Mute Off: Short-Press "Rotary Volume" ② or Turn Right or Turn Left Rotary Volume ②

ECHO LEVEL CONTROL:

- Main Echo Level Up/Down: Short-Press "VOL. MENU" Button ② 2 times, then turn "Rotary Volume" to Right (CW) to increase; to Left (CCW) to decrease.

EQ CONTROL:

- You can select from 5 modes of Equalizer (including Off) by Short-Press ② as below:



POWER CONTROL (AUTO POWER OFF):

- **Bluetooth® Mode:**
SP-PA200BT will Power Off automatically if not connected within 15 minutes while being Powered On.

• USB Audio Mode:

- If SP-PA200BT is Powered On and the USB Audio is in the Paused state by Short-Press "▶" ② Button ②, SP-PA200BT will Power Off after 15 minutes.

• AUX Input Mode:

- When SP-PA200BT is Powered On and the AUX Input Audio is in the Mute On state by Short-Press "Rotary Volume" ②, SP-PA200BT will Power Off after 15 minutes. NOTE: Auto Power Off function is deactivated when FM Radio Mode is NOT in the Mute On state.


• FM Radio Mode:

- While SP-PA200BT is Powered On and the FM Radio Mode is in the Mute On state by Short-Press "Rotary Volume" ②, SP-PA200BT will Power Off after 15 minutes. NOTE: Auto Power Off function is deactivated when FM Radio Mode is NOT in the Mute On state.

9

10

11

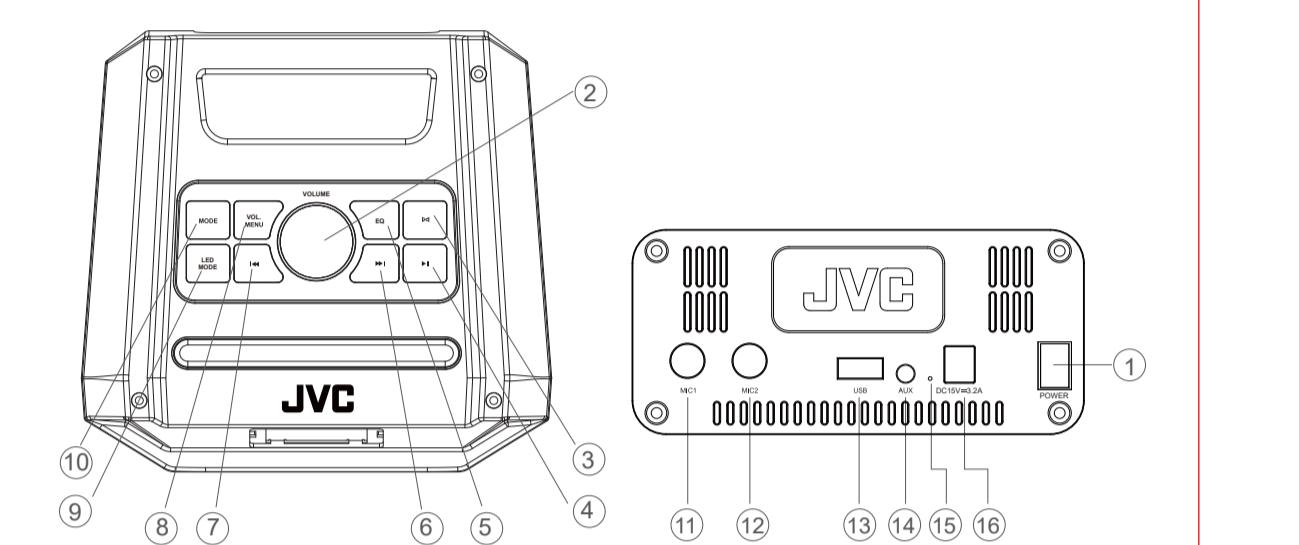

Function

Button / Slot

Display

Operation

Power On/Off

① Power

② Volume

③ TWS Pairing Mode

④ EQ (Equalizer)

⑤ (Next Song)

⑥ (Previous Song)

⑦ VOL. MENU

⑧ LED MODE (LED Lighting)

⑨ MODE

⑩ MIC1 (Microphone-1 Slot)

⑪ MIC2 (Microphone-2 Slot)

⑫ USB (USB-A Slot, device had MP3 music program)

⑬ AUX (AUX Slot, Audio input port)

⑭ Change Indicator

⑮ DC15V=3.2A (DC Power Input)

⑯ Control Panel

⑰ LED Lighting Area

⑱ Base Reflector

⑲ Main Volume Up/Down

⑳ Main Volume Mute

⑳ Main Volume Off

⑳ Main Volume Mute