

Intelligent Touch Panel

(Bluetooth + DMX / Programmable)



Manual www.ltech-led.com

FC CE RoHS

Product Introduction

The Intelligent Touch Panel is an American base wall switch, integrating Bluetooth 5.0 mesh protocol and DMX signals. It is a simple but elegant design with CNC aviation aluminum frame and 2.5D tempered glass. The panel is suitable for multi-scene and multi-zone lighting control applications. Working with Bluetooth systems makes it more convenient and intelligent.

Package Contents





Intelligent Touch Panel × 1


Manual × 1

Technical Specs

Model	UB1	UB2	UB4	UB5		
Control mode	DIM	CT	RGBW	RGBWY		
Input voltage	12-24VDC, Powered by Class 2					
Wireless protocol type	Bluetooth 5.0 Mesh					
Output signals	DMX 512					
Zones	4					
Working temperature	-20°C~55°C					
Dimensions (L×W×H)	120×75×30(mm)					
Package size (L×W×H)	153×107×55(mm)					
GW	225g					

Product Size

Unit: mm

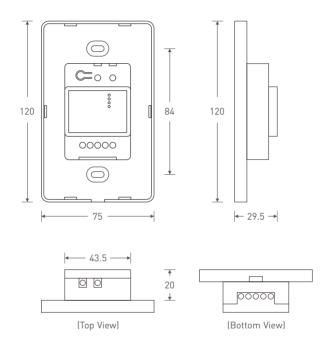


Key Functions

UR1



UB₂

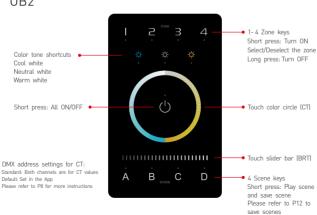

Key Functions

IIR/

12. Red purple gradient

13. Blue white gradient 14. Yellow purple cvan gradient

15. 3 color gradient 16. Full color gradient





Please refer to P12 to

 
save scenes

Recommended Applications


1.Wireless Control



2. Wireless + Wired control (With reliable and stable signals)



 3. Wireless + Wired control (Enriching different lighting applications)




4. Visual control + Remote control of traditional panels




5. More application combinations of intelligent control are waiting for you to set.

Bluetooth Application Diagram

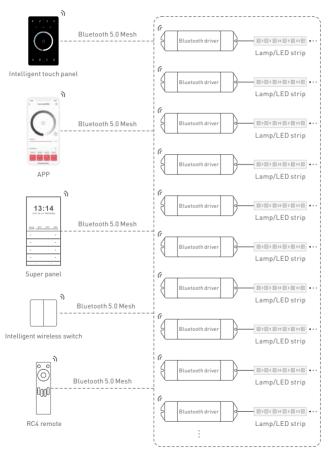

DMX Application Diagram

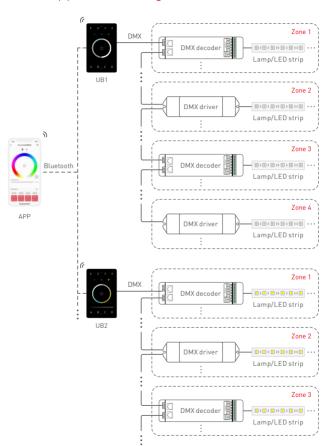

Each zone can be installed with multiple decoders. When the total number of decoders in 4 zones exceeds 32, please add DMX signal amplifiers.


DMX Channel Output Sheet

_		I		I	1
Types Addresses Zones	DIM	CT	CT2	RGBW	RGBWY
1	DIM1	C1	BRT1	R1	R1
2	DIM2	W1	CT1	G1	G1
3	DIM3	C2	BRT2	B1	B1
4	DIM4	W2	CT2	W1	W1
5	DIM1	C3	BRT3	R2	Y1
6	DIM2	W3	CT3	G2	R2
7	DIM3	C4	BRT4	B2	G2
8	DIM4	W4	CT4	W2	B2
9	DIM1	C1	BRT1	R3	W2
10	DIM2	W1	CT1	G3	Y2
11	DIM3	C2	BRT2	В3	R3
12	DIM4	W2	CT2	W3	G3
13	DIM1	C3	BRT3	R4	В3
14	DIM2	W3	CT3	G4	W3
15	DIM3	C4	BRT4	B4	Y3
16	DIM4	W4	CT4	W4	R4
17	DIM1	C1	BRT1	R1	G4
18	DIM2	W1	CT1	G1	B4
19	DIM3	C2	BRT2	B1	W4
20	DIM4	W2	CT2	W1	Y4
:	:	:	:	1	:
500	DIM4	W2	CT2	W1	Y4
:	:	:	:	1	
512	DIM4	W2	CT2	W4	


As shown in the sheet above, every 4 DIM addresses are circulated in 4 zones, every 8 addresses of CT1 and CT2 are circulated in 4 zones, every 16 RGBW addresses are circulated in 4 zones, every 20 RGBWY addresses are circulated in 4 zones.

Installation Instructions

 
Step 1: Remove the panel plate with a flathead screwdriver, as shown below.




Step 2: Attach the wires to the panel, as shown in the diagram below . Please be sure to turn off the power to the circuit at the circuit breaker or fuse box before attaching the wires.

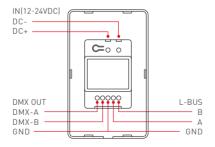

Step 3: Install the panel plate. Once the wires are attached correctly, you can gently fold any excess wire and compress the panel into the junction box. Tighten the screws to secure the panel plate to the box.

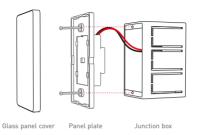

 Step 4: Put the panel cover in place. Gently snap the panel cover onto the plate.



Attentions

- Please use in spacious and open space. Avoid metal obstructions above and in front of products.
- Please use in a cool and dry environment.
- . No disassembly of products so as not to affect the warranty.
- · Avoid direct contact with light and heat.
- Please do not open, modify, repair or maintain products without authorization, otherwise warranties are not allowed.

App Operating Instructions

1.Register an account

- 1.1 Scan the QR code below with your mobile phone and follow the prompts to complete the app installation.
- 1.2 Open the App and log in or register an account.



Scan and download the App

2.Paring instructions

After a new user creating a home, click "+"icon in the upper right corner and come to the "Add device" list. Follow the prompts to add the driver successfully. Then choose "Intelligent switch- intelligent touch panel" in "Add device" list. Follow the prompts and ensure that the panel is powered on normally. Long press A key and D key simultaneously until the indicator light is flashing so as to put the panel into the activated mode, and then follow the prompts to add the panel by clicking "Bluetooth search" at the bottom of the App.







3. How to bind lights /light groups and save scenes

After pairing, get access to control interface and choose the button for the zone lighting you are editing. The button can bind lights and light groups.

Local scenes: After adjusting the zone lighting to appropriate status, click "Save" button and follow the prompts to save lighting status of the zone in the scene. After saving, click the corresponding scene button to execute the current local lighting scene (Supporting 16 scenes currently).



4. How to bind a bluetooth remote/bluetooth intelligent wireless switch Please refer to the manuals of bluetooth remote / bluetooth intelligent wireless switch. After adding the device, access the control interface and bind the corresponding intelligent touch panels.



5. Normal modes and advanced modes


Normal modes: Click "Mode"icon and access the mode interface. Click the blank area of the mode and it can be executed. There are 12 editable normal modes in total which satisfy the general needs of customers[Currently, only RGBW & RGBWY support normal modes]. Advanced modes: Click the blank area of the mode and it can be executed. There are 8 editable advanced modes in total which satisfy the general needs of customers.



Edit modes: Switch to "Me" menu and click "Lighting mode settings". After selecting the light fixture type, click the blank area of mode to get access to the editable mode interface and edit it.



After complete editing, click "Apply" and the mode can be applied to the device.

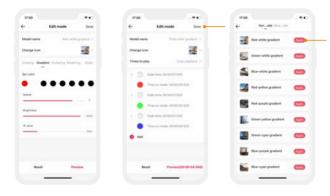

6. How to share control of your home

The home sharing mode adopted are able to share the home or transfer the home founder to other home members. Switch to "Me" menu and choose "Home management". Click the home that you want to share and click "Add member", then follow the prompts to complete the home sharing .







Warning

Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules.

Operation is subject to the following two conditions:

[1] this device may not cause harmful interference, and [2] this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interferencetoradio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- -- Reorient or relocate the receiving antenna.
- -- Increase the separation between the equipment and receiver.
- -- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- -- Consult the dealer or an experienced radio/TV technician for help.

To maintain compliance with FCC's RF exposure guidelines, the distance must be at least 20cm between the radiator and your body, and fully supported by the operating and installation configurations of the transmitter and its antenna(s).

* This manual is subject to changes without further notice. Product functions depend on the goods. Please feel free to contact our official distributors if you have any question.

Warranty Agreement

Warranty periods from the date of delivery : 2 years.

Free repair or replacement services for quality problems are provided within warranty periods.

Warranty exclusions below:

- . Beyond warranty periods.
- . Any artificial damage caused by high voltage, overload, or improper operations.
- · Products with severe physical damage.
- Damage caused by natural disasters and force majeure.
- · Warranty labels and barcodes have been damaged.
- · No any contract signed by LTECH.
- Repair or replacement provided is the only remedy for customers.LTECH is not liable for any incidental
 or consequential damage unless it is within the law.
- LTECH has the right to amend or adjust the terms of this warranty, and release in written form shall prevail.

Update Time: 22/12/2020 A0 15