FRONT

BACK



enabled devices

•YOUR IJOY PRODUCT

MANUAL

Thank you for purchasing and using the "IJOY WAVE" wireless Bluetooth® earbuds with case. This product can provide a high quality listening experience for your mobile phone, computer and other media devices. Before using this product, carefully read this manual to correctly operate this device. Please ask your local dealer if you have any questions.

WAVE Bluetooth® Earbuds X 2 Charging Case X 1 Charging Cable X 1 User Manual X 1

•SPECS

Bluetooth® version: 5.0 Battery Voltage: DC 5V Battery: 3.7V/ 35mAh Earbud battery: 27mAh Charging case battery: 300mAh Playtime: Up to 3 hours Charging time: 1 hour Standby time: 20 hours Sweatproof: IPX4 Frequency: 20-20000 Hz Impedance: 32Ω

Quest USA CORP 495 Flatbush Ave. Brooklyn, NY 11225

© Goijoy & IJOY are registered trademarks of Quest USA Corp. All other trademarks and trade names are property of their respective

Designed by GOIJOY & IJOY in New York. All rights reserved. Limited lifetime warranty. To activate your product warranty, go to our website www.goijoy.com & register this product.

Made in China.

•BATTERY CAUTION


The battery used in this device may present a risk of fire, explosion or chemical burn if used incorrectly. Never use or charge the battery if it appears to be leaking, discolored, deformed or in any way abnormal. Never disassemble the unit or attempt to remove the battery as that could cause leakage of alkaline solution or other electrolytic substances. Never expose the battery to any liquid. Never expose the battery to excessive heat such as direct light or fire. Always keep the battery out of the reach of infants and small children.

•BATTERY DISPOSAL

Please do not attempt to change the battery yourself. If the battery has died, you should follow the disposal instructions listed here. Never dispose of used batteries/electronics with ordinary solid wastes. Always dispose of used batteries/electronics in accordance with the prevailing community regulations that apply to the disposal of batteries/electronics. If there are no local regulations concerning battery/electronics disposal, please dispose of the device in a waste bin for electronic devices. Many electronics retailers now recycle batteries and other electronic components at no charge.

•DEVICE FUNCTIONS

- CALL FUNCTION
- Answering a call: Press 3 once • Ending a call: Press **3** once
- Wake up intelligent voice assistant:
- Press and hold **3** for 3 seconds
- ADJUSTING VOLUME AND CONTROLLING MUSIC PLAYBACK
- Play/Pause Music: Press 3 once • Decrease volume: Press • once
- Increase volume: Press 2 once
- Play next song: Double click **3**

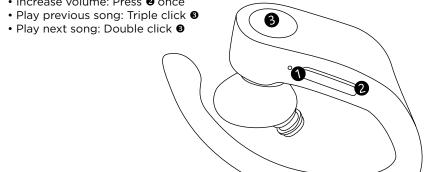

INSTRUCTIONS

POWERING ON/OFF

- The earbuds should automatically turn on when you remove them from the charging case. If they do not, press 9 for 5 seconds. Blue and red lights should
- To turn the earbuds OFF, press 3 for 5 seconds or just put them inside the charging case. Red lights will flash 3 times when they turn off. They will turn off automatically after 3 minutes if there is no Bluetooth® connection. PAIRING YOUR PRODUCT
- Take the two earbuds out of the case. They should automatically power on and the left and right earbuds will enter pairing mode. You should see flashing blue and red lights. When one's LED light turns off and the another one's blue and red
- lights flash alternately, the earbuds have successfully connected to each other. Place the earbuds within 32 ft of a Bluetooth® enabled device. Enable Bluetooth® on the device you want to connect the earbuds to and search for "IJOY WAVE". Select "IJOY WAVE" to connect. The earbuds will automatically connect to this same device next time both items are turned on.

CHARGING

- The charging case offers additional power for the earbuds. Put the earbuds into the charging case. The white light on the case will turn on as the earbuds are charging and turn off when the charging case is out of power. Press and hold the charging case's power button to turn off the charging function when the charging
- Use the charging cable provided to charge the charging case. Connect the cable to the port of the case. You will see a flashing white light. The white light will stop flashing and be consistent when the charging case is full of power.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and

(2) This device must accept any interference received, including terference that may cause undesired operation.

Warning: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against narmful interference in a residential installation. This equipment

generates uses and can radiate radio frequency energy and, if not nstalled and used in accordance with the instructions, may cause harmful terference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

eorient or relocate the receiving antenna.

without restriction.

Increase the separation between the equipment and receiver. Connect the equipment into an outlet on a circuit different from that to hich the receiver is connected.

Consult the dealer or an experienced radio/TV technician for help. RF warning statement:

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition

•OTHER IMPORTANT SAFETY INFORMATION

To avoid danger of choking, please keep cables away from babies and children. This product is not a toy. Do not treat this product as household waste. Dispose of this device properly by handing it over to local collection services for recycling of electronic equipment. By ensuring that this product is properly disposed of, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handing. For more detailed information about this product, please contact your local household waste disposal service or the shop where you purchased this item.



·LIMITED LIFETIME WARRANTY

Our product is warranted for a limited lifetime warranty from the date of purchase. The warranty is provided on all material defects and workmanship. Guarantee of 24 months does not apply to decreases in the effective capacity caused by its use or age. WE RESERVE THE RIGHT TO CHANGE TECHNICAL SPECIFICATIONS. For more information please visit, www.goijoy.com.