

English

VIDEO DOORBELL



V 1.0

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

 
Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates noise and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.


FCC Radiation Exposure statement
The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

Product Instructions

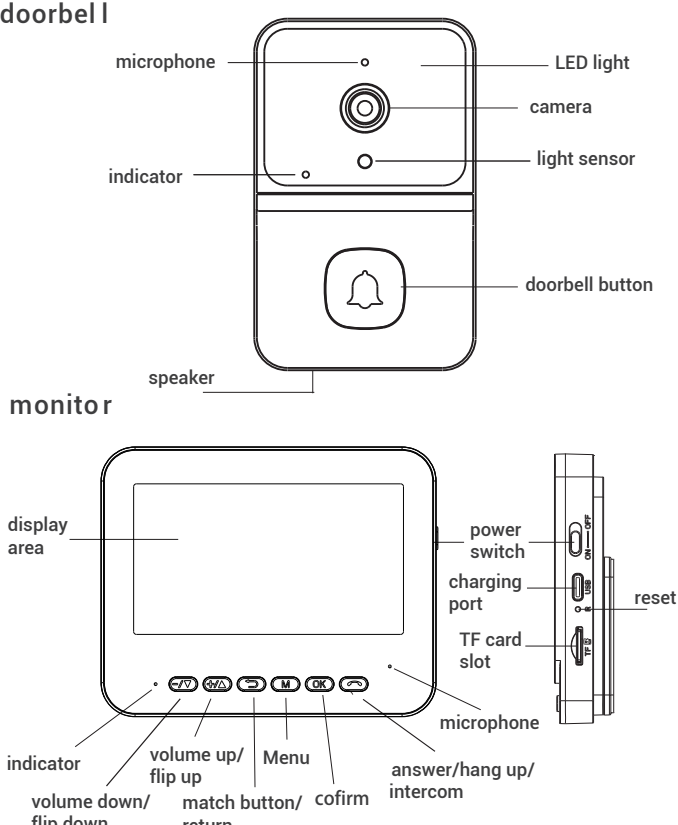


Install your Doorbell

 Mark drill holes and use a bit to drill holes in your wall. Insert anchors and secure your doorbell with mounting and security screws.

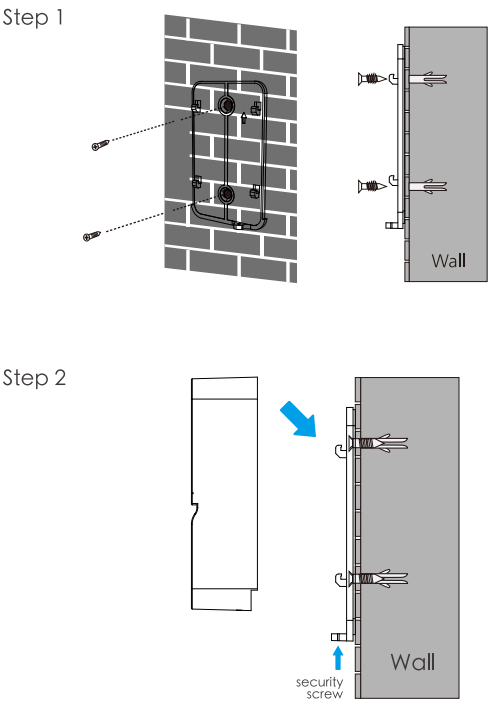

Pairing Doorbe ll&Monitor

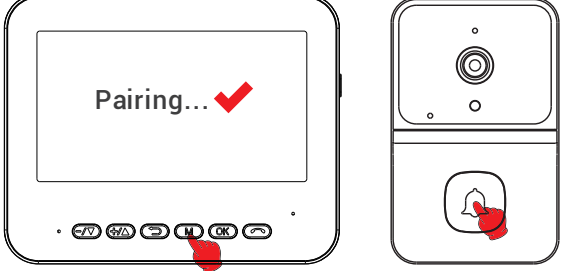 


- power on the monitor, hold and press the "M" button, the LCD display shows "pairing... 30,29,28..." counting down, suggesting enters the pairing mode.
- meanwhile, hold and press the doorbell button for 5 seconds.
- the monitor display shows "pairing..." suggesting paired successfully.

Icons Instructions

menu	pairing/return
answer/hang up/intercom	confirm
volume down/next	signal strength
volume up/previous	intercom volume
photo files	doorbell battery
video files	monitor battery
ringtones	intercom icon
settings	

Charge the Doorbell

 Fully charge the doorbell by a 5V/1A USB charger and a type-c USB cable. It takes about 10 hours to fully charge.

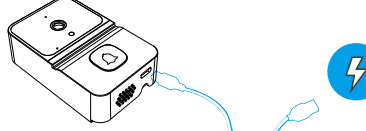

WARNING: Lots of events
If you have excessive number of visitors, you might need to charge it sooner.

Notes

- in Menu interface, M button is return to previous page
- in Menu interface, confirm button is confirm function when someone press doorbell, short press to answer/hang up, hold and press to start intercom and talk to visitor. the doorbell and monitor will both enter sleeping mode after hang up.

Photos: when someone press the doorbell, the camera will automatically capture the photo and save it in monitor device (maximum 50 images) after 50 images, it will automatically delete the first image and save the latest one.

Video recording: This function requires inserting the SD card, when someone press the doorbell, the monitor will automatically open the video recording cycle coverage, and save the latest video.