


## INTRODUCTION-REMOTE CONTROL

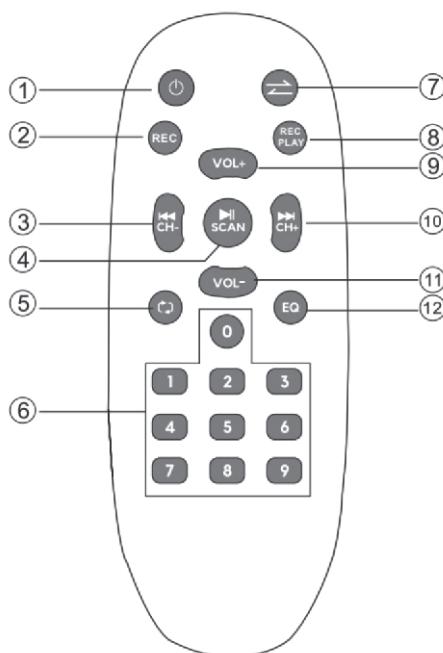

### 1. Power Button

When ON/OFF switch on the unit is in the on position, press the remote control Power Button to switch between standby and on.

### 2. Record function

Under USB/TF card mode, press "REC" button to record

### 3. Previous Song

In USB/TF card mode press once to go back to the previous song; press and hold for 3 seconds to rewind the current song  
In Wireless BT mode, press once to go back to the previous song  
In FM mode, press once to go back to the previous channel  
In LINE IN/AUX-In mode this button has no function

### 4. Pause&Play / SCAN

In USB/TF card/BT mode, press this button to play/pause a song  
In FM mode, press once to scan or stop the auto scanning  
In LINE IN/AUX-In mode this button has no function

### 5. Repeat

Press to repeat one song or repeat all songs.  
In Wireless BT mode, this button has no function

### 6. Numbers Button

In USB/TF card mode press to select a song  
In FM Radio mode, press to select a channel  
For the other modes these buttons have no function

### 7. Mode

Press repeatedly to select the following modes LINE (Aux-In)/USB/TF CARD / FM Radio/Wireless BT  
Press and hold to turn the voice prompt ON/OFF.

### 8. Record play

9. Volume +/-  
Press to increase the volume in any mode

### 10. Next Song

In USB/TF card mode press once to skip to the next song; press and hold for 3 seconds to fast  
In Wireless BT mode, press once to skip to the next song  
In FM mode, press once to skip to the next channel  
In LINE IN (AUX-In) mode, this button has no function

### 11. Volume-

Press to turn the volume down in any mode

### 12. EQ(Equilibrium)

Press to switch between the different EQ settings

## OPERATING INSTRUCTIONS

### ● Wireless BT Pairing Mode:

Press MODE or Blue button on the unit or the remote control until BT is selected.

1. Put the cell phone within 20 meters;
2. Activate the BT features on your cell phone so that the cell phone starts to search for the BT device. Please refer to the users' manual for details
3. Select the correct model No. T800 from the device found by the cell phone;
4. Shortly press PLAY/PAUSE button to play or pause music. Short press or key to select the previous or next track.

### ● LINE IN MODE:

Press MODE button on the unit or the remote control until LINE is selected. Play the music of the device connected to the LINE input.

### ● USB Mode:

1. After start up, press MODE to select "USB" and insert the USB device. The unit will automatically read and play the music in the USB device.
2. Press key shortly to pause or play.
3. Shortly press key to the previous song.
4. Shortly press key to the next song.

# TIMO AUDIO

## POWERFUL WIRELESS PA SPEAKER WITH LIGHTS

### T800



WIRELESS PA SPEAKER

USB/SD READER

2 UHF WIRELESS MIC

REMOTE CONTROL

FM RADIO



## INSTRUCTIONS FOR USE AND CARE

## Safety Information

Please read this manual carefully before using the product. keep it in a safe place for future reference.

- a.** There are high voltage zones inside this unit that can cause injuries. Please do not open the unit. In case of technical failure, please contact the authorized service centre.
  - b.** Never place the unit in the rain or in moist zones so as to avoid a fire or an electric shock.
  - c.** This device uses a laser system. To prevent direct exposure to the laser beam, please do not open the unit or stare at the laser beam.
  - d.** If technical maintenance is required, please contact the authorized service centre.
  - e.** If the supply cord is damaged in any way, please have it replaced by the manufacturer, supplier or a qualified electrician.

## Caution

- a.** Do not place the unit on an unstable surface as it may fall and break or cause damage to people or pets.
  - b.** Disconnect the unit from the mains before cleaning it. Do not use cleaning liquids or sprays.  
Use only a soft, damp cloth.
  - c.** To avoid possible damage to the equipment, please unplug it during storms or when it will not be used for a long time.
  - d.** Do not insert any object into the unit through the ventilation openings as this could cause a short circuit and start a fire. Do not pour liquid on the speaker.

## Accessories

- Speaker unit
  - User Manual
  - Remote Control
  - Power cable

## 1.Two machines power on

2. After . Hold the next button long press and arise “TWS”. This is to turn the Bluetooth of mobile phone, connect the Bluetooth, and make this speaker as the host to connect with another negative machine.

3. After connecting, two speaker can be started to use, and the volume/next song/next pause function of the other speaker can be controlled at the same time, but EQ function cannot be controlled at the same time. Only in Bluetooth mode can used.

Other functions are not compatible with TWS.  
4.The host/co-long press"next song"button to disconnect the TWS, and long press "play/pause" to disconnect the host from the Bluetooth device.  
(For example long press the "pause/play button of the host to disconnect the Bluetooth between the host and phone")

## INTRODUCTION-TOP CONTROLLING PANEL



## Bluetooth

To connect your iPod, iPad, iPhone, MP3 player, Android phone or tablet, or any other Bluetooth-capable device, follow the steps listed below.

1. Make sure the speaker is ON.
  2. Press the MODE button on the unit or the remote control until you are in Bluetooth mode. The word “bLUE” will appear on the LED readout and will flash intermittently.
  3. Turn on the Bluetooth feature on your device and ensure that it is discoverable. Look for and select “Rock Party 8” from the list of available devices.
  4. Upon successful pairing, the word bLUE will stop flashing.
  5. Use the PLAY/PAUSE button to pause and resume playback.
  6. Use the PREVIOUS/NEXT buttons for track selection.
  7. Use the master VOLUME knob to set the volume level.

#### FCC Warning Statement

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- - Reorient or relocate the receiving antenna.
- - Increase the separation between the equipment and receiver.
- - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- - Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

#### RF Exposure Statement

To maintain compliance with FCC's RF Exposure guidelines, This equipment should be installed and operated with minimum distance of 20cm the radiator your body. This device and its antenna(s) must not be co-located or operation in conjunction with any other antenna or transmitter