


# Baby Monitor

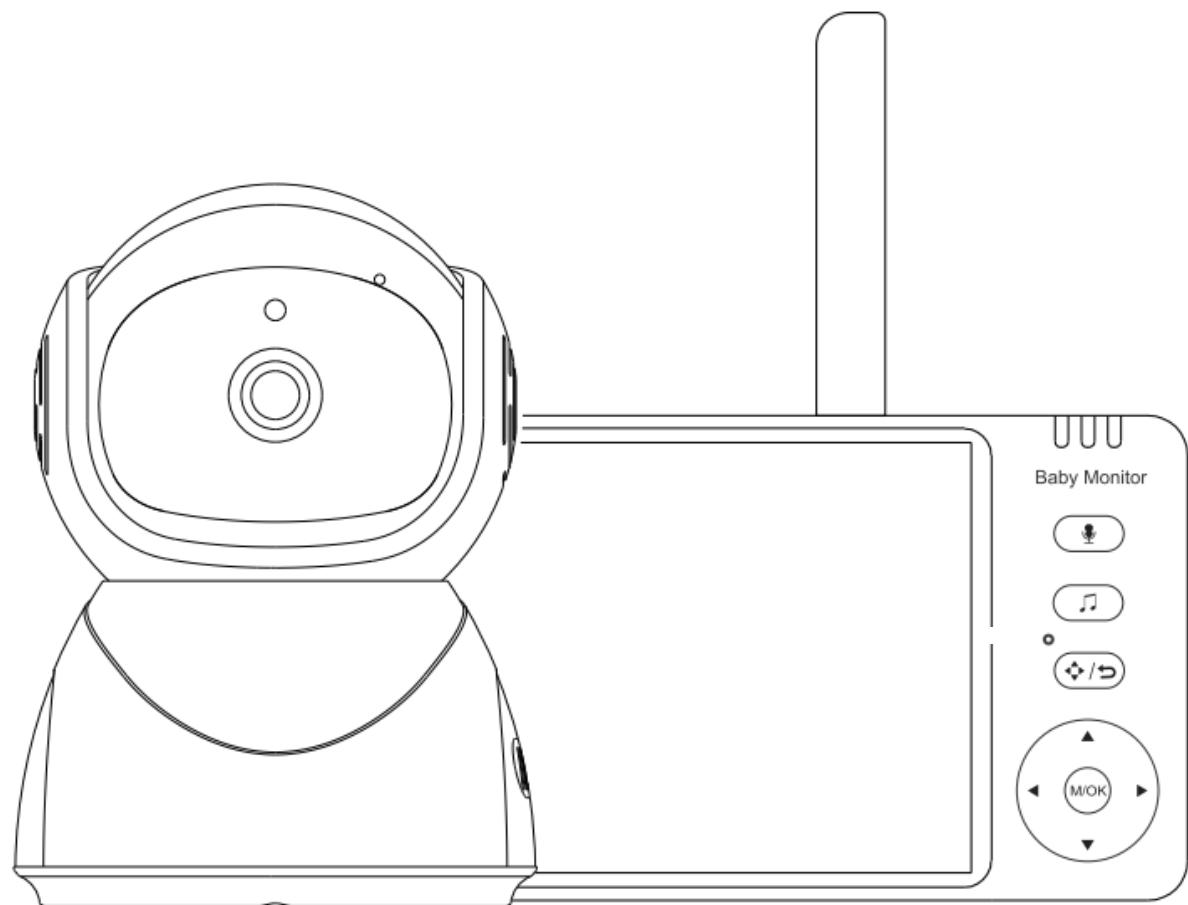

**ABM501 User Manual**

Dear Customer,

We are truly grateful that you chose our product, we hope that you will be happy upon enjoy the fantastic quality and our services. Meantime, Your any requirements, suggestions and expectations that will be most helpful for our product improved and created new to fit your standards.

This user's manual can guide you to understand how to operate this product and solve any problem, that customers may encounter in using our products. Please read carefully before using the device.

## **Warning**

**DANGER - Keep the adapter cable away from the baby to avoid a choking hazard from entangling the baby's neck.**

**Keep the baby camera unit and cable out of the reach of children more than 3 feet or 1 meter away.**

**Do not place the camera or power supply in a child's cot/crib.**

## **Camera settings and usage**

- Fix the camera in a place where can be observed well of children/babies.
- Place the camera on a flat surface such as table, desk or shelf.

This baby monitor meets all standards related to electromagnetic fields and safe-use when operating in accordance with the instructions of user guide. Therefore, please read the user guide carefully before using the device.

- Must be assembled by adult.
- This baby monitor can be used for adult guardianship.
- Store this user guide for future reference.
- Do not cover the baby monitor with towel or blanket.

- Keep the baby monitor away water.
- Keep the baby monitor away heater, humidifier & others.
- Do not use other charger or power adaptor which may damage the device.
- Do not touch the plug with a sharp or metal object.

## **Important notes for installing a baby monitor**

- When using, must check wireless Transmission smoothly connected between camera and the display, The wireless Transmission distance is affected by environmental conditions.
- Any heavy metal or home appliance will be block wireless signals transmit, such as refrigerators, metal doors or reinforced concrete.
- The strength of signal may be attenuated by solid buildings (such as walls), radios or electrical equipment (such as televisions, computers).
- If the signal lost, try to move the device to different location indoors.
- Do not put display and camera together within **1.5** meters, otherwise, it will cause howling.

## **Unit Package :**

- \* Camera
- \* Display
- \* User Manual
- \* Power Adapter+ power-charging cable  
( Longer charging cable for camera )

Please use a DC 5V adapter, preferably the original one.


\*Bag of screws

# INDEX

<b>1.1 DISPLAYER OVERVIEW .....</b>	<b>5</b>
<b>1.2 DISPLAYER STATUS BAR ICON .....</b>	<b>6</b>
<b>1.3 DISPLAYER MENU ICON .....</b>	<b>6</b>
<b>1.4 CAMERA OVERVIEW .....</b>	<b>7</b>
<b>2.1 HOW TO TURN ON DEVICE .....</b>	<b>7</b>
<b>2.2 PAIRING .....</b>	<b>7</b>
<b>2.3 CHECKING THE IMAGE OF BABY CAMERA.....</b>	<b>8</b>
<b>3.1 CAMERA BUTTON FUNCTION.....</b>	<b>8</b>
<b>3.2 NIGHT VISION MODE .....</b>	<b>8</b>
<b>3.3 INSTALLATION.....</b>	<b>9</b>
<b>4.1 INTERCOM MODE.....</b>	<b>9</b>
<b>4.2 VOLUME ADJUSTMENT.....</b>	<b>9</b>
<b>4.3 FEEDING REMINDER (ALARM).....</b>	<b>9</b>
<b>4.4 LULLABY .....</b>	<b>10</b>
<b>4.5 SYSTEM TIME SETTING.....</b>	<b>10</b>
<b>4.6 TEMPERATURE DISPLAY .....</b>	<b>10</b>
<b>4.7 CAMERA DISPLAY SELECTION.....</b>	<b>11</b>
<b>4.8 VOX SETTING .....</b>	<b>12</b>
<b>4.9 DISPLAY BRIGHTNESS .....</b>	<b>13</b>
<b>5. PTZ REMOTE CONTROL.....</b>	<b>13</b>
<b>6. CAMERA IMAGE ZOOM IN.....</b>	<b>13</b>
<b>7. VIDEO RECORDING .....</b>	<b>13</b>
<b>8. POWER LEVEL.....</b>	<b>14</b>
<b>9. SIGNAL .....</b>	<b>14</b>
<b>10. CLEANING.....</b>	<b>14</b>
<b>11. FAQ &amp; TROUBLESHOOTING .....</b>	<b>14</b>
<b>12. SPECIFICATION .....</b>	<b>15</b>

# 1. PRODUCT OVERVIEW

## 1.1 DISPLAYER OVERVIEW

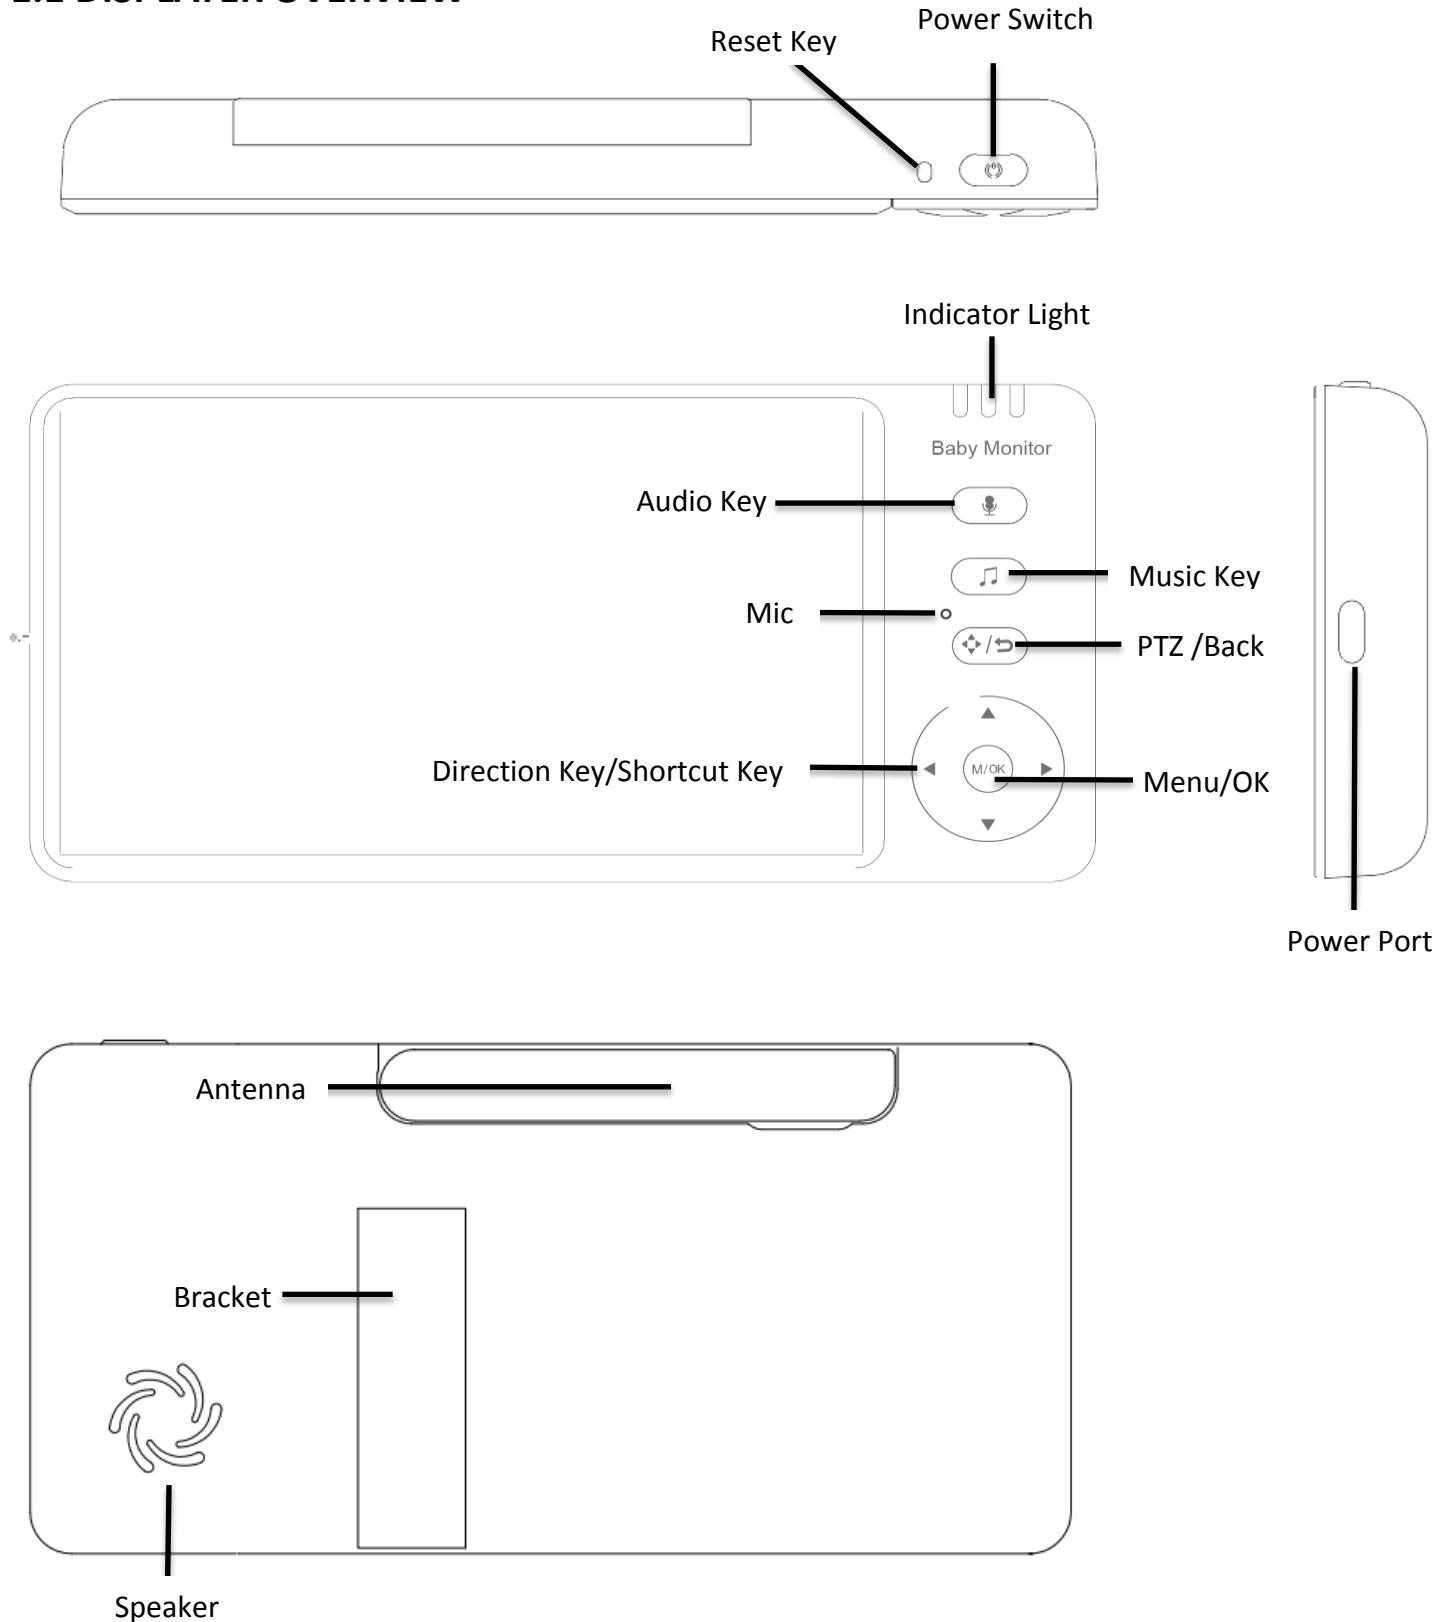


## 1.2 DISPLAYER STATUS BAR ICON

	SIGNAL LEVEL (5 Levels)
	NO SIGNAL
	CAMERA 1
	CAMERA 2 (customized)
	CAMERA IMAGE ZOOM IN 2 TIMES
	CAMERA SWITCH
	ULLABY TURN ON /OFF
	VOLUME SETTING (6 levels can be set)
	INTERCOM MODE
	NIGHT VISION MODE
	CRYING DETECTION ( HIGH,MED,LOW )
	BABY ROOM TEMPERATURE DISPLAY
	SYSTEM TIME
	BATTERY POWER

## 1.3 DISPLAYER MENU ICON

	Feeding Reminder Time Setting ( Can Set 5 Alarms )	
	Lullaby Selection (8 Lullabies)	
	System Time Setting	
	Temperature Setting( °C / °F ,Temperature alarm on/off/High temperature warning/low temperature warning setting)	
	Camera Selection (add/delete/switch)	
	VOX Sound Detection Setting	
	Camera zoom in / out	

## 1.4 CAMERA OVERVIEW

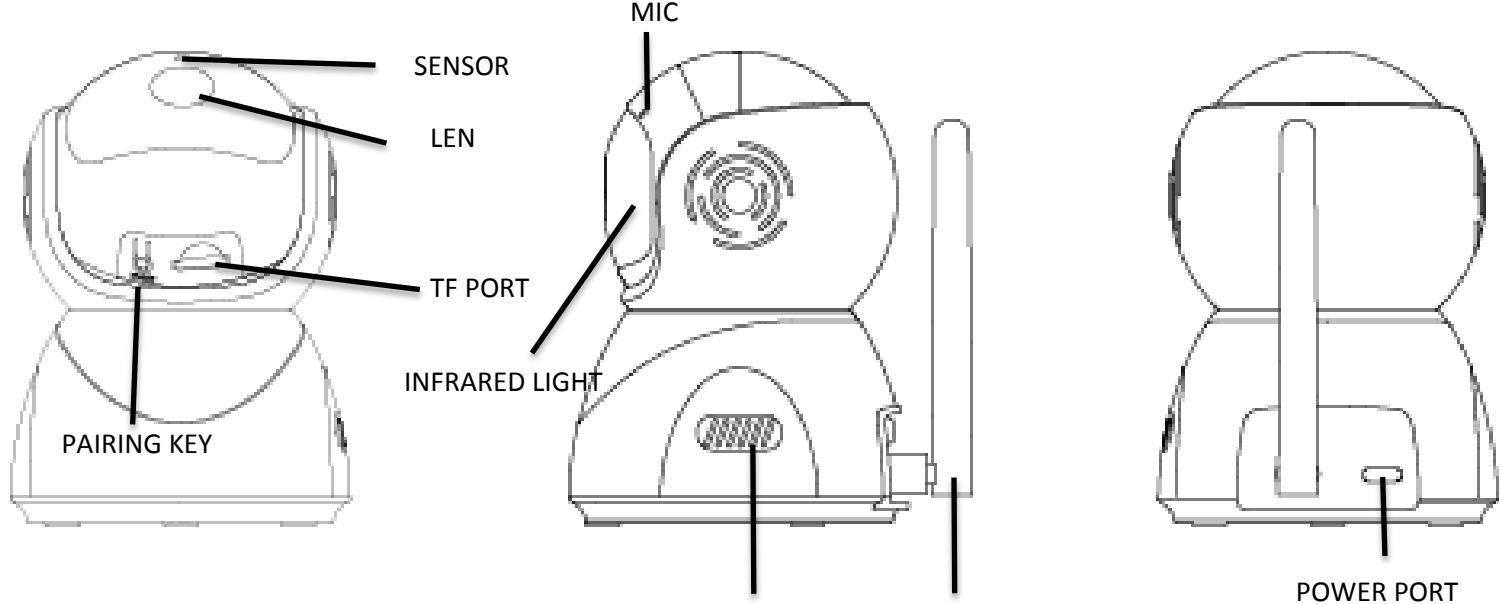

## 2. OPERATION

### 2.1 HOW TO TURN ON DEVICE

The baby monitor provides two power adaptors + power-charging cables. One is to connect the camera, the other is to connect display for charging battery.

(1) The adapter is available for AC-100-240V input. The camera will auto-turn-on after plug adaptor in, the blue indicator will be light-on (At the night mode it will automatically turn off).

(2) Pull-out antenna first, press the  power button of display for 3 seconds to turn it on/off. Display is with battery, when battery is low-power, please plug adaptor in for recharge

### 2.2 PAIRING


Once the camera and the display are both turned on, they will be Auto-connected, If not, follow the steps as below:

(1) Turn on the display and press menu key . Press  or 

to select camera  and press  to confirm. In the pop-up bar, press 

button to select  and press  to confirm, and then press  or 

choose  or  to pair. At this time, the blue indicator light of the display

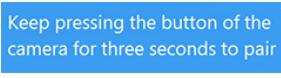device will flash and a prompt  will appear on the display

device screen. The blue indicator light stops blinking when the device is paired successfully.

If no device is paired for 30 seconds, it will automatically exit the pairing mode, or you can press and hold  for 1.5 seconds within 30 seconds to exit the pairing mode directly.

(2) When the camera is power-on and turned-on, keep pressing the pairing key  for 3 seconds, then, the blue light will flash quickly. It means that the camera is now in the pairing mode. Once the camera has connected with the display, the indicator light will turn off. Now the display can show the image that the camera captures.

If there is no device pairing for 1 minute, it will automatically exit the pairing mode.

**(Note: One camera can only be connected to one monitor. If the pairing fails several times in a row, please contact the after-sales service or local dealer.)**

## 2.3 CHECKING THE IMAGE OF BABY CAMERA

When both the camera and the display are normally turned on, the display should be able to show the image from the camera (If the display does not show the image please check the pairing condition.).

( 1 ) Please check those are with power in advance.

( 2 ) If the connection fails, please re-pair according to the **2.2 PAIRING** instruction.

( 3 ) Press the key  to enter the menu, and select the camera you want to watch.

## 3. CAMERA USAGE

### 3.1 Camera button function

Keep pressing the button  for 3 seconds to enter the pairing mode. It will quit in a minute then need pair again.

### 3.2 NIGHT VISION MODE

The camera is equipped with 1 piece high-intensity infrared LED light, which helps to capture clear images in the dark. When the built-in optical sensor detects that the ambient light is weak, the infrared LED will become automatically light up. The screen of the display will be shown in black and white color, and the  icon will be displayed in the status bar at the top of the screen.

### 3.3 INSTALLATION

- ( 1 ) Place the camera at the area as you want to monitor.
- ( 2 ) Adjust the camera view angle by turning the direction key , ,  or  till a satisfactory image as you like on the display.

## 4. THE DISPLAYER MENU

### 4.1 INTERCOM MODE

While you want to two-way talkback, please press the key  mode, then you can talk with your little baby. And release the key  when the conversation is over. Meanwhile, the camera system will enter intercom mode after releasing the key  of the display.

### 4.2 VOLUME ADJUSTMENT

- ( 1 ) Press the key  or  to adjust a larger or smaller volume.

The volume has 6 levels for option.

### 4.3 FEEDING REMINDER (ALARM)

- ( 1 ) Press the key  to enter the main menu.

- ( 2 ) Press the key  or  to choose .

- ( 3 ) Press the key  or  to select the alarm time (0.5h/1h/2h/3h/ 4h) for the feeding reminder. Then press the key  to confirm. Press the key  to exit the menu.

If the alarm time is set, the display will beep every 0.5h/1h/2h/3h/ 4h, and the flashing feeding mark will appear on the screen. Press any key to cancel feeding reminder.

## 4.4 LULLABY

- ( 1 ) Press the key  to enter the main menu.
- ( 2 ) Press the key  or  to choose .
- ( 3 ) In the pop-up menu bar, press the key  or  to select the lullaby, and press the key  to confirm. To play all the music in a loop, select  and press the key  to confirm. Press the key  or  to switch to other settings , or press  to exit the menu.
- ( 4 ) Press the music key  to play the lullaby, and press again to turn off the lullaby, long press  to play all the music in a loop.

## 4.5 SYSTEM TIME SETTING

- ( 1 ) Press the key  to enter the main menu.
- ( 2 ) Press the key  or  to choose .
- ( 3 ) In the pop-up menu bar, press the key  to choose in turn the hour, minute, second, and press the key  or  to adjust in turn the hour, minute, second. Press the key  or  to switch to other settings, or press  to exit the menu.

## 4.6 TEMPERATURE DISPLAY

- ( 1 ) Press the key  to enter the main menu.
- ( 2 ) Press the key  or  to .
- ( 3 ) In the pop-up menu bar, press the key  or  to select  or , press the key  to confirm. Press the key  or  to switch to other settings, or press  to exit the menu.

( 4 ) In the pop-up menu bar, press the key  or  to select  and press the key  to enter the sub-menu of setting the alarming temperature.

( 5 ) Press the key  or  to set a high, low or turn on warning temperature .  
 .

Press the key  or  to turn on  or off  temperature alarm sound. Under  mode, there's only an icon  or  prompt no beep alarm, under  mode, there's an icon  or  prompt also a beep alarm.

Press the key  and  to set the temperature value to be warned ( °C setting range 28°C~37°C , °F setting range 82°F~98°F ) . If the current ambient temperature is higher than the set warning temperature, the system automatically prompts a high temperature warning.

Do the same to set the low warning temperature ( °C setting range 0°C~26°C , °F setting range 32°F~78°F ) . If the current ambient temperature is lower than the warning temperature, the system automatically prompts a low temperature warning.

( 6 ) The screen will show temperature status bar from temperature sensor at back of camera. When the baby's room temperature is higher over setup temperature, the screen will appear red  mark on the screen and warning alarm.

While the temperature is lower than setup temperature, the screen will appear blue  mark and warning alarm.

Meanwhile, above or below the set temperature will emit Beep alarm sound, and press any key to cancel Beep sound. If the temperature is not restored to the set temperature range, the Beep alarm sound will still be emitted 30 seconds later.

## 4.7 CAMERA DISPLAY SELECTION

( 1 ) Press the key  to enter the main menu.

( 2 ) Press the key  or  to choose  , press the key  or  to choose  ,  or  , then press the key  to enter the sub-menu .

( 3 ) Select  , then press the key  to choose  or  for pairing. After the pairing is successful, the display will show the image from  or  .

( 4 ) Select  to enter delete mode, and then press  to delete  or  , it will prompt  or  , select  to delete, select  not to delete, if delete successfully, the icon  convert to  , “no-camera-connection” will be reminded.

( 5 ) Select  , then press the key  to see the sub-menu, and choose the  or  to view the corresponding image. Or you can choose  to enter cyclic mode, and the image from the cam1 to cam2 will switch in every 15 seconds.

## 4.8 VOX SETTING

VOX detection: Turn on the VOX mode, the display screen will auto light off after 30 seconds. When the ambient volume of camera is louder than the setup value, the screen will auto light up.

( 1 ) Press the key  to enter the main menu.

( 2 ) Press the key  or  to choose  .

( 3 ) Press the key  or  to select    or  , then press the key  to confirm the setting.

( 4 ) Even in the VOX-off mode, short press the key  to enter VOX mode in a shortcut way (the screen will be turned off, but it will keep transferring sound from the camera).

Note: At the VOX turned off, press the key  , and the screen will be keep light on without auto light on/off. The sound is still heard from the camera at any time. This mode is suitable for baby is playing while adult needs to leave for a moment.

When the VOX mode is turned on, the screen and sound will be auto light on/off in 30 seconds. When the ambient sound of the camera is louder than setup value, the

screen will become light up and the speaker will make a sound. This mode is suitable to use at night.

## 4.9 DISPLAY BRIGHTNESS

( 1 ) Press the key  or  to adjust the brightness  directly. It has 6 levels.

## 5. PTZ REMOTE CONTROL

Short press the key  to turn on remote control mode, then press the direction key     to adjust the camera rotation angle.

( 1 ) Press  key, adjust camera to see upper view from displayer.

( 2 ) Press  key, adjust camera to see down view from displayer.

( 3 ) Press  key, adjust camera to see left view from displayer.

( 4 ) Press  key, adjust camera to see right view from displayer.

## 6. CAMERAM ZOOM IN

( 1 ) Press the key  to enter main menu.

( 2 ) Press the key  or  to choose , then press  or  to select zoom in ,  or , then press  to confirm, press the key  exit the menu.

## 7. VIDEO RECORDING

( 1 ) Installing the SD card into the card slot of the camera, the mark  appears on the screen of the displayer.


( 2 ) In the main interface, keep pressing the key  for 1.5 seconds, the video recording starts, and the mark  Recording now, please quit flashes on the screen. Keep pressing the key  for 1.5 seconds again to pause and exit the recording.

Note: The recorded video can't be played back by the displayer. Please remove the SD card and play the recorded video in the computer.

## 8. POWER LEVEL

The mark  shows the current power level, the mark  is lower power level and will 5 consecutive beep sound alarming, the beep sound will keep reminding LOW BATTERY.

## 9. SIGNAL

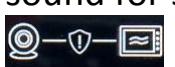(1) Signal mark . If there is a large signal tower base station or high power signal interference equipments in the current environment, it may cause interference to Transmission and the mark  will be appear. When the signal disconnected for 5 seconds, the mark  will be appear and flashes, and the monitor will make beep sound for 5 times. After the 5 times of beep sound, the monitor will only leave the mark  flashing. Now the monitor is disconnected with the camera.

## 10. CLEANING

Clean the device with a slightly damp cloth or an antistatic wipe. Never use detergents or abrasive solvents.

### Cleaning and maintenance

- Do not use thinner, other solvents or chemicals to clean any part of the product, which will damage to the product. This damage is not covered by the warranty.
- Do not expose the product to high temperatures, humidity, or strong sunlight, and do not get it wet.

## 11. FAQ & TROUBLESHOOTING

1. Q: Why is the signal in the room is bad?

A: a. Check if the receiving antenna of the display terminal is turned on;

b. Due to wall of houses is different materials, which will block 2.4G signals, When the signal is not satisfied, the place of display shall be moved.

2. Q: Why there is always some noise in the background?

A: It is impossible to eliminate all the noise. This kind of howling has always been a problem in the audio field. Please keep display and camera separate over 1.5 meters.

Tip: The microphone of the receiver and camera cannot be the opposite. That is the reason why some users get confused when they operate the devices and always get noise in the background. This phenomenon is an uncontrollable factor.

3.Q: Why the temperature is not precision shown on the screen?

A: a. There is a difference in indoor air circulation.

b. The main reason is that the thermistor has a  $\pm 1^{\circ}\text{C}$  deviation, and there may be shielding around the thermistor, resulting in a difference.

4.Q: How to eliminate howling?

A: Please keep your receiver and camera separate in 1.5 meters away or more.

Tip: The microphone of the receiver and camera cannot be the opposite. That is the reason why some users get confused when they operate the devices and always get noise in the background. This phenomenon is an uncontrollable factor.

## 12. SPECIFICATION

Technical Parameter			
Model	ABM570	Display Size	5-Inch
Sensor	CMOS 1/4	Camera	1280*720P
View Angle	75 Degree	Transmission method	2.4GHz FHSS
Battery	3500 mAh	Transmission Distance	300M (Open Space)
Monitor Power Consumption	1.3W	Temperature Detection	Support
Camera Power Consumption	1W	Cry reminder	Support
Working Temperature	-20°C~65°C	Lullaby	Support
Material	ABS	Feeding Reminder	Support
Camera Size	D80*115mm (D*T)	Night Vision	Support
Monitor Size	150*74*17mm (L*W*T)		

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction