 


Model:DK2

User Manual True Wireless Earbuds



Overview

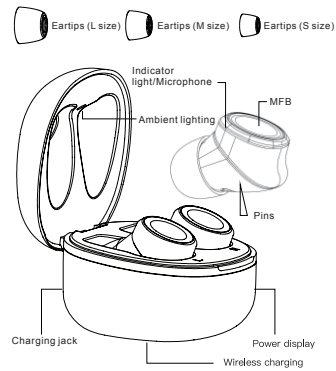

The medium (M) sized eartips are suitable for majority of people. It is suggested to wear M size eartips.

Initial Use



The earbuds will be activated automatically once open the lid.

Note: Both earbuds will be charging after putting them into charging case and cover the lid. If the earbuds can not be charged, please charge the charging case by inserting the Type-C cable at the same time. (more details as per the following instructions)

TWS Pairing and Connection with Cell Phone

Open lid to activate the earbuds automatically, both earbuds will auto pairing. Search for "DK2" in cellphone and tap to connect both earbuds with cellphone.

Attentions

 
- 1.Please read the user manual carefully and keep it properly before you use the product.
- 2.For initial use,make sure the earbuds and case are fully charged.
- 3.Please charge the earbuds and case if the product hasn't been used for over one month.
- 4.Be sure to use the CCC certified charger made by qualified manufacturer.
- 5.Please make sure the earbuds in pairing status when you search for the bluetooth earbuds name on cellphone. If it's not in pairing, please restart earbuds to make it pairing. If there is something wrong with the cellphone program, please restart the cellphone. If there is something wrong with the TWS earbuds program, please restart the earbuds or restore to factory setting.

Warning

1. Please don't disassemble or modify your earbuds for any reason to avoid the outbreak of a fire. Electronic breakdown, even destroy the product thoroughly.
2. Please don't exposing the earbuds to extreme temperature (below 0°C or above 45°C)
3. Don't put the device's LED lights close to human's or animal's eyes.
4. Do not use the earbuds during a thunderstorm. Thunderstorms can cause serious malfunction and increase the risk of electric shock.
5. Do not clean the earbuds with oil and other volatile liquid.
6. Do not wet the product by contacting with the liquid.



Restore the factory setting (in the case of TWS pairing failure)

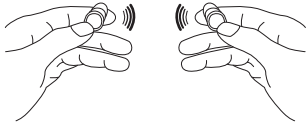

Press and hold the MFBs of both earbuds for 8 seconds in power off mode. Don't release your fingers until the red & purple lights flash alternately. At this moment both earbuds will auto pairing and the red & purple lights turn off. Put the earbuds into charging case and power on the earbuds, the earbuds will auto pairing. Search for "DK2" in cellphone and tap to connect both earbuds with cellphone.

Wearing earbuds



Put the earbuds as per the microphone upwards into the ear. (as the above picture shows)

Charging

Ⓐ Charging the earbuds



Put both earbuds into the charging case (Pins need to be well-contacted), the earbuds will be auto power off and start charging after cover the lid.

Ⓑ Charging the charging case



Note: Check the battery digital display after connect with charging cable. If there is no display please check whether the connection with charging cable is normal or not. Connect with wireless charger for wireless charging is also available.

Functions

Ⓐ Charging the earbuds

Method 1: Open the lid of charging case and the earbuds will auto power on.
Method 2: Press and hold MFB for 3s to power on.



Ⓑ Power-off

Method 1: Put both earbuds into charging case and cover the lid, the earbuds will auto power off.
Method 2: Press and hold MFB for 3s to power off.



 
Ⓒ Answer Call/Hang off

Press MFB to answer incoming call and press again to hang off it.



Ⓓ Reject Call

Press MFB for 1-2s to reject incoming call.



Ⓔ Automatic connect with last device

Open the lid to connect automatically with the last device which had been connected.



Ⓕ Next song

When playing music, double press the MFB of right earbud to skip forward (Next song)



 
Ⓖ Previous song

When playing music, double press the MFB of left earbud to skip track backward (previous song).



Ⓗ Pause/Playback

When playing music, press MFB to pause it and press again to play it.



Ⓖ Volume Down

When playing music, long press the MFB of left earbud for 2s to get volume down.



Ⓖ Volume Up

When playing music, long press the MFB of right earbud for 2s to get volume up.



Product Specification

Model: DK2 Bluetooth Version: 5.1
Bluetooth Profiles: HSP/HFP/A2DP/AVRCP
Frequency: 2.40GHz-2.48GHz
Charging Current (earbuds): 40mA
Charging Time: About 2 hours
Input Voltage (charging case): DC5V/300mA
Output Voltage (charging case): DV5V
Transmission Power: Class 2
Transmission Distance: >10m

Talking Time: 6 hours
Music Time: 8 hours
Impedance: 16
Microphone: Silicon Microphone
Weight of Earbuds: 3.9g
Weight of Charging case: 41.8g

Chinese & English Switch

After power on the Earbuds and not yet connected with mobile phone, continuously press 5 times on MFB of L & R earbud separately to switch between Chinese and English.

Activate Google Assistant/ Siri

Touch the multi-function button 3 times to activate Google Assistant /Siri

Deactivate Google Assistant/Siri

Single touch the multi-function button to deactivate Google Assistant/Siri

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.