


276.00 mm

SMART BELL
BY MIGHTYPAW

DOG POTTY TRAINING DOORBELL

Welcome to your Smart Bell

Training can be rewarding and a lot of fun. Be patient and remember that consistency and positive reinforcement are the keys to learning the desired behavior.

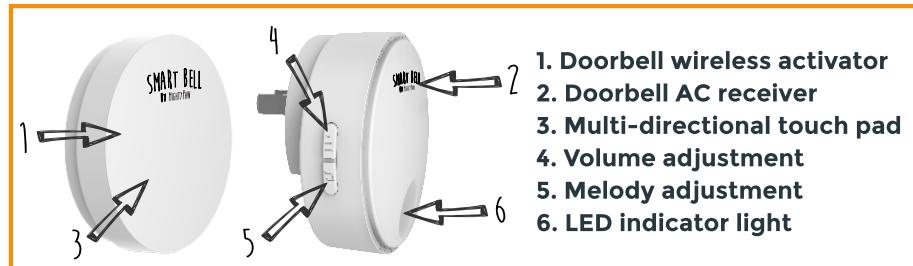

Installation:

**Note: This is a self-powered doorbell. There is no battery in the activator (1).

1. Test the doorbell by plugging the receiver (2) into the wall and pressing the activator (1).
** Note: If your dog is sensitive to sound, do not test with the receiver close to him or her.
2. Apply the included double-sided adhesive to the back surface of the activator (1).
3. Select the desired location for the activator (near or on the door where your dog exits to go potty). We recommend a height of 20 inches but higher or lower is ok based on the height of your dog.
4. Clean the selected surface and paste the activator in place.
** Note: If you wish to mount directly to dry wall the included adhesive may cause damage to the surface. Wood or glass surface is preferable. If mounting to dry wall use 3M command strips.
5. Plug the doorbell receiver into the wall outlet.
6. Select your melody (38 tone options) by pressing the bottom button (5) on the receiver (2).
7. Select your volume level by pressing the top button (4) on the receiver (4 volume level options)

Training:

1. Choose a Location:

Place the Mighty Paw Smart Bell on, or near, the door where your dog exits to go "potty". Keep in mind that dogs typically use their nose to ring the bell once trained.

2. Form a Connection:

Introduction: First the dog must learn to engage with the button (activator). Do this by pointing to and pressing the activator using a term like "push the button". You can use peanut butter or other dog safe spread if your dog is hesitant to engage with the bell. Now encourage your dog to "push the button".

Praise and reward your dog with treats for activating the doorbell. Repeat this step for a few days.

**Note: if your dog is sensitive to noise you can acclimate him or her by placing the receiver in another room and gradually bringing it closer.

Connection: Now that your dog is acclimated to "pushing the button" each time you let your dog out to go to the bathroom, reach down, touch the bell (or have them touch the bell), and use a phrase such as "go potty". Immediately let your dog out. Repeat this each time until your dog connects ringing the bell with being let out to go to the bathroom.

3. Reinforce with Praise:

Praise and/or give a treat only when "potty time" was a success. Your dog should associate the doorbell with potty time only. Consistency is key! Do not reward your dog for ringing the bell only to play outside.

Troubleshooting: Please visit mightyapaw.com/FAQ for frequently asked questions and troubleshooting

To sync or re-sync your Smart Bell: With the receiver plugged-in hold either key on the side for 3 seconds. The LED will flash on/off. This is now in sync mode. Touch the activator(s) to re-sync. Test it.

THANKS
FOR ORDERING

from

MIGHTYPAW

NOW GO HAVE SOME FUN!

TO REGISTER YOUR FREE
90 DAY WARRANTY VISIT
mightyapaw.com/smartbell

info@mightyapaw.com • mightyapaw.com

INSTALLATION AND TRAINING

SMART BELL
BY MIGHTYPAW

DOG POTTY TRAINING DOORBELL



info@mightyapaw.com • mightyapaw.com

尺寸: 276mmX210mm
形式: 彩色单页 (130g铜版纸)
横向: 背面中间压痕
纵向: 背面三等分压痕

FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with FCC PART15 Rules. Operation is subject to the following two conditions:(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.