



## Operating Instructions on Astronomical Telescope



Press the “Start” button for 3 seconds. When the power indicator blink rapidly, it means the system is starting. When the indicator stop blinking, it means the system is successfully started. The indicator will show the battery capacity. If the battery is low, the indicator will blink in red light and remind users to charge the device, which is charged through a 12V power adapter.◦

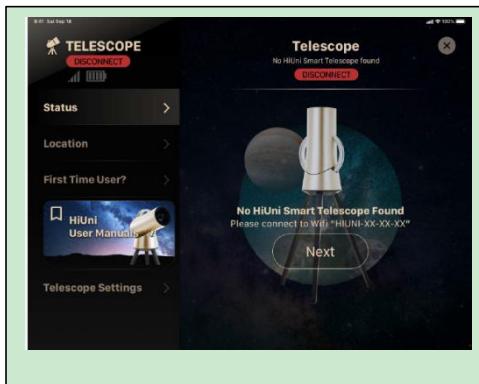

Open the APP’s network configuration page, and it will display “disconnect” if the telescope is not connected to network. Open WLAN and hot spot of the cellphone as well WLAN on the PAD, then search and connect to the telescope’s WIFI network named “HIUNIXXX”, then you’re required to input the SSID name and password of the WLAN. After the input, the telescope’s WLAN will connect to the hot spot and the APP page will show “connect”, which means the network is established successfully.

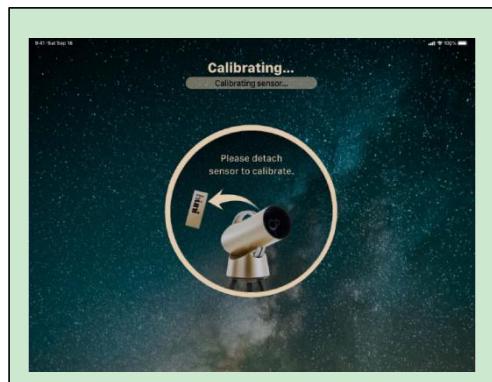

The telescope will run initialization operation, read the batter capacity, WIFI signal strength as well as the sensor status, and send the above info to the APP. Then you will be informed of the operating instructions and complete the operations and then confirm proper functioning of the instrument.




Choose a targeted object and press the “Observation” button, then the APP will send coordinates of the targeted object to the device.



The instrument will rotate its lens to the targeted object's location and keep precise trajectory tracking of it.



With a build-in imaging sensor, you can choose to take pictures of the observed object and send to the APP where you can preview the pictures of starry sky.

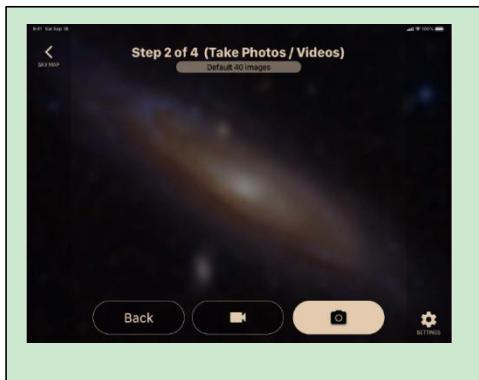

## FCC WARNING

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

To maintain compliance with FCC's RF Exposure guidelines, This equipment should be installed and operated with minimum distance between 20cm the radiator your body: Use only the supplied antenna.

## **IC Caution:**

This device complies with Industry Canada's licence-exempt RSSs. Operation is subject to the following two conditions:

- (1) This device may not cause interference; and
- (2) This device must accept any interference, including interference that may cause undesired operation of the device.

To maintain compliance with RF exposure guidelines, this equipment should be installed and operated with a minimum distance of 20cm between the radiator and your body.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes:

- (1) l'appareil ne doit pas produire de brouillage, et
- (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

Pour maintenir la conformité aux directives d'exposition aux radiofréquences, cet équipement doit être installé et utilisé avec une distance minimale de 20 cm entre le radiateur et votre corps.