

尺寸: 80*100MM ,

User Manual

Model: UEKM-20

Keyboard Product Overview

A. Windows key
B. Num lock indicator
C. Caps lock indicator
D. Low battery indicator
E. Keyboard scaffold
F. Battery compartment
G. Left key
H. Roller
I. Right Key
J. DPI Switch
K. Forward
L. Back
M. Switch
N. Battery

Mouse Product Overview

A. Windows key
B. Num lock indicator
C. Caps lock indicator
D. Low battery indicator
E. Keyboard scaffold
F. Battery compartment
G. Left key
H. Roller
I. Right Key
J. DPI Switch
K. Forward
L. Back
M. Switch
N. Battery

Keyboard Specifications

- Model No: UEKM-20
- Transmission mode: 2.4G wireless
- Keys: 104 keys
- Product Size: 501*212*41.5MM
- Product Weight: about 1105g
- Working Voltage: 3V (AA 1.5V*2)
- Working Current: 6-15MA
- Working Distance: up to 8 meters
- Support System: WinXP/ Win7/ Win8/ Win10 etc.

Mouse Specifications

- Transmission Mode: 2.4G wireless
- Number of Buttons: 6
- Product Size: 120*74*43MM
- Product Weight: about 80g
- Photoelectric Ic: 3065
- Dpi: 800/1200/1600 (Default 1200)
- Rate of Return: 125hz
- Working Voltage: 3v (AA 1.5v*2)
- Working Current: 6-12MA
- Support System: WinXP/ Win7/ Win8/ Win10 etc.

General Safety Warnings

- Make sure the location for the product is well-ventilated, and away from damp and cold, protected from overheating and away from direct sunlight, away from moisture drops or splashes and protected from excessive dust or grease.
- Do not place the product near heat sources (e.g. radiators, ovens, electrical equipment, amplifiers).
- Do not place containers with liquids (e.g. vases) or with small metallic objects on top of the product.
- Do not place any naked flame sources (e.g. candles, cigarettes) on the product.
- Supervise young children to ensure they do not play with the product. When moving or replacing batteries, make sure to keep them out of reach of infants and children.

Install the Batteries

The keyboard and mouse will automatically power off when not in use. Only use a soft, dry cloth for cleaning the product; do not use a damp cloth. Never clean with industrial strength polish, wax, benzene, paint thinner, fresher, lubricant, detergent or other chemicals. Use a soft, dry cloth to clean the power plug with a clean, dry cloth.

Connecting the Receiver

Unplug or turn off the product before cleaning it. The RF2.4GHz Optical mouse use 2*AA alkaline batteries. The RF2.4GHz Optical keyboard use 2*AAA alkaline batteries.

Power-Save function

When you find this setting doesn't work, you can make the mouse back to working condition by pressing the mouse back to factory default setting.

Install Battery in the Mouse

Step 1. Open the battery compartment
Step 2. Insert the battery as shown inside the battery compartment
Step 3. Replace the cover

Restore factory default settings

When you find this setting doesn't work, you can make the mouse back to working condition by pressing the mouse back to factory default setting.

Dispose

Always dispose the used appliance at a recycling center. Do not dispose the used appliance together with the household waste.

Model:UEKM-20

General Safety Warnings

- Make sure the location for the product is well-ventilated, and away from damp and cold, protected from overheating and away from direct sunlight, away from moisture drops or splashes and protected from excessive dust or grease.
- Do not place the product near heat sources (e.g. radiators, ovens, electrical equipment, amplifiers).
- Do not place containers with liquids (e.g. vases) or with small metallic objects on top of the product.
- Do not place any naked flame sources (e.g. candles, cigarettes) on the product.
- Supervise young children to ensure they do not play with the product. When moving or replacing batteries, make sure to keep them out of reach of infants and children.

Install the Batteries

The connection will be done automatically after 1-3 seconds.

Connecting the Receiver

Unplug or turn off the product before cleaning it. The RF2.4GHz Optical mouse use 2*AA alkaline batteries. The RF2.4GHz Optical keyboard use 2*AAA alkaline batteries.

Power-Save function

When you find this setting doesn't work, you can make the mouse back to working condition by pressing the mouse back to factory default setting.

Install Battery in the Mouse

Step 1. Open the battery compartment
Step 2. Insert the battery as shown inside the battery compartment
Step 3. Replace the cover

Restore factory default settings

When you find this setting doesn't work, you can make the mouse back to working condition by pressing the mouse back to factory default setting.

Dispose

Always dispose the used appliance at a recycling center. Do not dispose the used appliance together with the household waste.

Model:UEKM-20

General Safety Warnings

- Make sure the location for the product is well-ventilated, and away from damp and cold, protected from overheating and away from direct sunlight, away from moisture drops or splashes and protected from excessive dust or grease.
- Do not place the product near heat sources (e.g. radiators, ovens, electrical equipment, amplifiers).
- Do not place containers with liquids (e.g. vases) or with small metallic objects on top of the product.
- Do not place any naked flame sources (e.g. candles, cigarettes) on the product.
- Supervise young children to ensure they do not play with the product. When moving or replacing batteries, make sure to keep them out of reach of infants and children.

Install the Batteries

The connection will be done automatically after 1-3 seconds.

Connecting the Receiver

Unplug or turn off the product before cleaning it. The RF2.4GHz Optical mouse use 2*AA alkaline batteries. The RF2.4GHz Optical keyboard use 2*AAA alkaline batteries.

Power-Save function

When you find this setting doesn't work, you can make the mouse back to working condition by pressing the mouse back to factory default setting.

Install Battery in the Mouse

Step 1. Open the battery compartment
Step 2. Insert the battery as shown inside the battery compartment
Step 3. Replace the cover

Restore factory default settings

When you find this setting doesn't work, you can make the mouse back to working condition by pressing the mouse back to factory default setting.

Dispose

Always dispose the used appliance at a recycling center. Do not dispose the used appliance together with the household waste.

Model:UEKM-20

General Safety Warnings

- Make sure the location for the product is well-ventilated, and away from damp and cold, protected from overheating and away from direct sunlight, away from moisture drops or splashes and protected from excessive dust or grease.
- Do not place the product near heat sources (e.g. radiators, ovens, electrical equipment, amplifiers).
- Do not place containers with liquids (e.g. vases) or with small metallic objects on top of the product.
- Do not place any naked flame sources (e.g. candles, cigarettes) on the product.
- Supervise young children to ensure they do not play with the product. When moving or replacing batteries, make sure to keep them out of reach of infants and children.

Install the Batteries

The connection will be done automatically after 1-3 seconds.

Connecting the Receiver

Unplug or turn off the product before cleaning it. The RF2.4GHz Optical mouse use 2*AA alkaline batteries. The RF2.4GHz Optical keyboard use 2*AAA alkaline batteries.

Power-Save function

When you find this setting doesn't work, you can make the mouse back to working condition by pressing the mouse back to factory default setting.

Install Battery in the Mouse

Step 1. Open the battery compartment
Step 2. Insert the battery as shown inside the battery compartment
Step 3. Replace the cover

Restore factory default settings

When you find this setting doesn't work, you can make the mouse back to working condition by pressing the mouse back to factory default setting.

Dispose

Always dispose the used appliance at a recycling center. Do not dispose the used appliance together with the household waste.

Model:UEKM-20

General Safety Warnings

- Make sure the location for the product is well-ventilated, and away from damp and cold, protected from overheating and away from direct sunlight, away from moisture drops or splashes and protected from excessive dust or grease.
- Do not place the product near heat sources (e.g. radiators, ovens, electrical equipment, amplifiers).
- Do not place containers with liquids (e.g. vases) or with small metallic objects on top of the product.
- Do not place any naked flame sources (e.g. candles, cigarettes) on the product.
- Supervise young children to ensure they do not play with the product. When moving or replacing batteries, make sure to keep them out of reach of infants and children.

Install the Batteries

The connection will be done automatically after 1-3 seconds.

Connecting the Receiver

Unplug or turn off the product before cleaning it. The RF2.4GHz Optical mouse use 2*AA alkaline batteries. The RF2.4GHz Optical keyboard use 2*AAA alkaline batteries.

Power-Save function

When you find this setting doesn't work, you can make the mouse back to working condition by pressing the mouse back to factory default setting.

Install Battery in the Mouse

Step 1. Open the battery compartment
Step 2. Insert the battery as shown inside the battery compartment
Step 3. Replace the cover

Restore factory default settings

When you find this setting doesn't work, you can make the mouse back to working condition by pressing the mouse back to factory default setting.

Dispose

Always dispose the used appliance at a recycling center. Do not dispose the used appliance together with the household waste.

Model:UEKM-20