




Quick Start Guide

Model: GWNN11744


1 **Plug Power Adapter
Into Wall Outlet**

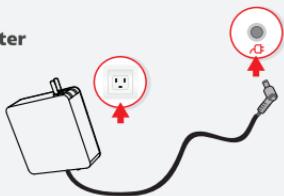

2 **Plug Power Adapter
Into Laptop**



3 **Press and Release the
Power Button**

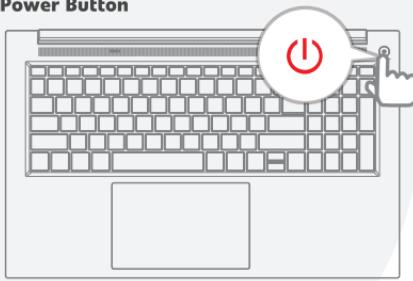

4 **Follow the on screen
Windows prompts to
finish setting up**

Caution: The AC adapter included with your PC was specifically designed and approved for your model. Utilization of an after-market adapter may damage either the notebook or other devices connected to it. If damage is determined to have been caused by utilization of an unauthorized power supply, it will not be protected under warranty.
For our FAQ, please visit www.gatewayusa.com/support.html. Gateway and the Gateway logo are the registered trademarks of Acer Inc. and are used under license from Acer America Corporation.

www.gatewayusa.com | Customer Service: support@gatewayusa.com

1 Power Button

2 Touchpad

3 Camera

4 Camera Shutter

5 Charging port

6 HDMI

7 USB 3.0 Ports



8 Type-C (Full Function)

9 Micro SD Slot

10 Headphone Port

11 USB 2.0 Port

12 Kensington Lock

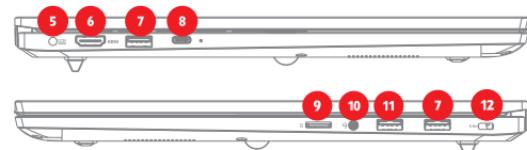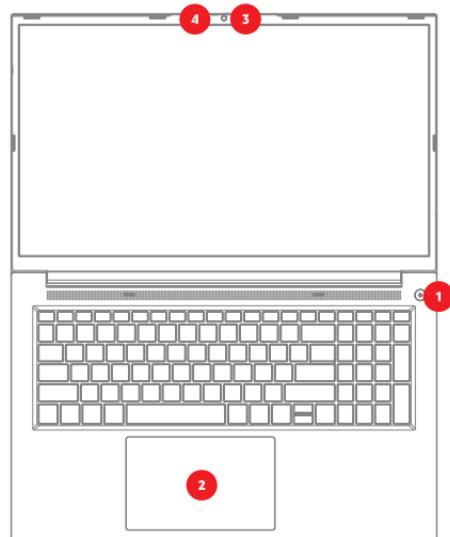

What's in the box

1 Laptop

2 Power Adapter

3 Quick Start Guide

4 Warranty Book