 

Product Overview

1. Charging Case LED Light
2. Charging Port
3. Multifunctional Button
4. Earphone LED
5. Magnetic Charging Pin
6. L / R Logo



Power On & Pairing

Approach 1 - With Charging Case

US: Take out earphones from the charging case

DE: Entnehmen Sie die Kopfhörer aus der Aufladebox

ES: Saque los auriculares del estuche de carga

IT: Estrarre gli auricolari dalla custodia di ricarica



US: Select 'F12' from Bluetooth list

DE: Wählen Sie „F12“ aus Ihrer Bluetooth Liste

ES: Selecciona "F12" de la lista de Bluetooth

IT: Seleziona 'F12' dalla lista dei dispositivi Bluetooth



Approach 2 - Without Charging Case

US: Power On: Touch the earphones for 2 seconds
Prompt sound 'Power on'

Pairing: Right earphone Blue and White light flash
Select 'F12'

DE: Anschalten: Berühren Sie die Köpfhörer für zwei Sekunde
und die Benachrichtigung „Power on“ hören.

Paaren: Die Köpfhörer verbinden, der rechten Kopfhörer ein
weißes und blaues Licht blinkt

Wählen Sie „F12“

ES: Encender: toque el auricular durante 2 segundos, el sonido
de aviso "Power on"

 
Emparejamiento: la luz azul y la luz blanca del auricular derecho
parpadean

Selecciona "F12"

IT: Accensione: tocca l'auricolare per 2 secondi, il suono del messaggio "Power on"

Accoppiamento: la luce blu e bianca dell'auricolare destro lampeggia

Seleziona 'F12'

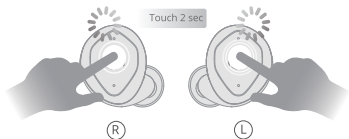

Incoming call

US: Answer call/End call

Tap the Left / Right earphone once

DE: Anruf annehmen/beenden

Drücken Sie den linken/rechten Kopfhörer ein mal

ES: Responder a la llamada/finalizar la llamada

Toca el auricular izquierdo/derecho una vez

IT: Rispondere alla chiamata / terminare la chiamata

Toccare una volta l'auricolare sinistro / destro

US: Reject call

Touch the Left / Right earphone for 2 seconds

DE: Anruf ablehnen

Drücken Sie den linken/rechten Kopfhörer für zwei Sekunden

ES: Rechazar la llamada

Toca el auricular izquierdo/derecho durante 2 segundos

IT: Rifiuta la chiamata

Tocca gli auricolari sinistro e destro per 2 secondi

Music

US: Pause / Play

Tap the Left / Right earphone once

DE: Pausieren/Abspielen

Drücken Sie den linken/rechten Kopfhörer ein mal

ES: Pausa/ Reproducir

Pulsa el auricular izquierdo / derecho una vez

IT: Pausa / Riproduzione

Premere l'auricolare Sinistro / Destro una volta

US: Voice Assistant

Tap the Left / Right earphone 3 times

DE: Sprachassistent

Drücken Sie den linken/rechten Kopfhörer drei Mal.

ES: Asistente de voz

Toca el auricular izquierdo/derecho 3 veces

IT: Assistente Vocale

Premere l'auricolare Sinistro/Destro per 3 volte

US: Change Song

Double-tap the Left/Right earphone

DE: Lied wechseln

Drücken Sie den linken/rechten Kopfkörer zwei mal

ES: Cambiar canción

Haga doble clic en el auricular izquierdo / derecho

IT: Cambia canzone

Tocca due volte l'auricolare sinistro / destro

US: Adjust Volume

Touch and hold the Left/Right earphone

DE: Lautstärke anpassen

Drücken und halten Sie den linken/rechten Kopfhörer

ES: Ajusta el volúmen

Mantenga pulsado el auricular izquierdo / derecho

IT: Regola il volume

Tocca e tieni premuto l'auricolare sinistro / destro

Power Off

 
Mode -Without Charging Case

US: Turn off Bluetooth to disconnect the earphones
Touch either one earphone for 8 seconds to power off both earphones

DE: Schalten Sie Bluetooth aus, um die Kopfhörer von Gerät zu trennen.
Drücken Sie acht Sekunden lang einen der Kopfhörer, um sie auszuschalten.

ES: Apaga el Bluetooth para desconectar los auriculares
Toca uno de los auriculares durante 8 segundos para apagar ambos auriculares

IT: Disattivare la funzione Bluetooth dal dispositivo per disconnetter gli auricolari
Per spegnere gli auricolari, premere uno dei 2 auricolari per 8 secondi

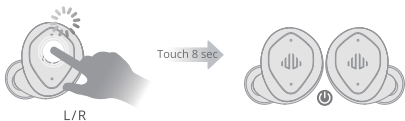

Single Mode

Single Mode	Earphone
Without Charging Case	US: Turn off both earphones Touch the Left / Right earphone for 4 seconds enter pairing mode. Select 'F12' from Bluetooth list DE: Ausschalten die beide Kopfhörer. Berühren Sie den Linken/Rechten Kopfhörer für vier Sekunden, um ihn einzuschalten. Wählen Sie „F12“ in der Bluetooth Liste aus ES: Asegúrate de que ambos auriculares estén apagados Toque el auricular izquierdo/derecho durante 4 segundo para encenderlo Seleccione "F12" de la lista de Bluetooth IT: Spegnerne entrambi gli auricolari Toccare l'auricolare sinistro / destro per 4 secondi per accedere alla modalità di associazione Selezionare "F12" dall'elenco Bluetooth

Game Mode

US: Game Mode On: Tap Left / Right earphone 4 times with prompt sound: Game mode on
Game Mode Off: Tap Left / Right earphone 4 times with prompt sound: Game mode off

DE: Spielmodus ein: Drücken Sie die linken/rechten Köpfhörer für vier mal und die Benachrichtigung: Game mode on
Spielmodus aus: Drücken Sie die linken/rechten Köpfhörer für vier mal und die Benachrichtigung: Game mode off

ES: Modo de juego activado: toque los auriculares izquierdo / derecho 4 veces con sonido de aviso: Game mode on
Modo de juego desactivado: toque los auriculares izquierdo / derecho 4 veces con sonido de aviso: Game mode off

IT: Modalità gioco attiva: premi rapidamente l'auricolare sinistro / destro 4 volte: Game mode on
Modalità gioco disattivata: premere rapidamente l'auricolare sinistro / destro 4 volte: Game mode off

Charging

Earphones:

US: Earphones white LED Light on/off: Charging/Fully Charged

DE: Weißes LED bei Kopfhörern leuchtet/ Licht aus: aufladen/ vollständig aufgeladen

ES: Luz LED blanca de auriculares encendida / apagada: cargando / carga completa

IT: Luce LED bianca delle cuffie on / off: carica / carica completa

Note: It takes about 1.5 hours to fully charge the earphones

Charging Case:

US: Light on charging case stand for the remaining battery capacity

DE: Die Lichter auf der Aufladebox zeigen die verbleibende Aufladung an

ES: Las luces en el estuche de carga representan la capacidad restante de la batería

IT: Il LED della scatola di ricarica indica la carica residua della batteria

Note: It takes about 1.5 hours to fully charge the charging case



White Light Flash 1 times: 0-25% Charged

White Light Flash 2 times: 26-55% Charged

White Light Flash 3 times: 56-75% Charged

White Light Flash 4 times: 76-100% Charged

Safety Instruction

Using earphones at high to moderate volumes for extended periods of time will result in permanent hearing damage. It is advised that you keep volume levels moderate to low at all times for your safety.

Do not use while driving, cycling, operating machinery or performing other activities that require hearing surrounding sounds.

Do not use earphones in thunderstorm weather, the earphones may not work properly in the bad weather condition, and may increase the risk of being hit by lightning.

Earphones may not work properly under high temperature or high humidity conditions.

Do not use any corrosive cleaner/oil to clean the earphones. If the earphones come in contact with liquids, quickly wipe away. If submersed in the water, do not turn the earphones on until it is completely dried.

Tips: Man-made damage and lost are not covered under warranty. Keep the earphones and the packaging out of reach of children.

FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference
- (2) this device must accept any interference received, including interference that may cause undesired operation

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.