

FRONT

OUTDOOR WATERPROOF SPEAKER



USER MANUAL

FCC ID: 2AYRH-S-620
for use with **Bluetooth®** enabled devices

FCC STATEMENTS

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient or relocate the receiving antenna.

Increase the separation between the equipment and receiver. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. Consult the dealer or an experienced radio/TV technician for help.

RF warning statement:

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

YOUR IJOY PRODUCT

Thank you for purchasing and using the "IJOY SONIC" Outdoor Waterproof Speaker. This product can provide a high quality listening experience through phones, computers, and multimedia. Before using this product, carefully read this manual to operate at maximum benefit. Please ask your local dealer or call us if you have any questions.

IJOY SONIC x 1
Charging Cable x 1
User Manual x 1

SPECIFICATIONS

Bluetooth Version: 5.0
Speaker Diameter: 1.7"
Output Power: 8W
Battery: 2500 mAh/3.7V
Net Wt: 430G
Product Size: 8.2" x 2.9" x 2.6"

BATTERY CAUTION


The battery used in this device may present a risk of fire, explosion or chemical burn if used incorrectly. Never use or charge the battery if it appears to be leaking, discolored, deformed or in any way abnormal. Never disassemble the unit or attempt to remove the battery as that could cause leakage of alkaline solution or other electrolytic substances. Never expose the battery to any liquid. Never expose the battery to excessive heat such as direct light or fire. Always keep the battery out of the reach of infants and small children.

BATTERY DISPOSAL

Please do not attempt to change the battery yourself. If the battery has died, you should follow the disposal instructions listed here. Never dispose of used batteries/electronics with ordinary solid wastes. Always dispose of used batteries/electronics in accordance with the prevailing community regulations that apply to the disposal of batteries/electronics. If there are no local regulations concerning battery/electronics disposal, please dispose of the device in a waste bin for electronic devices. Many electronics retailers now recycle batteries and other electronic components at no charge.

BACK

FUNCTION KEYS

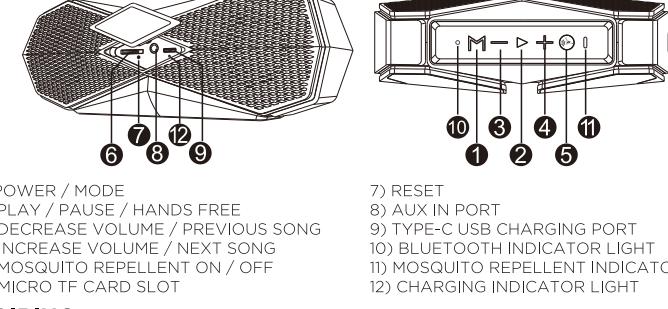

1) POWER / MODE	7) RESET
2) PLAY / PAUSE / HANDS FREE	8) AUX IN PORT
3) DECREASE VOLUME / PREVIOUS SONG	9) TYPE-C USB CHARGING PORT
4) INCREASE VOLUME / NEXT SONG	10) BLUETOOTH INDICATOR LIGHT
5) MOSQUITO REPELLENT ON / OFF	11) MOSQUITO REPELLENT INDICATOR LIGHT
6) MICRO TF CARD SLOT	12) CHARGING INDICATOR LIGHT

PAIRING

Before using the speaker, please fully charge this device.

1) CHARGING YOUR SPEAKER

- Insert the USB cable into a PC, standard USB power adapter or car charger.
- Insert the other end of the cable into the charger port.
- A bright red light indicates that the speaker is charging, and the light will dim to indicate that the speaker is fully charged.
- Charging the speaker will take 5 hours.

2) PLAYING MUSIC

- Turn on the speaker, and a voice will announce when the device is on.
- BLUETOOTH PAIRING
- While searching, the bluetooth light indicator will flash. While on bluetooth, search "IJOY SONIC" and pair. Once the speaker is connected, the speaker will have a voice prompt. If the speaker is not paired within 3 minutes, it will enter standby mode.

INSTRUCTIONS

M POWER / MODE SWITCH

- Power off: Press & Hold
- Power on: Press & Hold
- Bluetooth Mode, press to switch between TF mode to AUX mode to Bluetooth mode
- Play/Pause: Press & Hold
- Pause music: Press to pause
- Incoming phone call: Press to answer call, press & hold for 3 seconds to decline
- Returning missed call: Press twice

+ INCREASE VOLUME / NEXT SONG

- Press to increase volume
- Press & hold to play the next song
- Hands free call: Press to increase volume
- Sound will indicate you have reached the maximum volume.

- DECREASE VOLUME / PREVIOUS SONG

- Press to decrease volume
- Press & hold to play the previous song
- Hands free call: Press to decrease volume

④ MOSQUITO REPELLENT

- Press to turn off, when on there will be a green light indicator
- Press to start transonic frequency
- LIGHT INDICATOR

 - Rapidly flashing blue: Searching for connection
 - Slowly flashing blue: Successful bluetooth connection
 - Slowly flashing green: Ultrasonic mosquito repellent

LOW BATTERY

 - When the speaker has low battery, a beep will sound. It is an indicator to charge the speaker
 - POWER SUPPLY & CHARGING THE SPEAKER

 - Charging power is supplied via DC 5V/1A source
 - Insert the micro usb into the charging port
 - While charging, the indicator light will flash red
 - A dim red light indicates a full battery

OTHER IMPORTANT SAFETY INFORMATION

Disposal of old electrical & electronic equipment (Applicable in the European Union and other European Countries with separate collection systems). The trash can symbol (seen on bottom right) on the product or on its packaging indicates that this product shall not be treated as household waste. Instead it shall be handed over to the applicable collection point for recycling of electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling. For more detailed information about this product, please contact your local household waste disposal service or the shop where you purchased this item.

LIMITED LIFETIME WARRANTY

Our product is warranted for a limited lifetime warranty from the date of purchase. The warranty is provided on all material defects and workmanship. Guarantee of 24 months does not apply to decrease in the effective capacity caused by its use or age. WE RESERVE THE RIGHT TO CHANGE TECHNICAL SPECIFICATIONS. For more information please visit, www.golijoy.com.

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by QUEST USA CORP. is under license. Other trademarks and trade names are those of their respective owners.

Distributed by Quest USA CORP
495 Flatbush Ave.
Brooklyn, NY 11225

© Golijoy & IJOY are registered trademarks of Quest USA Corp. All other trademarks and trade names are property of their respective owners. Designed by GOLIJJOY & IJOY in New York. All rights reserved. Limited lifetime warranty. To activate your product warranty, go to our website www.golijoy.com & register this product.

Made in China.

**ATTENTION VENDOR: PLEASE FOLD ON GREEN LINES AND PRINT DOUBLE SIDED
DO NOT PRINT GREEN LINES WITH MANUAL**

FOLD