

技术要求:

1.材质:双铜128G


2.规格:单页尺寸85x110mm

3.性能要求:风琴折,6P5折,双面印刷

内容色号:PANTONE 431C

正

110.00 mm

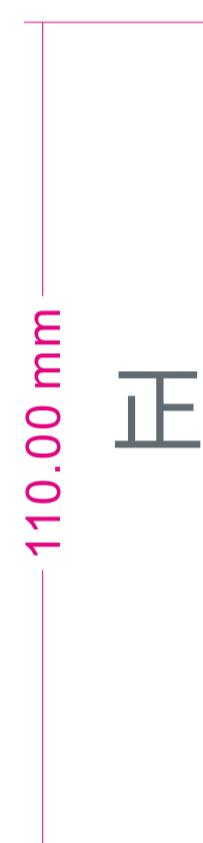


WIRELESS CHARGER

CLOCK + LAMP +SPEAKER

WIRELESS CHARGER ALARM CLOCK MOOD LIGHT WIRELESS SPEAKER NATURAL SOUNDS

PRODUCT INSTRUCTIONS

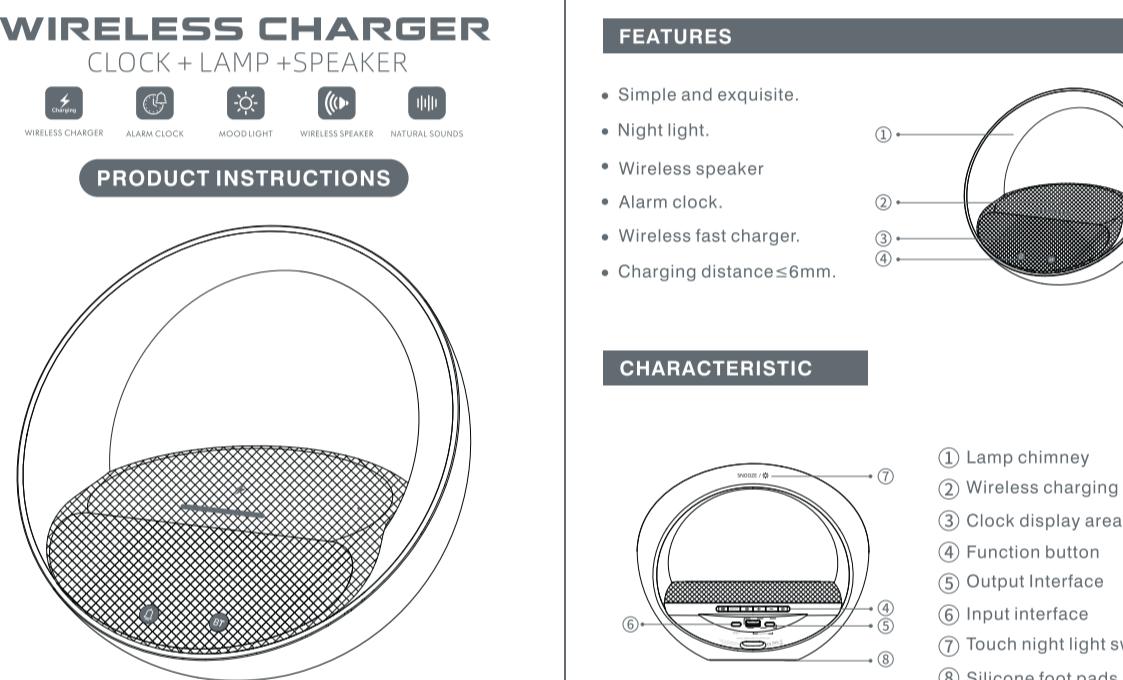

Thank you so much for choosing our product, please read the manual carefully before using the product.


FEATURES

- Simple and exquisite.
- Night light.
- Wireless speaker
- Alarm clock.
- Wireless fast charger.
- Charging distance≤6mm.



HOW TO OPERATE

- Connect the USB port on the USB data cable to the power adapter and the Type-C port on the wireless charger. The charging indicator light [DC] in the clock display area flashes and enters the charging state. The indicator light stays on when fully charged.
- Place the required wireless charging device in the charging induction area of this product, and the clock will display the regional charging indicator light [] is always on to enter the charging state, and the indicator light goes out when fully charged.

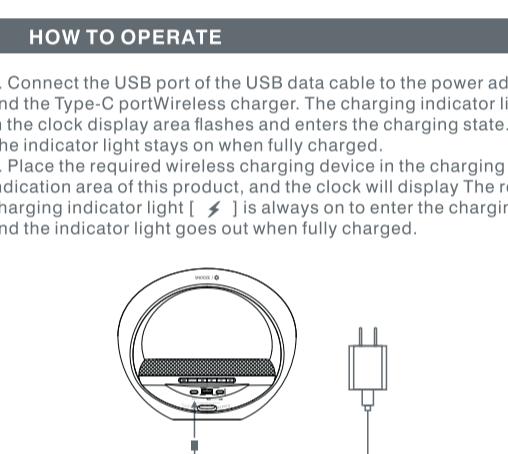

BUTTON FUNCTION



Button introduction

Alarm 1/Alarm 2 Bluetooth Natural sounds Main switch Increase Reduce Screen brightness

HOW TO SET THE CLOCK

In normal clock display mode:

- Short press [] 4 times, the clock display area, the alarm 1 [] icon and the clock start to flash, and enter the alarm 1 clock setting state. Short press [+] to increase the number, short press [-] to decrease the number.
- Short press [] again to switch minutes, the minutes will start to flash and enter the minute setting state. Short press [+] to increase the number, short press [-] to decrease the number.
- Short press [] again to switch to the hours, the hours will start to flash and enter the hour setting state. Short press [+] to increase the number, short press [-] to decrease the number.
- Long press [] to save the current settings and return to the time display.

HOW TO SET AN ALARM

In normal clock display mode: Alarm setting method 1

- Long press the [] alarm icon, clock display area, alarm 1 [] icon and clock display area. Flash and enters the alarm 1 clock setting state. Short press [+] to increase the number, short press [-] to decrease the number.
- Short press [] again to switch to the minutes, the minutes will start to flash and enter the minute setting state. Short press [+] to increase the number, short press [-] to decrease the number.
- Short press [] again to switch to the hours, the hours will start to flash and enter the hour setting state. Short press [+] to increase the number, short press [-] to decrease the number.
- Long press [] to save the current settings and return to the time display.

Open / close

- Short press [] to turn on or off Alarm 1/Alarm 2. The icon is displayed as the alarm is in effect.

Wake function

- When you set the alarm, the lights will automatically turn on slowly from dark to bright half an hour in advance. For example, the alarm clock is set to 7 o'clock, and the lights slowly turn on from dark to bright at 6:30.

When the alarm rings, short press [SNOOZE /] to snooze.

The snooze duration is 5 minutes. The icon is displayed on the screen.

When the alarm clock enters the snooze state, the [Z] icon is displayed on the screen.

If the snooze is not over, touch and hold the night light switch to cancel the snooze state.

Alarm 1 sound source setting

- Short press [] to select the sound source.
- Short press the alarm button [] twice in the clock display area, the alarm icon [] flashes 3 times and turns off, the sound source is set successfully.

Alarm 2 sound source setting

- Short press [] to select the sound source.
- Short press the alarm button [] 3 times. In the clock display area, the alarm icon [] flashes 3 times and turns off, indicating that the sound source has been set successfully.

Note:
There are 7 sound sources (sleeping fire - wind chimes - bells - birds - ocean - streams - natural sounds of electric fan breeze).

ADJUST SCREEN BRIGHTNESS

- Short press [] to adjust the screen brightness. High brightness - medium brightness - low brightness - off to adjust the screen brightness in sequence.

TURN ON AND OFF

- Short press [] to turn on and off the machine.

RESET


- When a fault occurs, press and hold [] for more than 8 seconds to restore to factory settings.

HOW TO USE WIRELESS SPEAKERS

Long press the Bluetooth switch [], there will be a prompt sound, the Bluetooth function is turned on, and the clock display area is Bluetooth. The icon [] flashes, indicating that it is ready for pairing. At this time, search for the device name of your phone. In the Bluetooth device, search for the Bluetooth speaker and the word 'S11' appears. Click to select the 'S11' device name; automatically enters the pairing state. After the connection is successful, there will be a prompt sound. Long press [] again to turn off Bluetooth.

When the speaker is playing:

- Short press [] to increase the volume, long press [+] to switch to the next song.
- Short press [-] to reduce the volume, long press [-] to switch to the previous song.
- Short press [] to pause/play.
- Double-click [] to disconnect Bluetooth and re-search.
- Long press [] to turn off Bluetooth.

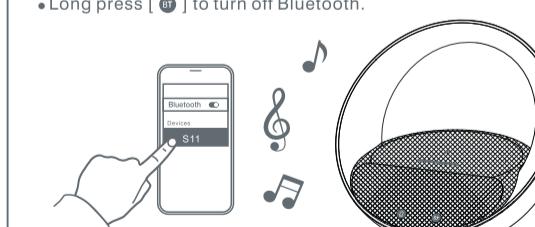

HOW TO USE NATURE SOUNDS

In clock mode:

- Short press [] to turn on the natural sound, long press [] to turn off the natural sound.

When natural sound is on:

- Short press [+] to adjust the volume.
- Short press [] to cycle through the natural sounds of sleep fire - wind chimes - clock - birds - ocean - stream - electric fan breeze.
- Double click [] to start flashing in 30 minutes and enter the countdown setting. Short press [] to cycle through 60-90-30. After 3 seconds without any operation, the countdown starts. The clock display area displays the remaining time of the countdown. After the countdown is over, a natural sound automatically automatically closes. If you want to cancel the countdown before the countdown is over, double-click [] to exit the countdown.

APPLICABLE DEVICE

This product supports fast wireless charging, which complies with the Qi wireless charging standard; it realizes short-distance wireless power transmission through magnetic induction. **This device supports all wireless charging devices that meet the Qi standard.** When using a 5V output adapter, wireless charging supports 5W load. When using an adapter that meets QC2.0 and above standards, the wireless charging supports 10W load. Support overcharge protection (9V) and overcurrent protection (2A).

ATTENTION POINTS

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

RF Exposure Statement (Bluetooth)
The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

RF Exposure Statement (Wireless Charger)
To maintain compliance with FCC's RF Exposure guidelines, this equipment should be installed and operated with minimum distance of 20cm the radiator your body.

FCC Warning Statement
Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
--Reorient or relocate the receiving antenna.
--Increase the separation between the equipment and receiver.
--Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
--Consult the dealer or an experienced radio/TV technician for help.

WIRELESS CHARGING SPECIFICATIONS

Material: Imported ABS + PC + hardware
Input: DC5V/3A 9V/2A
Charging efficiency: 75%
Power: 5W/7.5W/10W/15W
Battery: 2400mAh
Product size: 220x176x187mm
Charging port: Universal Type-C

SPEAKER SPECIFICATIONS

Bluetooth version: 5.3
Bluetooth distance: 10m
Speaker power: 405WX2
Speaker specifications: 50mm

