

1. First use

- 1) Please open the charging box, take out the earphones, and tear off the insulation sticker at the end of the ear handle, then put the earphones back into the charging box and close it.
- 2) Please connect the power supply to charge, and then use it after fully charged.
- 3) Please use the charger below 5V-2.1A to charge

2. Low latency game mode

Turn on the game mode: triple-click the right headset to enter the game mode, and the voice prompt "gaming game mode"

Turn off the game mode: repeat the above method once

3. Easy pairing

- 1) When the smart device is connected to the headset for the first time, open the top cover of the charging box, and the headset will automatically power on and enter the binaural interconnection mode. You need to wait about 3-5 seconds until you hear the prompt "pairing ready to pair" to enter the pairing state with the smart device;
- 2) Open the Bluetooth list of the smart device, select and connect the headset with the device name "GM600". In binaural mode, only one model name will appear.
- 3) After the first connection is successful, remove the headset from the charging box, and the headset will automatically connect back to the device that was successfully connected the last time. If you want to use one earphone alone, just take out one of them.

4. Touch button operation

1. Music playback mode

L/R left/right earphone operation

Pause/Play Click on either side of the headset

Previous song Double click the left earphone

Next song Double click the right earphone

Volume increase Press and hold the right earphone to increase the volume continuously. When the volume is at its maximum, the voice prompts 'di'

Volume reduction Press and hold the left earphone to continuously reduce the volume. When the volume is minimum, the voice prompts 'beep'

2 incoming call mode

L/R left/right earphone operation

Answer the call Click on either side of the headset

End the call Long press either earphone for about 1.5 seconds

Reject the call Long press on either side of the headset for about 1.5 seconds

3 low latency game mode

L/R left/right earphones operate in music mode

Three-click the right earphone to enter the game mode, and the voice prompt "gaming game mode"

Three-click the right earphone to enter the music mode, and the voice prompt "music music mode"

4 voice assistant

Except in the call state, triple-click the left headset touch button to start the voice assistant function (requires the support of the connected smart device)

Turn on the voice assistant, triple click the left earphone

Turn off the voice assistant Three-click the left earphone

5. Restore factory settings

Restoring the factory settings will clear all the pairing information of the headset. The following two methods can be used:

1) Earphone method: Take out the earphone from the charging box, after the earphone is turned off, press and hold the touch button for 8 seconds, the orange light of the earphone flashes twice to show that the pairing information is cleared successfully

2) Charging box method: put the earphone in the charging box, open the top cover of the charging box, and at the same time press and hold the button of the charging box for 8 seconds, until the left and right lights of the charging compartment flash 10 times at the same time

Charging indicator light

The right light of the charging box shows the charging status

1) When charging: the right light of the charging box flashes slowly

2) When fully charged: the right light of the charging box is always on

The left light of the charging box shows the power of the charging box

1) Sufficient power: the left light of the charging box is always on

2) Low battery: the left light of the charging box flashes quickly

headset

When charging: the charging box closes the cover to charge the earphones, the right light of the charging box flashes slowly 5 times to indicate that it is charging

When fully charged: the right light of the charging box goes out

Charging time: about 30 minutes

FAQs

If you encounter any problems, you can first try to restore the factory settings to confirm whether the problem still exists.

1. There is no sound from the headset?

Answer: a. Confirm that the headset is working

- b. Confirm whether the volume of the headset is appropriate
- c. Confirm whether the headset is properly connected to the phone
- d. Confirm that the headset is in the normal working range

2. The headset call effect is not good?

Answer: a. Confirm whether the smart device is in a strong signal area

B. The effective distance of the headset is 10 meters, confirm that the headset is within the effective use distance, and there is no obstacle between the headset and the device

FCC STATEMENT :

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.

- Increase the separation between the equipment and receiver.

- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

- Consult the dealer or an experienced radio/TV technician for help.

RF warning statement:

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.