 
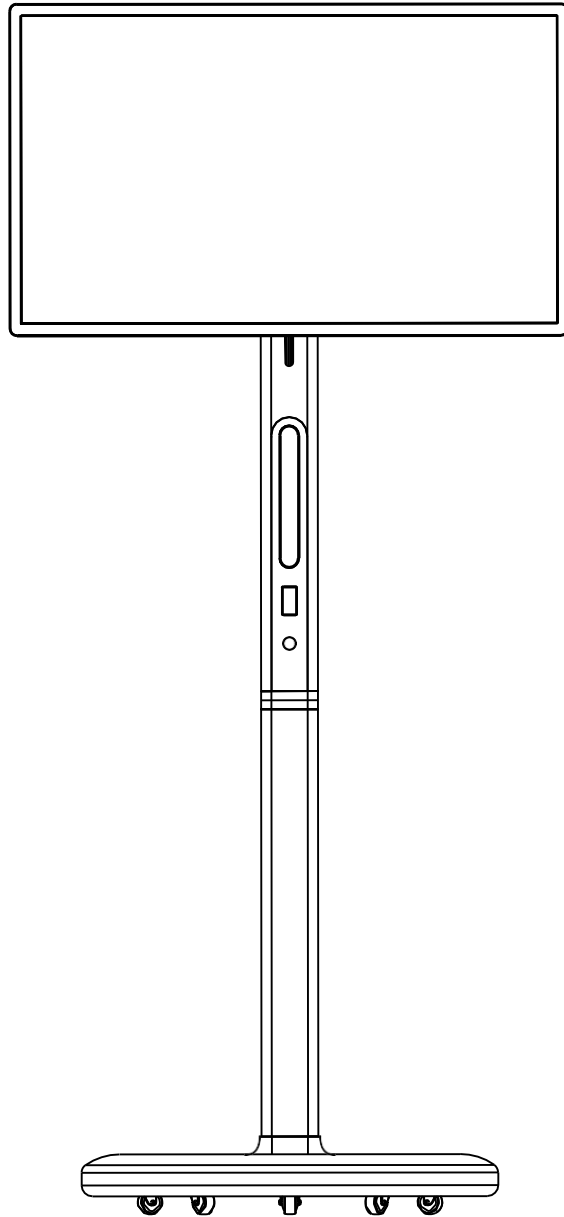 
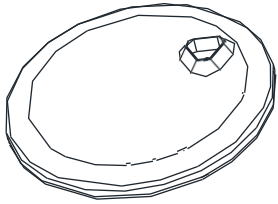 
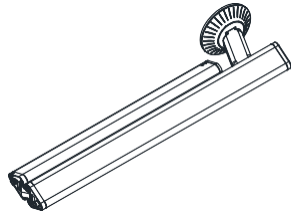 
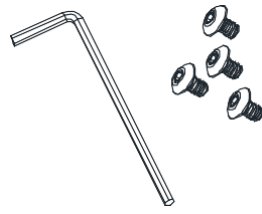 
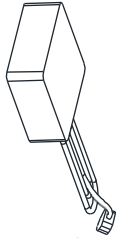 


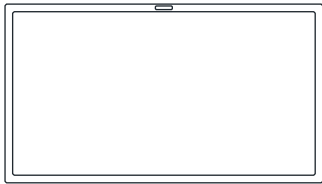

UserManual

SMARTTOUCHSCREENTV

IntheBox

**A****B****C****D****E****F****H****A**Base**B**Stand**C**WrenchandScrews**D**PowerAdapter**E**Monitor**F**UserManual**H**RemoteControl (Optional)

| SafetyPrecautions

THIS INSTRUCTION BOOKLET CONTAINS IMPORTANT SAFETY INFORMATION. PLEASE READ IT CAREFULLY AND KEEP FOR FUTURE REFERENCE.

- To avoid potential fire hazards, refrain from storing the Product in the locations listed below. Doing so could result in fire hazards, electric shock, combustion/explosion, malfunction, or damage to the Product:
 - Prolonged exposure to direct sunlight.
 - High-humidity environments, such as bathrooms.
 - Proximity to heat sources, such as stoves or other heaters.
 - Contact with steam or oily fumes, such as kitchen or humidifiers.
 - Exposure to rain water or moisture.
 - Placement near inflammable substances, such as gasoline or candles.
 - Areas prone to dust accumulation.
 - Unstable or high places, such as shelves or desks.
- Place the Product in a well-ventilated space to prevent overheating. Avoid placing it in a narrow space that can restrict the flow of air.
- Do not cover the product with clothing or blankets. This may restrict airflow, causing the device to overheat and pose a risk of fire.
- After extended use, the vents of this product may become hot. Avoid contact with the vents to prevent the product from overheating and to ensure proper heat dissipation.
- To avoid product damage and potential electric leakage, protect the power cables from twisting, bending, and cutting. If the power cables are damaged, do not use the device and seek professional assistance.
- When connecting the power cable, make sure the power interface is securely and correctly connected to the device. A loose or poor connection can not only damage the product, but also pose a risk of electric shock. Do not move the Product while connecting the power cable to avoid any accidents.
- Do not remove the Product's power cable by force.
- Be sure to handle with caution when connecting to/removing the power cable from the power source.

- To avoid fire hazards or electric shock, do not connect too many devices on one singular power supply source.
- Follow all installation instructions to avoid damage or injury due to improper assembly.
- Position the Product in a secure area to prevent damage or personal injury.
- Please connect the Product's adapter to a three-pole grounded AC socket. Make sure to connect the grounding wire to avoid electric shock.
- In case of lightning, do not touch the Product. Electric shock may occur.
- Do not insert any metal objects into the product. If there is a foreign object inside the product, please unplug the power cord and contact customer service.
- In any of the following cases, please cut off the Product's power supply and contact Customer Service.
 - The Product is damaged.
 - Water or other foreign matter enters the Product.
 - The Product has smoke or other odor.
- Do not use high-voltage electronic equipment around the Product; otherwise, it may lead to faults such as signal interference.
- Make sure to use authorized parts and components; otherwise, fire hazard, electric shock or malfunction may occur.
- Do not attempt to modify the product, as this may result in fire or electric shock. Please contact the customer service department or an authorized service personnel for service or maintenance.
- Do not dismantle the AC adapter or power cable; otherwise, fire hazard or electric shock may occur.
- Do not drop or hit the Product.
- To reduce fire hazards or electric shock, do not touch the Product with wet hands.
- Wipe off water or dust (if any) on the power plug.
- Do not apply unreasonable pressure or use sharp objects to press the Product's screen; otherwise, product damage and personal injury may occur.

- While cleaning the Product, please remove the power cable and wipe it gently with a dry cotton cloth.
- Do not spray water or other liquids directly onto the Product.
- Do not clean your product with harmful chemicals, such as glass cleaner, air freshener, insecticide, lubricant, automotive or industrial wax, polishing agent, diluent, benzene or alcohol; otherwise, electric shock or product damage may occur.
- For any battery liquid leakage in the base, stop use immediately to avoid skin and eye contact. Any accidental contact may lead to blindness or burns. Flush the contacted area with water immediately and contact a medical professional for further assistance.
- The battery may fail to recharge completely or have a reduced life if it is discharged completely or idled for a long period of time.
- Any unauthorized disassembly/assembly of product parts without consulting the manufacturer may lead to product failure, and you will not be entitled to maintenance services.
- Do not push or kick the Product.
- Do not suspend or put heavy objects on the Product.
- Do not move or slide the product while the installation is not complete.
- Do not exceed the product's maximum angle limit when in use.

SAFETY WARNING (Stability Hazards)

 
Incorrect usage can lead to serious personal injury. It is recommended to take the following precautionary measures to avoid causing harm:

- Be sure to use the suggested stand and mounting methods. ■
Be sure to put the Product on level ground.
- Warn children about the hazards of climbing on or touching the display or stand.
- Make sure to arrange the Product's power wires and cables neatly to avoid tripping or dragging.
- Do not put the Product at a high or tilted place.
- Do not place articles such as toys, on the Product or stand, as this may induce children to climb onto the Product


InstallationProcess

Step 1


After opening the outer box packaging, take out the instruction manual and other accessories, and carefully read the instruction manual.

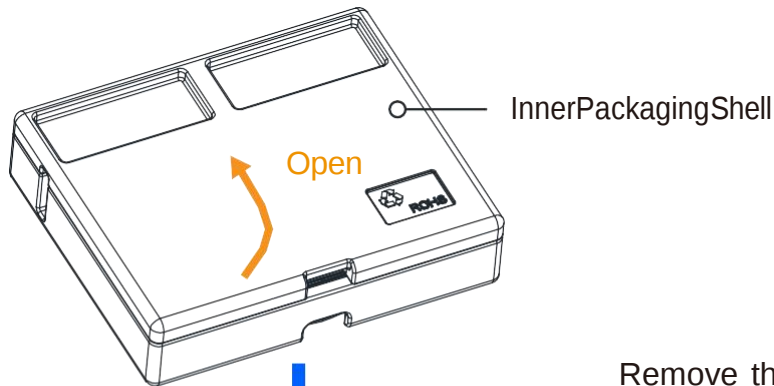

 Remove the inner packaging lid and take out the monitor, placing the monitor temporarily on the outer packaging lid.

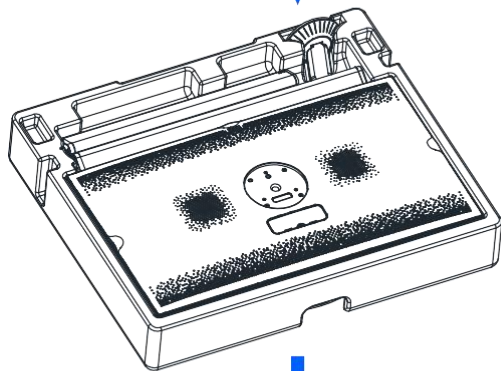


 Remove the inner packaging base box and take out the accessories.

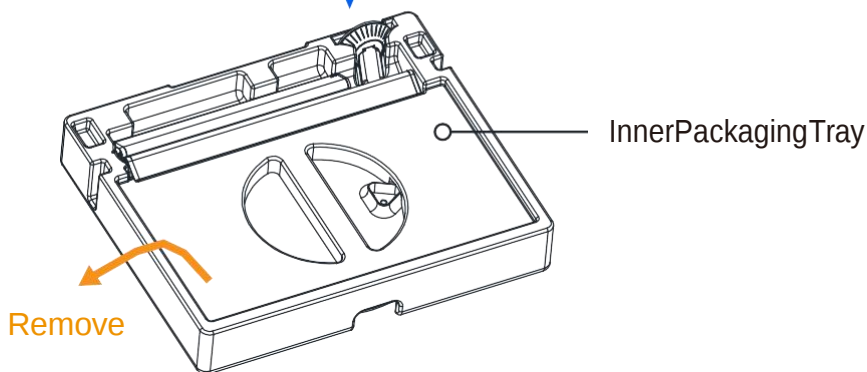


Note: Please carefully place the internal poles and accessories and do not lose them.

 Step 2 Remove the base **A** and open the wrench cover, then take out the three wrenches.

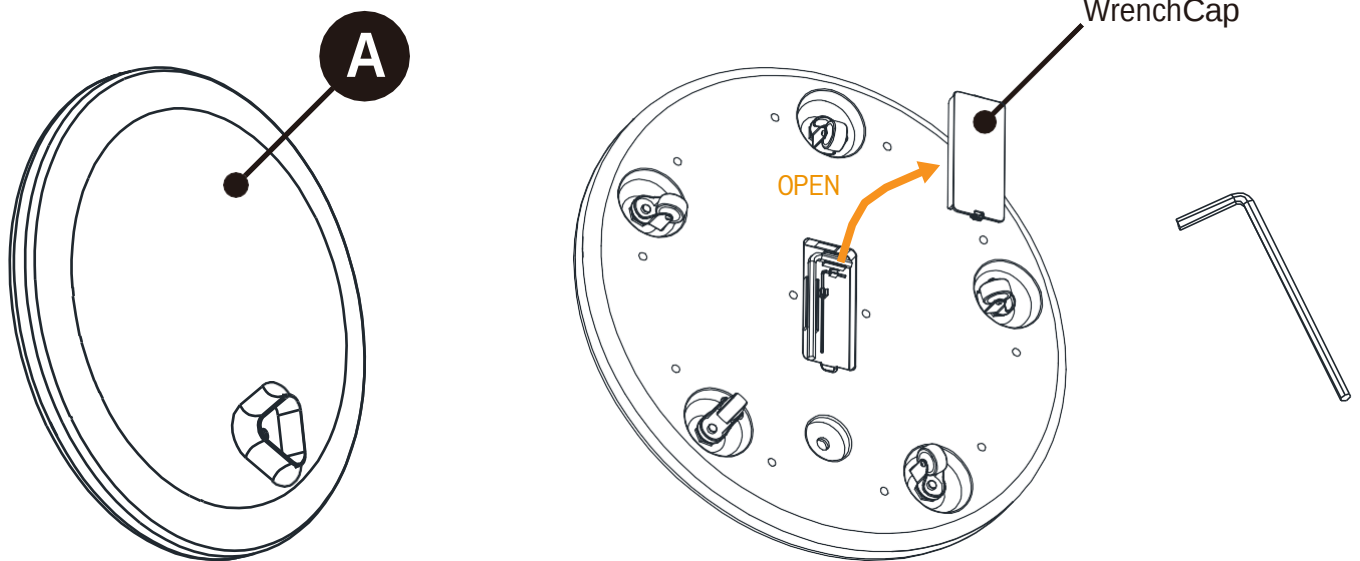

 Step 3 Take out the stand **B** and extend it. Use the small wrench to tighten the internal screws.

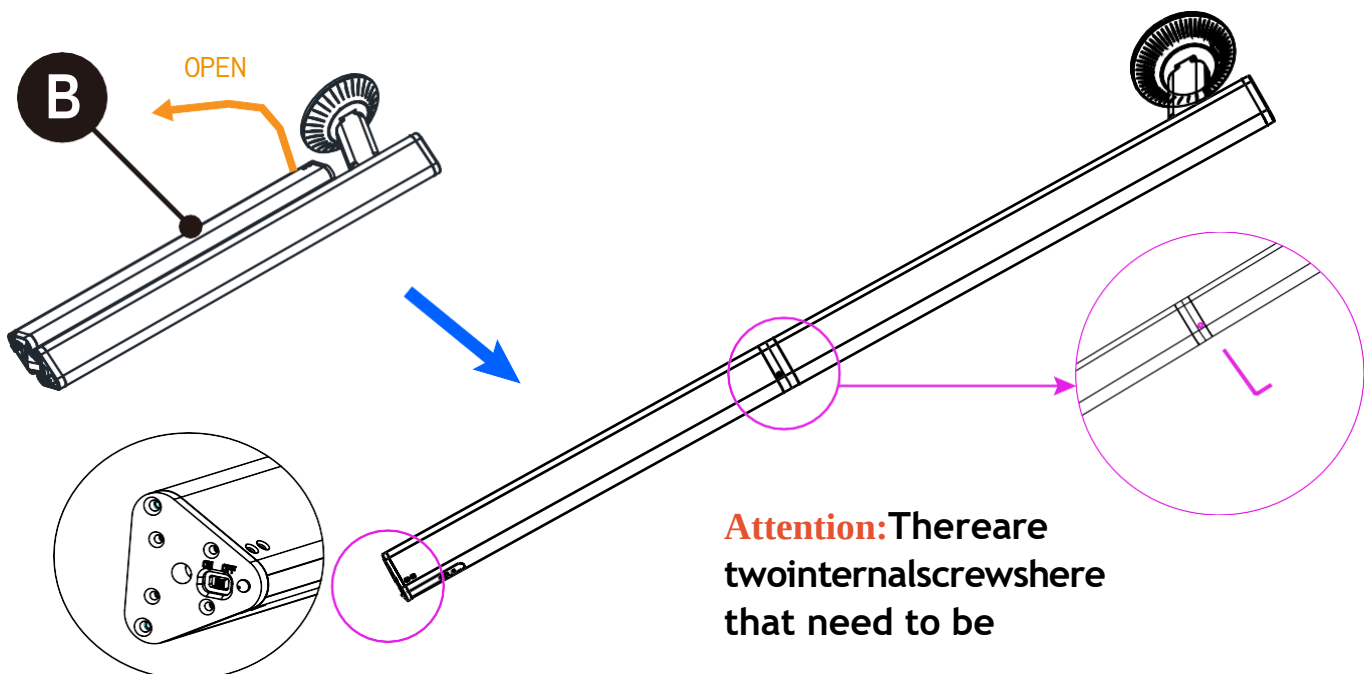


Attention: For the first installation, turn on the switch here to "ON".

Step

4

 
Insert the stand in **A** and use a screw to secure the connection, then use a large wrench and a screw to tighten it by rotating the screw clockwise from the bottom of the base to fix them in place.

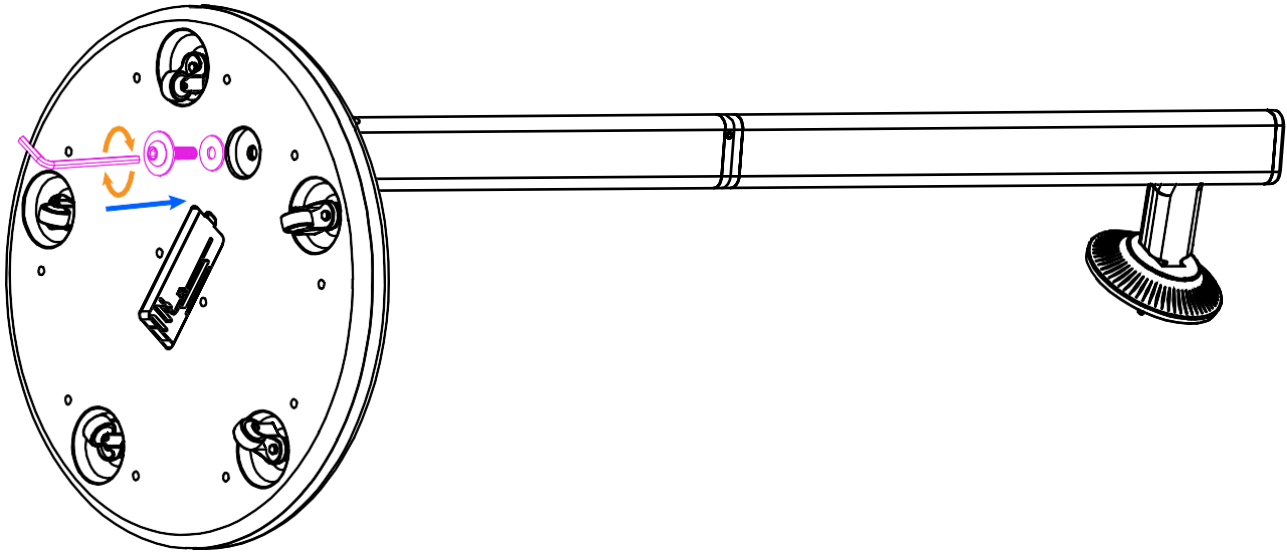



Step

5

 
Place the monitor **E** into the fixed position in the inner packaging box. Open the top swivel cover of the stand and align the swivel with the monitor, and use a medium-sized wrench and four screws to tighten them clockwise to secure them in place.

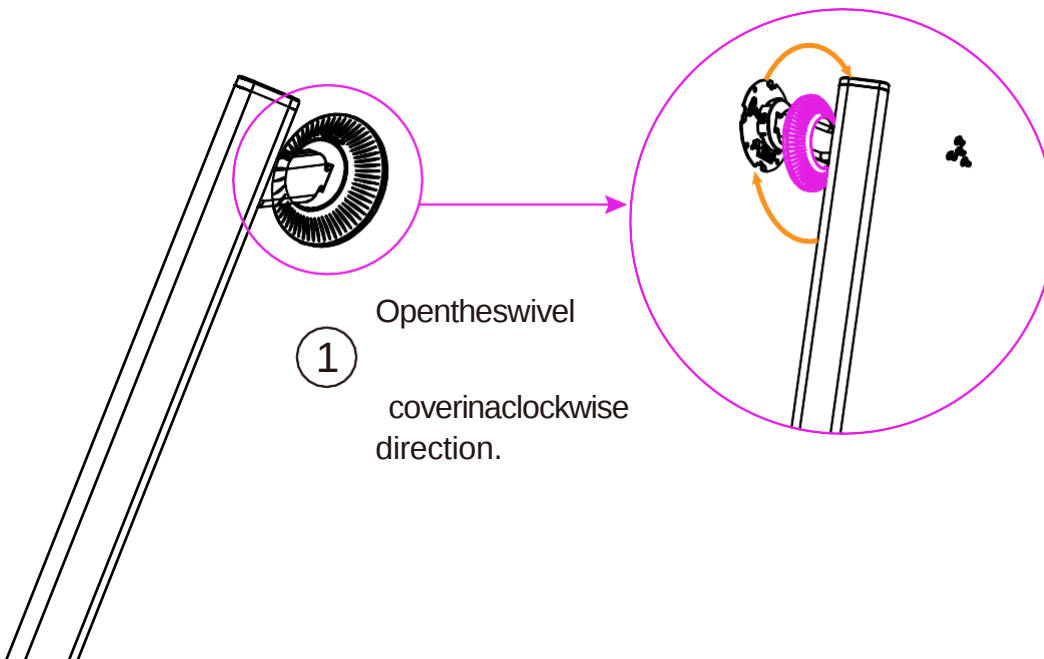

  - ② Placethedisplay screeninto thefixed position in the inner packaging.

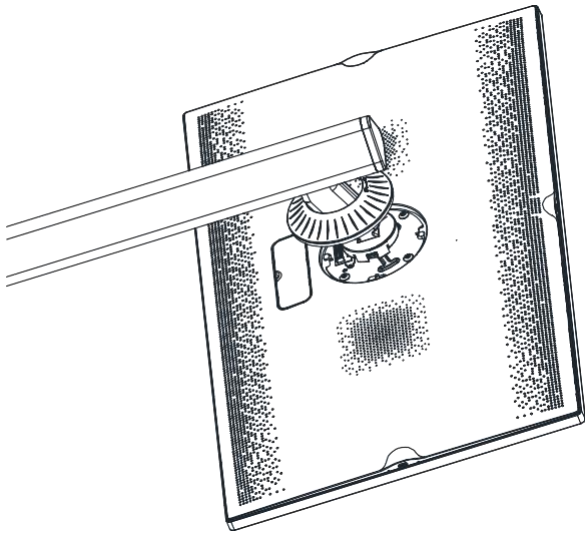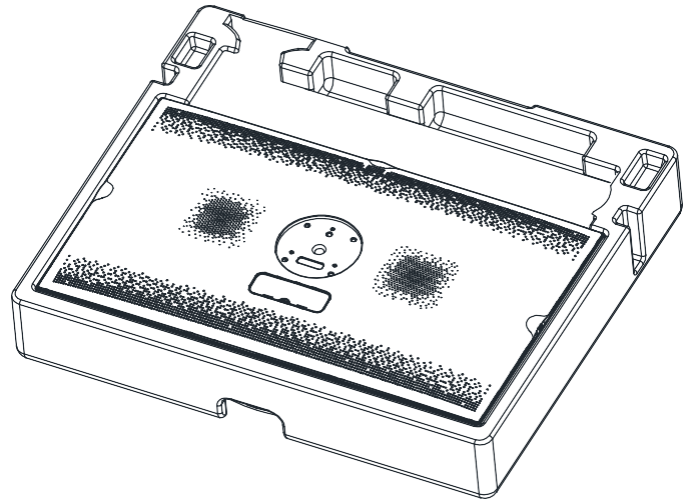

 Place the swivel into the display installation position and tighten the screwswithamedium-sizedwrench.

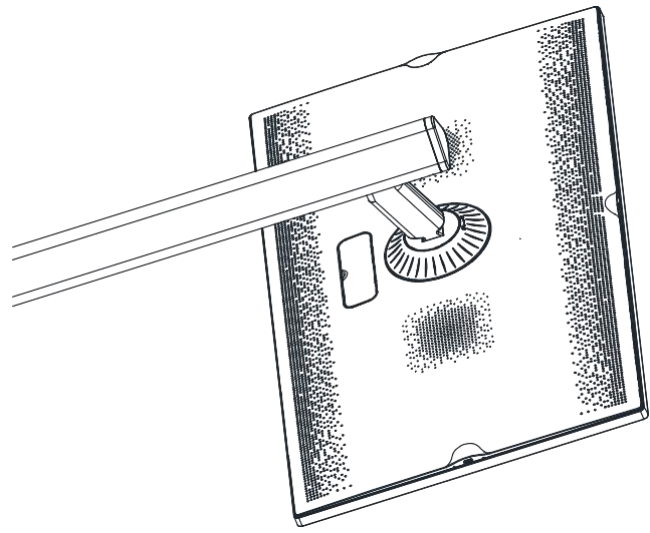

- ④ Installandtightentheswivelcover.

Step 6

 
Put all the wrenches back into the wrench box at the bottom and close the wrenchbox.Theinstallationiscomplete.Positiontheproductcorrectly.

AngleAdjustment

You may adjust the angle and height of the display for the optimal viewing experience in any scenario.


- Supports 90° rotation (right rotation: 90°).
- Support tilt adjustment of 30° and height adjustment up to 180mm.

Note: The actual angle may vary slightly due to the external factors.

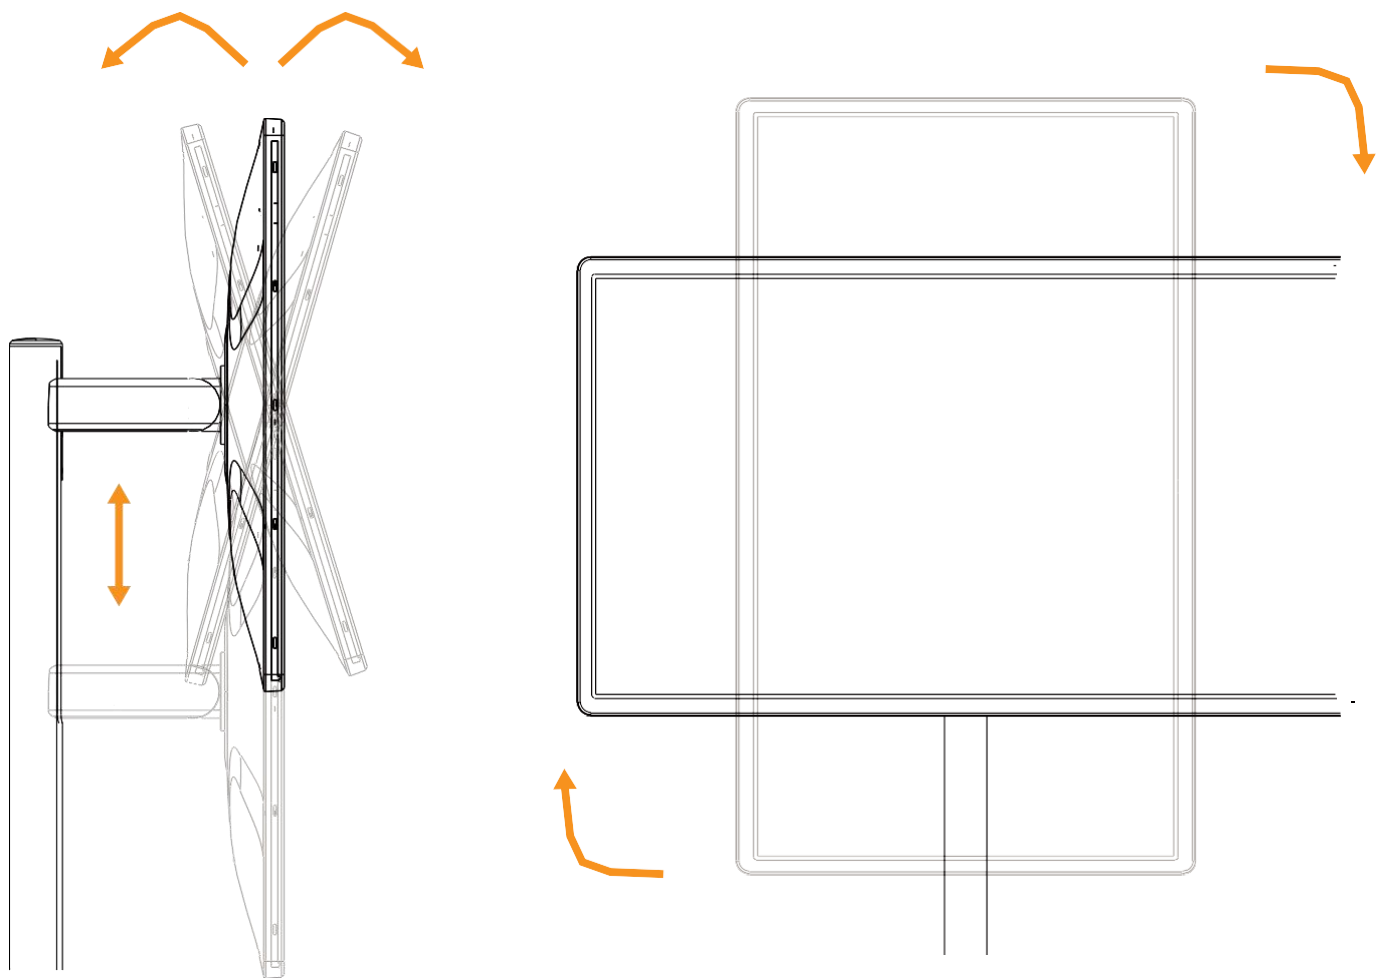

Switch

 There are multiple switches in this device. Please follow the prompts to turn the machine on and off.

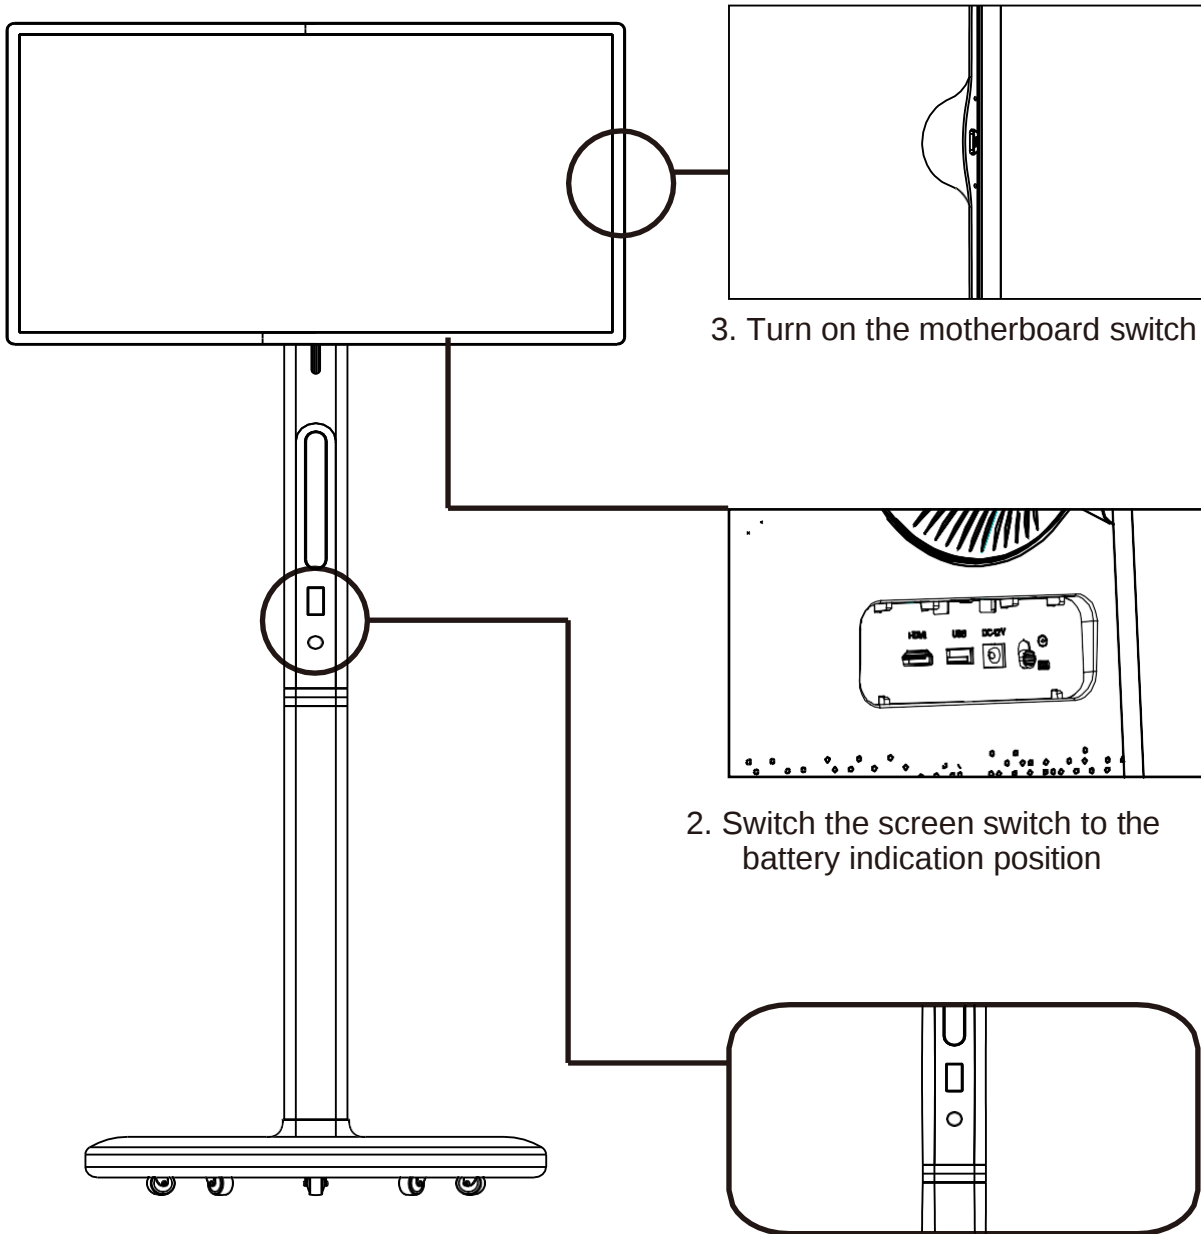

3. Turn on the motherboard switch

2. Switch the screen switch to the battery indication position

1. Turn on the button switch to display the power

| Troubleshooting

No image and sound

- Please check if the Product is powered on normally.
- Please check if the power adapter is powered on normally.
- Please connect to other products to see if the wall outlet is faulty.
- Please check if the power cable at the back of the display is properly connected.

The product has an unexpected shutdown

- Please check if battery is low.
- Please check if the auto shutdown function is within the set time period.
- Please check if the Product has entered Ecomode and the display is under a auto shutdown status.
- If the battery is overheating, the Product will shutdown automatically to trigger protection mechanism.

No signal when external HDMI® device is connected

- Please reboot the Product.
- Please reconnect the HDMI cable.
- After the Product is rebooted, please restart the external HDMI device.

Display error

- As the Product's display has millions of pixels, tiny black spots or highlight color light spots may be shown on the display in PPM units. These neither represent an abnormal display status, nor affect the Product's performance and reliability.
- When viewing the Product in different locations, the user may notice different brightness and display colors. This is a normal phenomenon that belongs to the Product's characteristics and is unrelated to the Product's performance.

Abnormal sound

- Circuit buzzing/display signal noise: The Product may emit a low noise due to high currents when the circuit has high-speed switching. This noise does not affect the Product's performance and reliability.

Specifications

Specifications	BSD-32M2	BSD-27M2
Display	32"Diagonal	27"Diagonal
Resolution	1920*1080	1920*1080
Brightness	300cd	300cd
OS	Android	Android
RAM	4G/8G	4G/8G
ROM	64G/128G	64G/128G
Multimedia	4K@30fps(H.264,HEVC,VP8)	4K@30fps(H.264,HEVC,VP8)
Touchscreen	CapacitiveTouch/INCELL	CapacitiveTouch/INCELL
RemoteControl	Bluetooth/Infrared	Bluetooth/Infrared
ScreenRotationAngle	90degreesclockwise	90degreesclockwise
ScreenLiftTravel	180MM	180MM
ScreenTiltAngle	30° (±15°)	30° (±15°)
MaximumTiltAngle	18°	18°
NetWeight	18.5KG	18.5KG
GrossWeight	21KG	21KG
PackageDimensions	795*670*200MM	795*670*200MM

FCC Warning

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE 1: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

NOTE 2: Any changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.