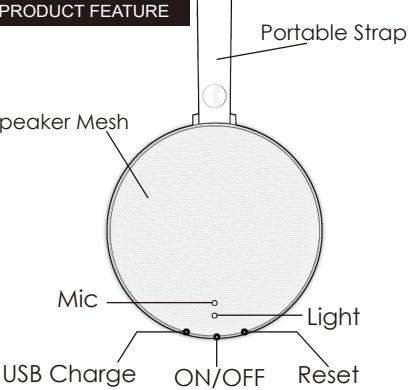


<p>F002 FASHION Lot. 20PT1471</p> <p>DoDo SPEAKER Small WIRELESS SPEAKER Speaker Phone</p> <p>Quick Start Guide & User Manual</p> <p>versions:1.0</p>	<p>KEY FUNCTION</p> <p></p> <p>Power On: Long press 2 seconds to turn on the speaker.</p> <p>Power Off: Long press 2 seconds to turn off the speaker in Non- Connection mode. If in paired mode, long press 2 seconds to cut off the exit connection firstly.</p> <p>Answer/ End The Call: Short press to answer or end the phone call.</p> <p>Reject The Call: Long press 2 seconds to reject the call while phone incoming.</p> <p>Redial The Call: Double click to redial the last phone call.</p> <p>Cut Off The Connecting: In paired mode, long press 2 seconds to cut off the exit wireless connecting.</p> <p>MAIN FEATURE</p> <ul style="list-style-type: none"> ⦿ Wireless 5.0 ⦿ Hands free speakerphone 												
<ul style="list-style-type: none"> ⦿ Ultra thin powerful sound ⦿ Candy colors for optional ⦿ Micro USB port for charging ⦿ Portable with Strap ⦿ Linique cylinder design <p>SPECIFICATIONS</p> <ul style="list-style-type: none"> ⦿ Frequency Range: 100Hz-20KHz ⦿ Operating Distance: 10 meters ⦿ Microphone: Built in ⦿ Power Rating: 3W ⦿ SNR: ≥85+2 dB ⦿ Charging Voltage: DC 5V ⦿ Battery Capacity: 400mAh ⦿ Charge Time: Approx. 2 hours ⦿ Playback Time: Approx. 6 hours (around in 50% sound level) ⦿ Housing Material: ABS+Silicone 	<p>WIRELESS PAIRING</p> <p>Please charge F002 speaker for 3 full hours prior to the initial use.</p> <p>Make sure your cellphone (or media player device) is wireless enabled. Specific pairing steps may vary with different devices. Please refer to the user manual of your device for further information.</p> <ol style="list-style-type: none"> 1. Be sure F002 speaker is in power off mode. Place media device next to the speaker. Press&hold the power button for 2 seconds to enter pairing mode. 2. Activate wireless on media device and select "My Speaker F002" from the list. Enter "0000" if media device prompts for a password. 3. If pairing fails, remove all unused prior wireless connection from media device. Turn off F002 speaker and wireless connection and start again from Step 1. 												
<p>Notice: While turn on the speaker again, it will connect to your media device automatically as long as the wireless is on your device..</p> <p>RECHARGING THE DEVICE</p> <p>The wireless speaker is powered by a built-in rechargeable lithium battery that can be operated by the following steps:</p> <ol style="list-style-type: none"> 1. Connect the standard USB charging cable to a standard USB charging port such as computer or USB adapter from the DC 5V socket. 2. A red LED is on while the unit is charging and off when the speaker is fully charged. <p>PACKAGE CONTENTS</p> <ul style="list-style-type: none"> ⦿ DoDo SPEAKER ⦿ USB Charging Cable ⦿ User Manual ⦿ Gift Box 	<p>PRODUCT FEATURE</p> 												
<p>TROUBLE SHOOTING</p> <table border="1" data-bbox="369 1576 1237 1759"> <thead> <tr> <th>Symptoms</th> <th>Causes</th> <th>Solutions</th> </tr> </thead> <tbody> <tr> <td>F002 Can't be powered on</td> <td>Low battery level</td> <td>Recharge the battery </td> </tr> <tr> <td>Not able to pair with the speaker</td> <td>F002 is already on but not to the pairing mode.</td> <td>Refer to "Wireless pairing section" in the previous page.</td> </tr> <tr> <td>Volume too low</td> <td>Battery is not charged up or volume is not set the maximum on media player.</td> <td>Increase the volume on the media players.</td> </tr> </tbody> </table>	Symptoms	Causes	Solutions	F002 Can't be powered on	Low battery level	Recharge the battery 	Not able to pair with the speaker	F002 is already on but not to the pairing mode.	Refer to "Wireless pairing section" in the previous page.	Volume too low	Battery is not charged up or volume is not set the maximum on media player.	Increase the volume on the media players.	
Symptoms	Causes	Solutions											
F002 Can't be powered on	Low battery level	Recharge the battery 											
Not able to pair with the speaker	F002 is already on but not to the pairing mode.	Refer to "Wireless pairing section" in the previous page.											
Volume too low	Battery is not charged up or volume is not set the maximum on media player.	Increase the volume on the media players.											
<p>SAFTY INSTRUCTIONS</p> <ol style="list-style-type: none"> 1. Keep the speaker out of reach of children. 2. Clean the speaker with soft cloth without using harsh corrosive chemicals. Always unplug from the power source before cleaning the device. 3. Do not puncture or disassemble the exterior of the speaker in any way. 4. Do not insert any metal object into the speaker. 5. Do not expose the speaker to any excessive heat. 	<p>    MADE IN CHINA</p>												

FCC Statement:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

RF Exposure Information

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.