

 
## Smart led Floodlight



### Product Parameters

|                      |                          |
|----------------------|--------------------------|
| Product Name:        | 60W Smart LED Floodlight |
| Connection Methods:  | BT Mesh                  |
| APP Name:            | Shine Light              |
| Suitable Phone OS:   | Android 4.0/IOS9.0       |
| Channels:            | 5                        |
| Wattage:             | 60W                      |
| Light Luminous Flux: | 5000LM                   |
| Color Temperature:   | 2800K-6800K              |
| Working Temperature: | -20 TO+45℃               |
| Holder:              | 3-PIN Line               |
| Control Distance:    | Visible distance 20M     |
| Voltage:             | 100-277V ~, 50/60HZ      |
| Waterproof:          | IP66                     |
| Average Life(hrs):   | 22000H                   |
| Certification:       | FCC/CE/ROHS              |

About wiring

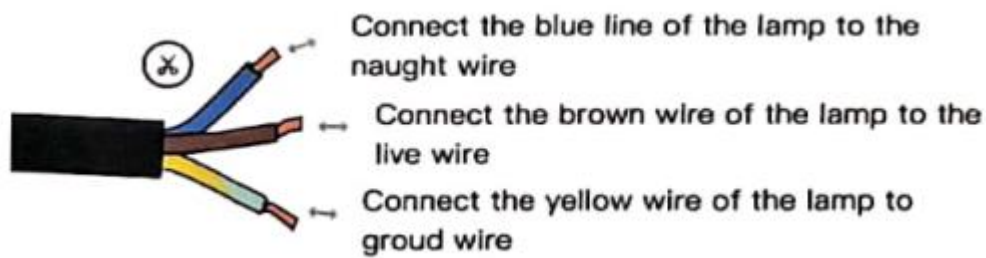

Remember the groud wire to be connected ,so as not to cause electric shock in the product immersion in the rain.

Plug directly into the socket, can be powered to use  
For your safety ,please install under professional guidance.Please  
Make sure the power is off before wiring.

IP Grade-IP66

|   | Dustproof Level                                           | Waterproof Level                                                                              |
|---|-----------------------------------------------------------|-----------------------------------------------------------------------------------------------|
| 0 | No protection                                             | No protection                                                                                 |
| 1 | Prevent the invasion of large solids                      | There will be no effect on housing if drip drops into it.                                     |
| 2 | Prevent the medium size solids from invading              | When the housing tilts to 15degrees, there will be no effect on housing if drip drops into it |
| 3 | Prevent the small solids from invading                    | There will be on effect on housing if water or rain drops into it from 60 degrees.            |
| 4 | Prevent the solid which is greeter than 1mm from invading | There will be no damage on housing if throw the liquid to it from any directing               |
| 5 | Prevent hamful dust from accumuiation                     | There will be no any damage if washing with water                                             |
| 6 | Compieteiy prevent dust from entering                     | Can bused in the cabin environment                                                            |
| 7 |                                                           | it can be soaked in water for a short time                                                    |
| 8 |                                                           | Under certain pressure it can be soaked in water for long                                     |


If you don't know the protection level,please to the chart,the third(IPXX)for dust level, the fourth (IPXX) for waterproof level.Do not soak the lamps with insufficient protection under water for a long time!

### Placement and installation method

 Instructions before installation:

1. Arrange all kinds of parts for supporting lamps.
2. Check the input voltage,power and other parameters of lamp carefully before installation.
3. Make sure the power is off before installation.
4. Make sure that the core of the core of the external power line does not leak out when wring.

### Installation Diagram

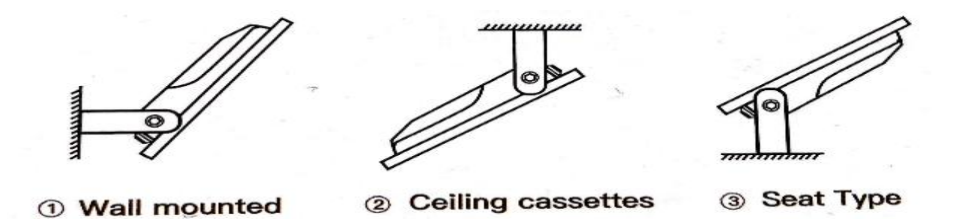

## 1. APP download

The public version of the APP has now been released to mainstream APP stores around the world. You can search "Shine Light" in the APP store, or scan the qr code below to download it.

 
IOS: iOS Appstore in China and overseas

Android: Google Play, etc., continue to increase




## 2. Device default pairing guidelines:

1. After downloading the APP, register an account in the us domain to use it. The mobile phone needed to open the bluetooth function.

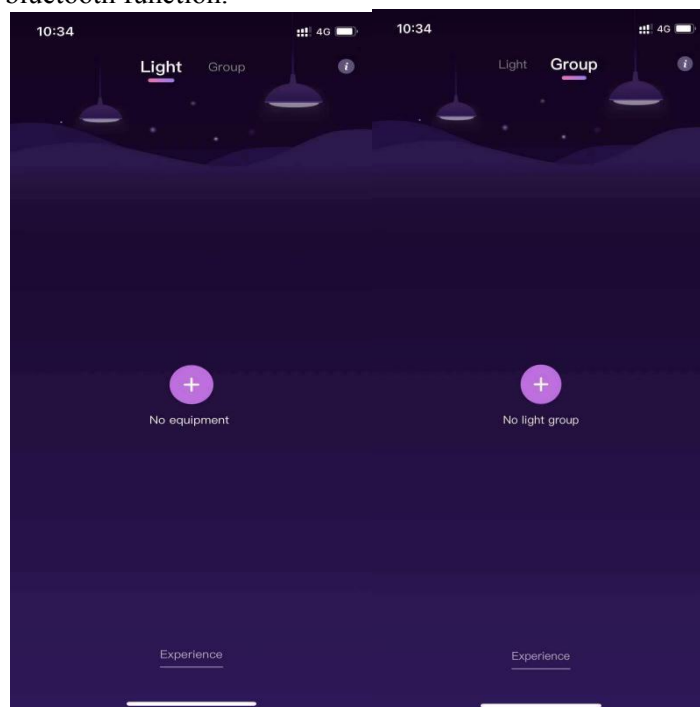

2. Enter the password of the current connection router (the user can manually switch the connected router), click the next step to start the network distribution, and confirm whether the device is in the state of network distribution.

 3 , After successful network distribution, it will automatically jump to the details page of the device. The control test can be performed at this point.

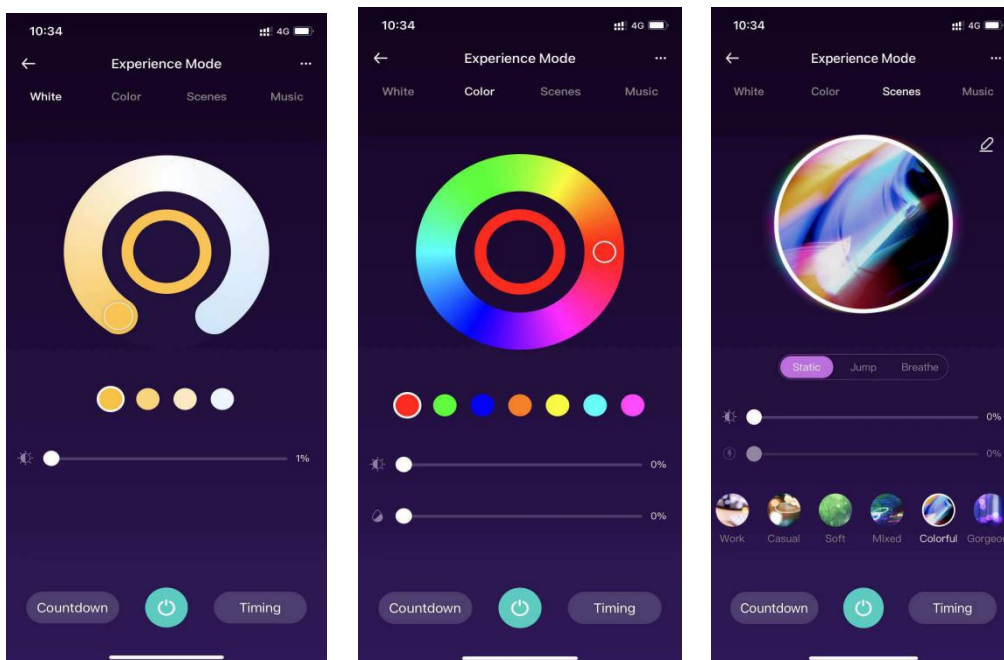

#### 4 、 Note:

If you can't search your Bluetooth bulb device or can't connect with the Bluetooth lamp device for a long time, please enter your phone 'setting' and connect again;

If you can't connect to the device for a long time or other abnormal ,please close the APP ,then try to restart;

Do not put the product in closed lampshade;

Do not put the product in the place which is humid or has water;

Keep using it under the power supply of 12V DC,50-60Hz;

This product is not a toy and keep it untouchable to children;

Do not put the product on high-temperature surface;

Do not open any sealing device for safety and according to Warranty Terms;

### 3.FCC Information

This equipment complies with FCC RF radiation exposure limits set forth for an uncontrolled environment.

This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.

This device complies with Part 15 of the FCC Rules, operation is subject to the following two conditions: (1) This device may not cause harmful interference,and (2) this device must accept any interference received, including interference that may cause undesired operation.

- Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

- NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules.These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.

- Increase the separation between the equipment and receiver.

- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

- Consult the dealer or an experienced radio/TV technician for help.

#### IC Statement

This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions:

1. This device may not cause interference.
2. This device must accept any interference, including interference that may cause undesired operation of the device.

L'émetteur/récepteur exempt de licence contenu dans le présent appareil est conforme aux CNR d'Innovation, Sciences et Développement économique Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes :

1. L'appareil ne doit pas produire de brouillage;
  2. L'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.
- This equipment

should be installed and operated with a minimum distance of 20 cm between the radiator and your body

Cet équipement doit être installé et utilisé avec une distance minimale de 20 cm entre le radiateur et votre corps

