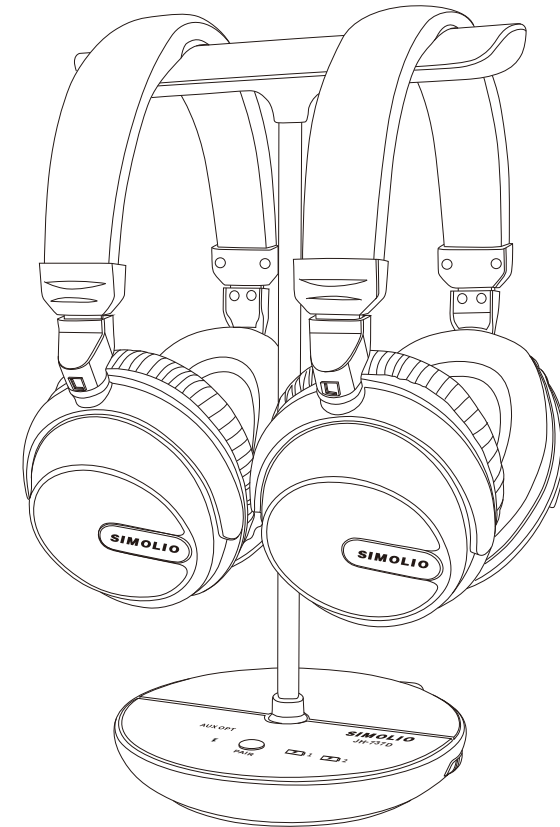 


LIMITED WARRANTY

This warranty covers manufacturing defects and product failure for 12 months from the date of purchase. The warranty will not be extended if we repair or replace the product. If the product fails to function properly due to a defect within one year of original purchase, return it (freight prepaid) with proof of purchase and a brief description of the problem to Simolio. Simolio will repair or replace the unit and return it to you free of charge.

This warranty does not cover cosmetic damage, damage due to accidents, misuse, abuse, negligence, commercial use, or modifications. Accessories and perishable items are not covered.

.....

SIMOLIO**Wireless Headphones****JH-737D****User Manual**

Thank you for choosing the SIMOLIO JH-737D wireless TV headphones. Please read this guide carefully and keep it in a safe place for future reference. If you need any further assistance, please contact our customer support team at:

support@simolio.com (US/CA/AU) **support_uk@simolio.com** (UK)

Response Time: 2-24h, excl. Holidays

Welcome to subscribe to our **YouTube** channel and social media for more product information.

www.simolio.com **www.amazon.com/simolio**

 
Table of Contents

Important Safety Instructions	01
Product Diagram	02
Package Contents	03
Buttons and Functions	03
LED Indication	05
How to Use	05
1. How to Charge the Headphones	05
2. How to Connect the Transmitter to Your TV/Audio Source	06
2.1 Check Your TV/Audio Source Output Options before the Set up...	06
2.2 Power on the Transmitter and Headphones	07
2.3 Connect and Set Up Your TV	08
2.3.1 Option 1 - Digital Optical Connection	09
2.3.2 Option 2 - RCA Connection	10
2.3.3 Option 3 - 3.5mm/AUX Connection	12
2.3.4 Option 4 - Simultaneous Listening with a Soundbar	14
2.3.5 Other Options in Special Cases	15
① TV/Audio Source Only has Digital Coaxial Audio Out port	15
② If You Want to Connect to Your AV Receiver	15
③ TV/Audio Source Only has HDMI (ARC) Port	16
3. How to Add More Headphones to the Transmitter	16
4. How to Use the Headphone Separately with Your Phone / Tablet	17
5. How to Clear Pairing History	17
Troubleshooting	18
Technical Specifications	21
Limited Warranty	22


 




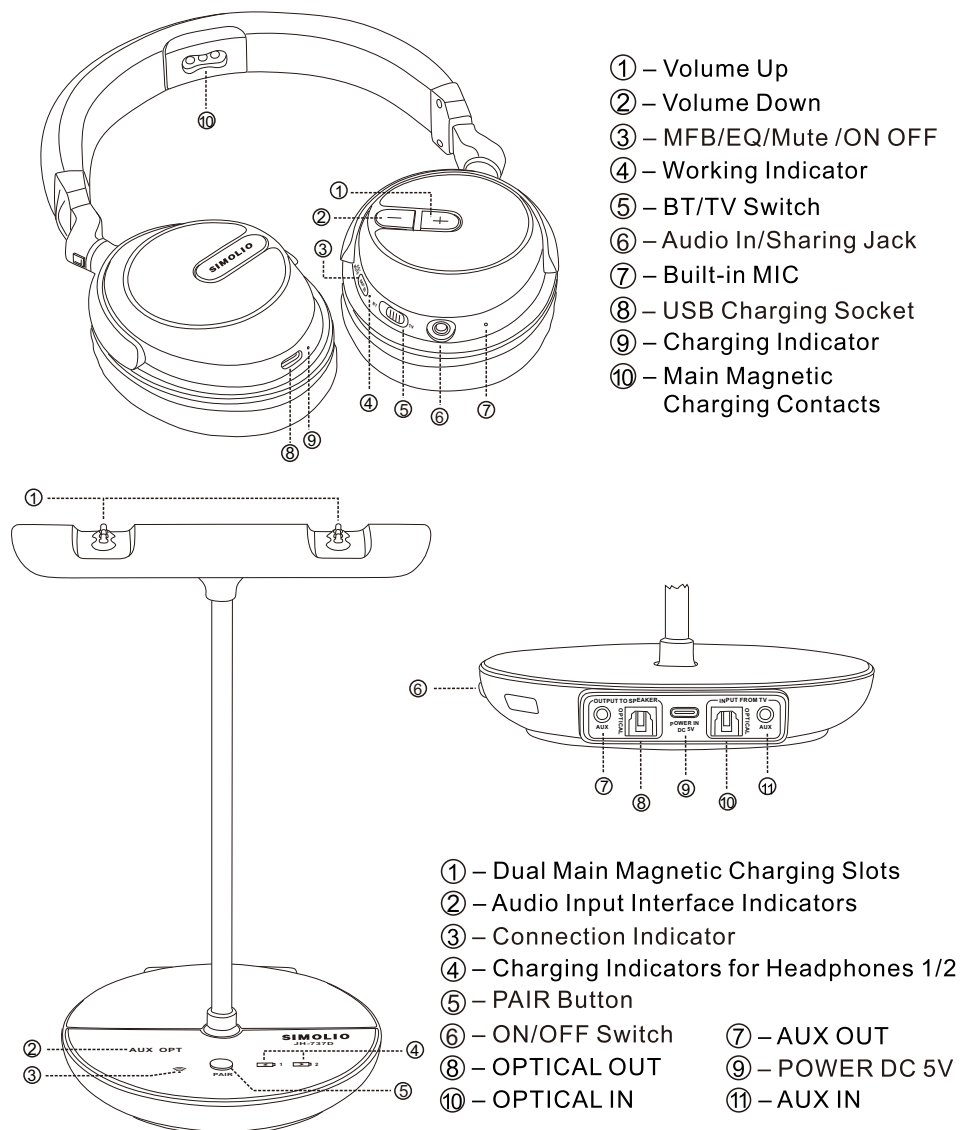

IMPORTANT SAFETY INSTRUCTIONS

1. Please read this instruction manual carefully and completely before using the products. Keep this manual easily accessible at all times.
2. Always keep the product dry, and do not expose them to extreme temperatures.
3. To take better care of the battery, charge the headphones in a timely manner when headphones say "low battery". Charge the headphones once every 3 months if not using for a long time.
4. The headphones must keep the minimum volume before switching the unit on. High volume may cause hearing damage to persons with normal hearing, especially to children.
5. Keep devices away from liquid. Before cleaning the product and its accessories, disconnect the transmitter from the power source, and use only a slightly damp cloth to clean the devices.
6. Use the products with care and set them up on a stable surface of a clean, dust-free environment.
7. The unit may get hot during use. Ensure the unit has adequate ventilation.
8. Please put the product far away from microwave oven, mobile phones, WiFi router etc. to avoid unnecessary electronic wave interference.
9. Please switch off the transmitter and headphones after use, and unplug the transmitter from power source when not using for a long time.
10. Only qualified person can provide services! Do not attempt to open the unit!
11. Product must not be placed closer than 6" (15cm) to a pacemaker. Consult your doctor or the manufacturer of the medical device before using the product.

PRODUCT DIAGRAM



PACKAGE CONTENTS

 



 


 




Headphone*2		Wireless Transmitter
		
Power Adapter for Transmitter 	USB Charging Cable for Headphone 	Optical Fiber Cable 
Ø3.5mm-RCA Audio Cable 	Ø3.5mm Audio Cable 	User Manual 

BUTTONS AND FUNCTIONS

Buttons and functions of the transmitter

Button	Function	Operation
ON/OFF Switch	Turn on transmitter	Slide the switch to ON
	Turn off transmitter	Slide the switch to OFF
PAIR	Enter pairing mode	Press and hold the PAIR button for 3 seconds until the GREEN LED flashes quickly

Buttons and functions of the headphone

Button	Function	Operation
MFB	Turn on headphone	Press and hold the MFB button for 3 seconds
	Turn off headphone	Press and hold the MFB button for 3 seconds
	Enter pairing mode (TV mode)	Slide the switch to the "TV" position, press and hold both the  and  buttons simultaneously for 3 seconds until the GREEN LED flashes
	Enter pairing mode (BT mode)	Slide the switch to the "BT" position
	Play / Pause music (BT mode)	Press the MFB button once to play / pause audio (when being used with phone / tablet)
	Mute / Unmute the headphone (TV mode)	Press the MFB button once to mute / unmute audio from the headphone
	EQ setting	Double click the MFB button to switch between Dialog / Cinema / Standard sound modes, you will hear "dialog / cinema / standard" sound
	Answer / End a call (BT mode)	Single click the MFB button, with prompt sound "Du"
	Reject a call (BT mode)	Single click the MFB button, with prompt sound "Du"
BT / TV Switch	Select TV / Bluetooth mode	Switch to "TV" to connect to the transmitter, you will hear "TV mode"
		Switch to "BT" to connect to one's phone / tablet, you will hear "Bluetooth mode"
	Volume Up	Single click 
	Next Track (BT mode)	Press and hold  for 3 seconds, then release
	Volume Down	Single click 
	Previous Track (BT mode)	Press and hold  for 3 seconds, then release
 	Clear pairing	Press and hold the  and  buttons simultaneously for 6 seconds until the RED and GREEN LED flash once with a "Di" prompt sound

LED INDICATION

LED indicators of the transmitter

LED Status	Status Indication
Solid GREEN LED	Connected
GREEN LED flashes slowly	No audio signal within 10 minutes
Stable dark GREEN LED	Standby - No audio signal for more than 10 minutes
GREEN LED flashes quickly	Transmitter enter pairing mode
Charging indicator solid RED	Headphone charging by the base
RED charging indicator off	Charging completed
Solid WHITE on OPT/AUX	Transmitter is in OPT/AUX connection

LED indicators of the headphone

LED Status	Status Indication
GREEN LED flashes slowly	In pairing mode/ Disconnected
Solid GREEN LED	Connected
Solid RED LED with voice prompt "low battery"	Low battery
Solid RED LED	Headphone charging
RED LED off	Charging completed

HOW TO USE

1. How to Charge the Headphones

Whenever you hear the voice prompt "Low Battery" or the LED blinks **RED**, it indicates low battery and the headphones shall be recharged.

Charging Method 1: Turn off the headphones and place it onto the magnetic charging stand for recharging, the LED charging indicator on the stand will stay solid red while charging and turn off when charging is complete. (Ref. Fig1-1)