

Contents

Basic Information.....	1
<i>Brief Introduction</i>	<i>1</i>
<i>Safety Notice</i>	<i>1</i>
<i>Cleaning and Maintaining</i>	<i>1</i>
Before Using	1
<i>SIM</i>	<i>1</i>
<i>Phone Unlock</i>	<i>2</i>
<i>SIM Unlock.....</i>	<i>2</i>
Function menu Introduction	2
<i>Call Logs</i>	<i>2</i>
<i>Phonebook</i>	<i>4</i>
<i>Settings</i>	<i>5</i>
<i>File manager</i>	<i>8</i>
<i>Messaging.....</i>	<i>8</i>
<i>Tools</i>	<i>9</i>
<i>Games.....</i>	<i>10</i>
<i>Services.....</i>	<i>10</i>
<i>Multimedia.....</i>	<i>11</i>

Basic Information

Brief Introduction

Thank you for choosing **F21832** mobile phone. You can read the manual, a comprehensive understanding of the use of mobile phones and enjoy its perfect functionality and simple method of operation.

F21832 supports two SIM cards function. In addition to basic call functions, but also to provide you with phone book, personalized ring tones, alarm, camera, image viewer, One Memory Card (T-Flash card), calculator, calendar etc. A variety of practical features to facilitate your work and leisure activities, in addition, **F21832** interface with personalized mobile phone design, its perfect functionality to meet your needs.

Our Company reserves without any prior notice the contents of this manual under the right to make changes.

Safety Notice

If your phone is lost or stolen, immediately notify the telecommunications sector, or its outlet, to disable the SIM. This will allow you to take phone calls from other economic loss arising. To make you more secure use of mobile phones, please take precautionary measures, such as:

- Set up mobile phone SIM card PIN password, PIN password to prevent your SIM is unauthorized use by others.

Cleaning and Maintaining

Do not use the bathroom where high humidity, cell phone, battery and charger, the same should also avoid the rain. Use a soft, dry cloth to clean the phone, battery and charger. Dirt outlet will lead to poor contact, power-down, which does not charge, regular cleaning.

Before Using

SIM

Before using your phone you must insert a valid SIM (Subscriber Identity Module) card. SIM card provide by the network provider.

Warning: Be sure to remove the SIM phone off before. There is absolutely prohibited in the case of an external power supply connected to insert or remove the SIM, or SIM card and mobile phone may be damaged.

Phone Unlock

In order to prevent illegal use, your phone can set the phone lock password protected. Use this function,you must enter the phone lock password so that you can unlock the phone into the normal use state.

Enter the phone lock password, press the LSK to confirm. For example, if the phone lock password is set to 0000, then the following input: 0000.

SIM Unlock

In order to prevent illegal use of your SIM with PIN (Personal Identification Number) password encryption protection. Use this function, if you have set the PIN password protection, every time you must enter the PIN password at boot time, so that you can unlock the SIM card and phone to normal use. Enter the PIN password, press the LSK to confirm. For example, if the PIN is set to 1234, then the following input: 1234.If there consecutive incorrect, your SIM will be network locked, the phone will ask for PUK password.

Function menu Introduction

Call Logs

Call history

Missed calls

Enter the missed calls menu, will display the missed calls list. Select missed call records, press the Options key:

- **View** View the details.
- **Call** Call the record number.
- **Send text message** Send text message to record number.
- **Save to Phonebook** Save the number to the phone or SIM card.
- **Add to Blacklist** Save the number to call blacklist number.

- **Delete** Delete the number.

Dialled calls

Enter the dialled calls menu to display the current record of outgoing phone list of phone numbers. Please refer to missed calls for details.

Received calls

Enter the received calls menu to display the current record has been received mobile phone number list. Please refer to missed calls for details.

All calls

Enter the all call menu, will display the all calls list. Please refer to missed calls for details.

Delete call logs

Press the LSK to select "OK" to enter sub-menu to delete call records.

Call timers

Record the detailed call history of SIM1/SIM2 here.

Call settings

Call waiting

Open this feature, during the call if the new call, the network will notify you. Specific use with your network provider.

- **Activate** launch the function.
- **Deactivate** Close the function.
- **Query status** Query the function's status.

Call divert

Network Call Transfer service allows you to call a business case in a default transferred to a phone number you specify. The features include: Divert all voice calls, Divert if unreachable, Divert if no answer, Divert if busy, Divert all data calls.

Call barring

Into the "Call barring" sub-menu, you can set the following call barring

any combination to improve security. Some network providers may not provide this service call restrictions, specific use, please contact your network provider. Network provider will provide a four password so that you can enable call restrictions.

Change the password to enter the old call barring password, set new restrictions on the password.

Line switching

You can select Line1 or Line2.

Advanced settings

Blacklist:

1. Reject numbers in blacklist: You can select on or off.
2. Blacklist numbers: You can add blacklist numbers.

Auto redial:

Through on / off settings, to activate or disable the feature. Turned on and when your phone call after another failed attempt to connect up to redial 10 times. This feature can save you the trouble of repeated calls.

Call time reminder:

Off Close the function.

Single Enter any numbers between 1-3000 (sec) , remind one time.

Periodic Enter any number between 30-60 (sec) , from the input time (in seconds), remind for periodic.

Auto quick end:

Automatically end the call in setting times.

Connect notice:

Turn on this feature, there will be a reminder sound when the phone is connected.

Answer mode:

Any key: You can press any key to answer incoming call

Auto answer when headset mode: Incoming call could be auto answered when headset mode.

Phonebook

You can use the phonebook to store records, can store the following: name and phone number. In the phonebook list, select a record, to make a call when you press the dial keys. Select a record in the phonebook, you can do the following:

-
- View** View the contact details or edit record.
 - Send text message** Send text message to this number.
 - Call** Make a call to the number.
 - Edit** Can edit and save record.
 - Delete** Delete the record.
 - Copy** Copy the current record to Phone/SIM.
 - Add to Blacklist** Add the number to call blacklist number.
 - Mark several** Select multiple contacts to delete or send text messages.
 - Phonebook settings:**
 - Preferred storage** Select SIM1, SIM2, Phone and All to switch, and phonebook list will change accordingly, such as select SIM1, the phonebook list will only show SIM1 records .
 - Speed dial** Open speed dial. If you long press number keys on the dialing interface, you can call up.
 - Extra numbers** You can set fixed dialing numbers.
 - Memory status** View the usage and total Phonebook capacity information.
 - Copy contacts** You can copy contacts from SIM to phone/SIM and from phone to SIM.
 - Move contacts** You can move contacts from SIM to phone/SIM and from phone to SIM.
 - Delete all contacts** You can delete all contacts of SIM card and phone.

Settings

Profiles

Profiles including General、Silent、Meeting、Outdoor and Headset. First, based on the current scene, select a different profile, then you only need a personal profile can be set and activated.

General: General environment.

Silent: For Silent environment.

Meeting: Vibrate mode.

Outdoor: For outdoor activities, need to pre-set (for example, ring volume can be set to a higher state).

Press the left soft key "Options":

Activate: Enable the selected profile.

Customize:

Alert type: Ring only/Vib. Only/Vib. and ring/Vib. then ring.

Ring type: You can choose repeat and beep once.

Ringtone According to their own preferences set ringtones, can also be set

from the memory card custom ringtones

Ringtone volume In the volume control interface, you can volume up and down navigation keys on the set. Volume level is divided into seven.

Message According to their own preferences set ringtones.

Message volume In the volume control interface, you can volume up and down navigation keys on the set. Volume level is divided into seven.

Keypad You can set keypad as silent,click and tone

Keypad volume You can set keypad volume.

Power on You can set power on ringtone.

Power off You can set power off ringtone.

Phone settings

Into the phone settings sub-menu, you can make the following settings:

Time and Date

In this menu, you can change the phone time and date settings.

Language

Phone supports many kinds of language for you to select. Set the current language type, then menu and interface refresh for the corresponding language.

Pref. input method

The phone supports many kinds of methods, to choose an input method as the default when the initial input.

Display

Wallpaper: Set wallpaper.

Screen auto lock: Set screen auto lock time.

Power on display: You can set power on display.

Power off display: Set screen auto lock time.

Show date and time: You can set On/off.

Dedicated keys

Set up, down, key for shortcuts.

Flight mode

Switch between normal mode and flight mode.

Misc. settings

LCD backlight

You can set brightness and time.

Security settings

Into the "Security Settings" menu, you can set the phone's security options, mobile phone or SIM card to avoid unauthorized use.

SIM security

PIN lock: You can set PIN lock on or off by inputting SIM PIN. And you can change PIN and PIN2.

Phone security

Phone lock: You can set it on/off.

Change password:

Change the phone password, enter the old password and then enter a new password. Phone default password is 0000.

Network settings

SIM1/SIM2:

Network selection(Automatic/Manual)

GPRS connection(When needed/Always)

GPRS transfer pref.: Data prefer/Call prefer

Dual SIM settings

Dual SIM open

Only SIM1 open

Only SIM2 open

Flight mode

Connectivity

Data connection SIM

SIM1/SIM2

Data accounts

You can set data accounts of SIM1/SIM2.

Restore settings

In this menu, enter the password, once determined, the phone automatically reboot the phone after the relevant parameters can be set to return to default settings. The default password is 0000.

File manager

Into the File manager menu, the menu display **Phone** and **Memory card**. Root directory, select "**Phone**", press the **LSK** to enter "**Options**" can be as follows:

- **Open** Open the root directory lists the directories and files.
- **Format** Format the memory card, this action will remove all current flash

memory data.

Root directory, select "**Memory Card**", press the **LSK** to enter "**Options**" can be as follows:

- **Open** Open the root directory lists the directories and files.
- **Format** Format the memory card, this action will remove all current

flash memory data.

- **Details** more information you can view, such as Name, Total size, free size.

You can play the music or video files, view Photo, copy/move/delete files, rename files and so on.

Messaging

Make sure that the information in writing before the message center number is set correctly. Access to an information menu, you can edit the SMS message.

Write message

Edit SMS message contents.

Inbox

Messages which are received.

Drafts

Draft messages.

Outbox

SMS are not sent successfully.

Sent messages

SMS are sent successfully.

SMS settings

SIM1/SIM2 This menu can set validity period,message type,delivery report,reply path and voicemail server function.

Memory status: View the SIM and Phone capacity information.

Text msg. counter: Received message and sent message counter of SIM1/SIM2.

Save sent message: You can set it on or off.

Preferred storage: Can set preferred storage as SIM or phone.

Tools

Calculator

Your phone provides you with the basic arithmetic operations. Press the left soft key "Clear", Press the right softkey "Back" to exit the calculator.

SIM Toolkit

Insert the SIM card, will show STK, if not insert the SIM card does not display this menu.

Bluetooth

Power: Turn on bluetooth or not.

Visibility: You can set it on/off.

My device: Search new device.

Search audio device: Search new audio device.

My name: Bluetooth device name which can be renamed.

Advanced:

Audio path.

Storage.

Bluetooth address.

Calendar

Enter calendar the screen will show a calendar month with the current date marked. Press the up, down, left, and right navigation keys to change the date, calendar information on the screen will be updated accordingly. Press the left soft key "Options" option to display the calendar menu.

Alarm

Select and edit an alarm clock: You can set the setting of alarm on / off, Time, Repeat and Alarm tone. You can choose to set to repeat: Once, Everyday, Custom.

Torch

Select the on or off state to turn on/off the torch light.

Games

Snake

Services

Internet service, access the menu:

Homepage: Homepage is your connection settings in the start set in the WAP site. If you do not set, will use pre-set vendor sites.

Bookmarks: Comes with Phone for quick access to the site, users can also add their own bookmarks.

Search or input URL: Enter the address you can enter a WAP or any other Internet sites.

Settings

Homepage: Set the default or user defined page as the homepage.

Data account: Set the SIM cards' network.

Browser options: Including following operations.

Clear cookies: Select the clear cookies to clear cookies data.

Clear authentication info: To clear the authentication info

Preferences: Can modify web browser preferences, Including wait time and display pictures.

Note: GPRS service requires network support, must be after the opening and in a GPRS network coverage area, you can use GPRS services.

Multimedia

Camera

The phone includes high-definition camera, you can take pictures anytime, anywhere, and to save the photos to your phone or memory card.

State in the preview, press the LSK to enter "Options" you can do this to conduct a more detailed set of parameters.

Switch to video recorder: Switch to the video recorder.

Photos: Photo album shows the current list of files.

Camera settings: Including anti-flicker ,scene mode,white balance and delay timer.

Image settings: You can set the size of the image and the quality of the image.

Storage: Storage location can be set as Phone, Memory card.

Restore default: Set all parameters to default settings.

Image viewer

Select an album sub-menu, you can easily view stored in the camera album picture list, and press the LSK to enter to "Options" to choose the pictures to do the View, Send, Use as, Rename, Delete, change Storage and check Image information operations. View pictures, by pressing on the left and right navigation buttons to switch pictures.

FCC Warning

15.19 Labeling requirements.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

15.21 Information to user.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

15.105 Information to the user.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential

installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Absorption Rate (SAR) information:

This device meets the government's requirements for exposure to radio waves. The guidelines are based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. The standards include a substantial safety margin designed to assure the safety of all persons regardless of age or health.

FCC RF Exposure Information and Statement The SAR limit of USA (FCC) is 1.6 W/kg averaged over one gram of tissue. This device was tested for typical body-worn operations with the back of the handset kept 15mm from the body. To maintain compliance with FCC RF exposure requirements, use accessories that maintain a 15mm separation distance between the user's body and the back of the handset. The use of belt clips, holsters and similar accessories should not contain metallic components in its assembly. The use of accessories that do not satisfy these requirements may not comply with FCC RF exposure requirements, and should be avoided.

Body-worn Operation

This device was tested for typical body-worn operations. To comply with RF exposure requirements, a minimum separation distance of 15 mm must be maintained between the user's body and the device, including the antenna. Third-party belt-clips, holsters, and similar accessories used by this device should not contain any metallic components. Body-worn accessories that do not meet these requirements may not comply with RF exposure requirements and should be avoided. Use only the supplied or an approved antenna.