


PROHEAR®

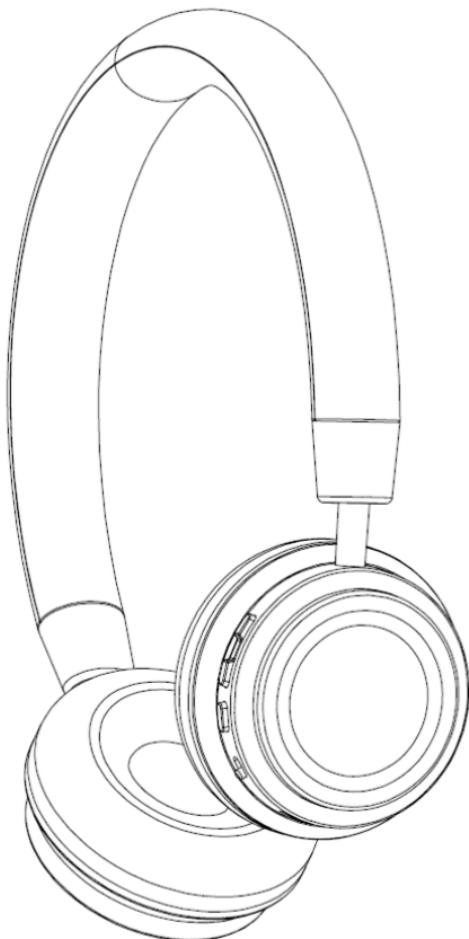

010 Active Noise Canceling Bluetooth Headphones

USER MANUAL

READ BEFORE USAGE

Dear Customer

Thank you for purchasing the PROHEAR-010 wireless Noise-canceling headphone.

Please read this user manual carefully and follow the instructions listed in order to optimize the use of your new headphone and enjoy your music the way it was meant to be heard.

Features


PROHEAR warranties this product to the original purchaser to be free from defects in material and workmanship, under normal use and conditions for a period of **1 YEAR** parts from the date of purchase.

Under this warranty, this unit will be replaced at our option. Copy of original receipt or gift receipt, is required for any warranty service. To enact the warranty, the customer is required to contact with our Customer Service Group with the E-mail: **support@proheartac.com**

The Wireless Headphone is developed to deliver super sound quality with Bluetooth 5.0 version.

The Active Noise Canceling technology reduces surrounding noise up to 20dB and let you enjoy pure music without distraction.

Contents

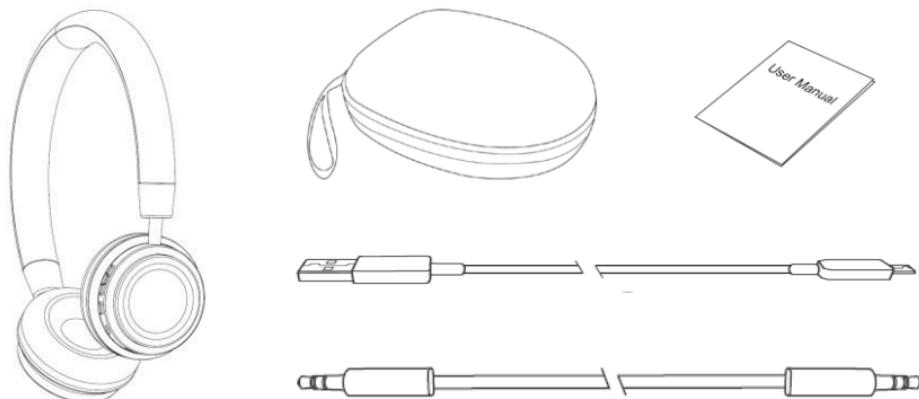

Package Contains: PROHEAR-010 Bluetooth Noise-canceling Headphone, 3.5mm Jack Connection Cable,

USB to Mirco Charging Cable, Storage Case, User Manual.

Bluetooth Parameters

Bluetooth Version	Bluetooth 5.0
Bluetooth Protocol	A2DP, AVRCP, HSP, HFP
Talk time	$\geq 8H$
Music time	$\geq 12H$
Operating Range	$\leq 10M$

Acoustic Parameters

Impedance	32Ω
Sensitivity	116db

Frequency Response Range	20~20KHz
Max Input Power	20 mW


Battery

When you use it for the first time, the PROHEAR-010 must be fully charged.

Connect PROHEAR-010 to your computer or power plug via the micro-USB cable. The indicator on the side of the right ear cup illuminates with a red light to show that the device is charging.

Once charging is completed, the indicator lights off (1).

Indicator/Power button

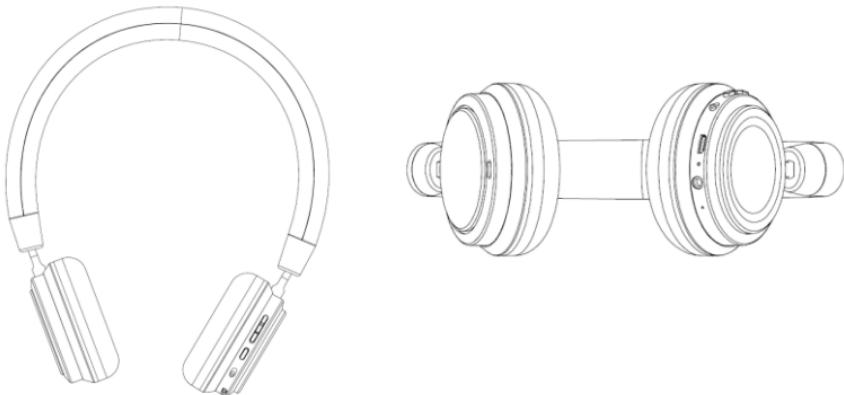

When the headphone runs out of battery, you can still use the PROHEAR-010 to enjoy music if your audio device is connected to the headset via the Jack to Jack cable.

Switching the PROHEAR-010 on/off

Press the power button (1) to switch the headphone on/off.



Wearing the headset

Adjust the headband without force to make sure the headphone comfortably fit your head and ears without pressure, then put the headset on, by the letters (L) and (R) to help you distinguish left and right.

Bluetooth Connection

Please pair the headphone with your audio device before using PROHEAR-010. Once the two devices get paired, there is no need to pair it next time.

1. Make sure the Bluetooth is visible on your device, search Bluetooth name “PROHEAR-010”.
2. Select “PROHEAR-010” to pair the headphone with your device.

Once your mobile phone is paired with the PROHEAR-010, the two devices will connect to each other automatically each time once the PROHEAR-010 is switched on. It is not possible to simultaneously connect several devices to PROHEAR-010.

Noise Canceling

1. Press the ANC Button ON, the Noise Canceling Indicator is green.
2. After turn the noise canceling on, you may hear a slight hissing noise, this is normal, and it will disappear after several seconds.
3. When using noise canceling feature, if the battery runs out, the green indicator is off, if you want to continue using noise canceling feature, you need to charge the headphone. Or use wired connection to continue using the headphone.

Play Music

1. Press the power Button to play music, and press it again to pause.
2. Press the “+” for Volume up and “-” for volume down. Long Press “+” for next song, long press “-” for previous song

Call Functions

Call Answer: Press the Power button to answer calling, press the Power button 2s to reject calling, double press the Power button for re-dialing the last calling.

Volume/Using during a call

To increase the volume, press “+” to adjust the volume up.

To decrease the volume, press “-” to adjust the volume down.

Next/Previous

If your audio player is connected to the PROHEAR-010 via Bluetooth:

To return to the previous track, press “-” button.

To move to the next track, press “+” button.

Pause/Play

Press the power button to pause and play music.

Telephone

Press the power button to answer the phone call.

Press the power button again to end the phone call.

Press the power button twice to call the last number in your phone call records.

Long press the power button 2s to reject phone call.

Warning

- Listening to music at high volumes for long periods can lead to hearing problems. We do not recommend using these headphones at maximum volume, particularly for long periods of time.

- To protect your hearing, turn down the volume of your music player before connecting your headphones. After putting on the headphones, gradually turn up the volume until you reach a suitable level. Sound levels are measured in decibels (dB). Exposure to sound 85 dB or above may result in gradual loss of hearing. Monitor your use. Hearing loss depends on the intensity of the sound and the duration. The higher the volume, the less your exposure capacity will last. The lower the volume, the longer your exposure period can be.
- Be responsible: pay attention to your environment (acoustic) when you are wearing your headphones and listening to music or the radio.
- Avoid hazardous behavior that may cause an accident for you or somebody else (pedestrians, motorcyclists, drivers, cyclists) or cause damage to property when you are wearing your headphones.
- PROHEAR would like to inform you that the use of stereo headphones is strictly forbidden when driving a motor vehicle. PROHEAR also recommends not listening to music or the radio through your headphones when riding a bicycle, a scooter or any other means of transport for which it is not compulsory to wear a helmet. PROHEAR can not accept any responsibility if you choose to ignore these warnings.

PROHEAR-010 FCC Statement BT Note

FCC ID: 2AYWU-010

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) this device may not cause harmful interference, and
(2) this device must accept any interference received, including interference that may cause undesired operation.

RoHS CE FCC  