

USER MANUAL

Product Name: Mini Subwoofer

Material: ABS

Product Size: 92 x 44 x 62mm


Wireless range: 1-5m

Speaker parameter: 40MM 4OHM3W

Battery Type: 502030 Li-ion 200mah Rechargeable

Charger: micro USB cable (included)

Support: wireless only

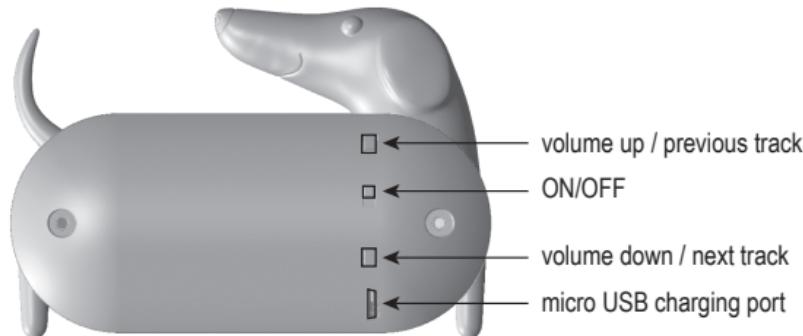

How to Pair:

1. Press the ON/OFF switch up to power on your Mini Subwoofer.

You should hear a "power on" notification. If you do not hear the notification your Mini Subwoofer needs to be charged.

2. Turn on the wireless feature on your wireless capable device.

3. Look for "MINI SUBWOOFER" and select it.

Notes:

To adjust the volume, press and hold the buttons indicated.

Turn power switch off when not in use to preserve battery life.

Your Mini Subwoofer's head can be rotated 360 degrees to your desired position.

Charging:

Connect the micro USB end to the port on the back of the Mini Subwoofer and the other end to a USB port of a powered on computer or 5V / 1A plug.

A full charge is reached in about 30-40minutes and yields about 1.5 hours of playback.

FCC Statement

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference.
- (2) This device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates uses and can radiate radio frequency energy and if not installed and used in accordance with the instructions may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception which can be determined by turning the equipment off and on the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

IC Statement

This device contains license-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's license-exempt RSS(s). Operation is subject to the following two conditions:

- (1) This device may not cause interference.
- (2) This device must accept any interference, including interference that may cause undesired operation of the device.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes : (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

CAN ICES-3(B)/NMB-3(B)

Mini Subwoofer | 9780762473281
Running Press Book Publishers
1290 Avenue of the Americas, New York, NY 10104