



HOW TO EXTEND/RETRACT THE LEGS

Each leg face displays three buttons that can be pressed to unlock the current position and either extend or retract the leg. The current position will define which button must be pressed to move to the next position. There are three possible positions for each leg.

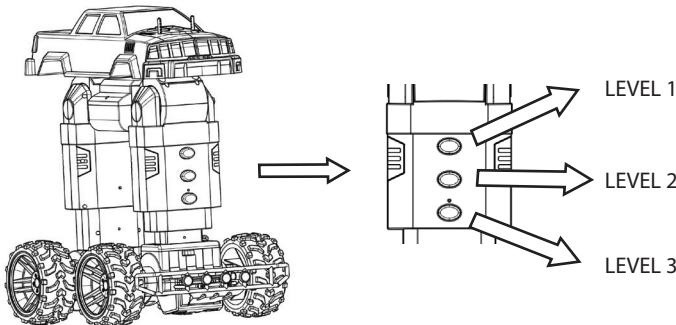


When the truck legs are fully retracted, the LEVEL 1 button must be pressed and while being pressed, use your other hand to extend the first level until you hear a click sound. You can now release the button. To extend the next level, you need to press the LEVEL 2 button and perform the same operation. Once the leg is fully extended, the reverse operation can be performed, first starting with LEVEL 3 to retract to the middle level and then by pressing LEVEL 2 to come back to fully retracted mode.

The positions below are just a few examples of what is possible with your LUMITEK RC™ TERROR TOWER. Try every possible combination to have more fun with your monster truck and even share on social media to impress your friends!

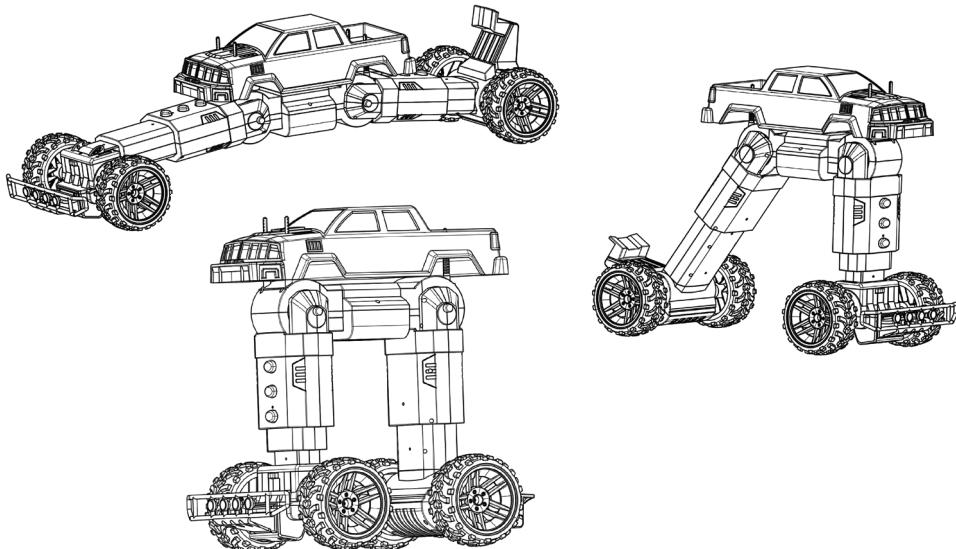

HOW TO CORRECT WHEEL ALIGNEMENT

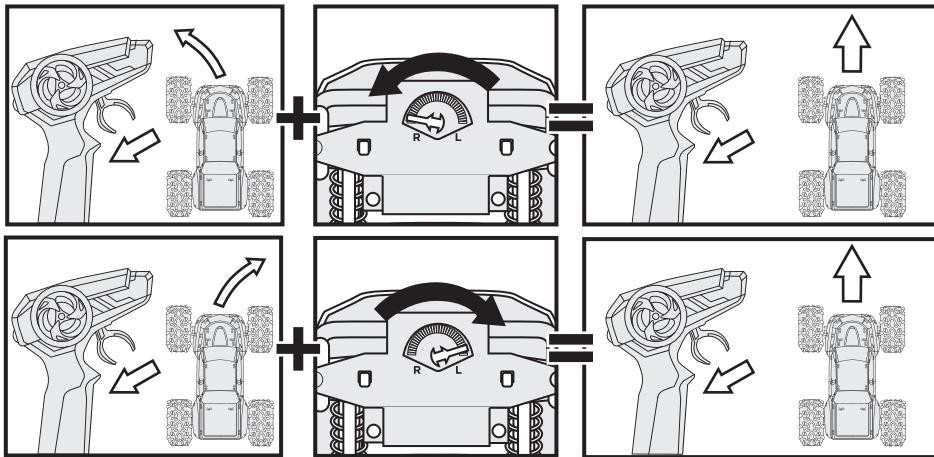

Under your LUMITEK RC™ TERROR TOWER is located a pin that you can turn in order to adjust the wheel alignment if you find out that your truck does not drive straight when not turning the wheel. Check the diagrams above to find out how to adjust on the right or on the left.

HOW TO MAINTAIN YOUR RC CAR



It is important to take care of your LUMITEK RC™ TERROR TOWER. Although it generally requires low maintenance, a few recommendations can be followed to keep using your truck for a long time. Please check each illustration above to better understand what to and what not to do with your RC truck.

TROUBLE-SHOOTING GUIDE

PROBLEM	ACTION
Vehicle does not run	Make sure battery pack in the car is fully charged and the controller has new batteries and installed following proper (+) & (-) battery placement.
	Make sure you followed instructions in section "HOW TO CONNECT THE CONTROLLER" in order to pair correctly the vehicle and the remote controller.
	Avoid high-frequency interference occurring near to high-voltage lines, transformers and some types of building.
	Make sure that no part is damaged. If any, please contact us at customerservice@wecooltoys.com
Battery does not charge	Make sure you followed instructions in section "HOW TO CHARGE". If still not working, please contact us at customerservice@wecooltoys.com
Vehicle runs intermittently	Replace batteries in the joystick remote control and charge the car's battery pack. Weak batteries will severely limit the normal transmitting range of your controller.
The light piping does not work	Make sure battery pack in the car is fully charged and the controller has new batteries and installed following proper (+) & (-) battery placement.
	Disconnect the current light piping and replace it with the extra one. In case it still does not work, please contact us at customerservice@wecooltoys.com
Vehicle does not run straight	Correct the wheel alignment by following instructions in section "HOW TO CORRECT WHEEL ALIGNMENT".

If you encounter none of the issue above and the vehicle is still not working, please contact us at customerservice@wecooltoys.com

LIMITED 30 DAY WARRANTY

CAUTION: Changes or modifications to this product not expressly approved by the party responsible for compliance may void the user's authority to operate the equipment.

WeCool Toys Inc. warrants to the original consumer purchaser, that this product is thoroughly tested and inspected before shipment and is guaranteed to be free of factory defects in materials and workmanship for thirty (30) days, unless specified in alternate warranties, from the date of purchase. In the event of such a defect within the warranty period, WeCool Toys., at our sole option, will repair or replace the product or provide you with another product of equal value. The warranty is valid if and only if the product has been operated in accordance with the instructions. This warranty does not cover worn or defective batteries, damage resulting from neglect, unauthorized modification, accident, misuse, abuse, any action or omission which constitutes a deviation from the instructions or from the use of accessories or parts not manufactured by WeCool Toys Inc. If the product is returned without a dated sales receipt the product is excluded from coverage under this warranty. WeCool Toys Inc's liability for defects in material and workmanship under this warranty shall be limited to repair or replacement, at our sole option, and in no event shall we be responsible for accidental, consequential, or contingent damages, except in those states that do not allow this exclusion or limitation, or refunds. This warranty is exclusive, and is made in lieu of any express or implied warranty. This warranty is valid only for products sold in the U.S.A. WeCool Toys Inc.. reserves the right to improve the design of any product without assuming any obligation to modify any product previously manufactured. If you have a problem, please contact our Customer Care Center.